

2-17

2-20, 2-21, 2-22, 2-23, 2-24

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
Низ / Bottom / Alapuoli

 
 
 
 


 
 
RU Инструкция по сборке

 
 
EN Assembly instruction

FI Koontaohje

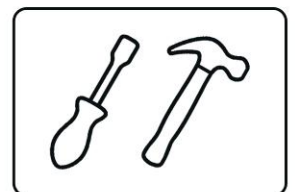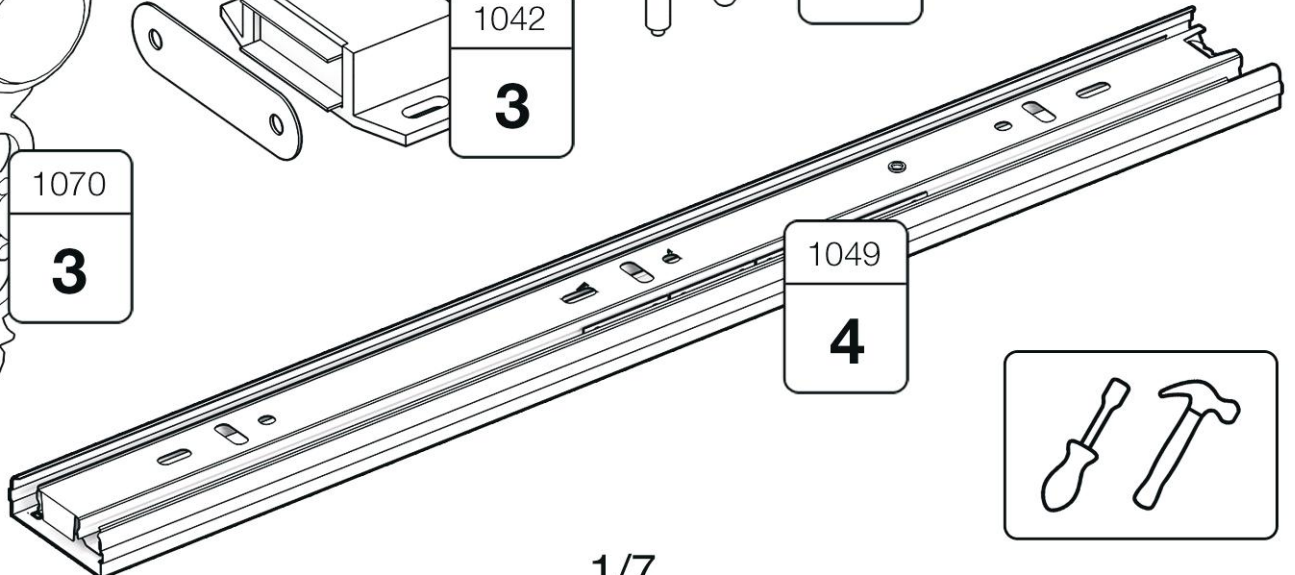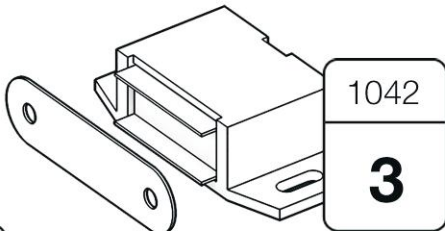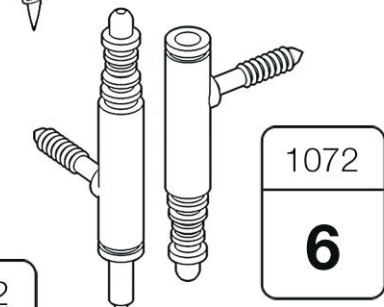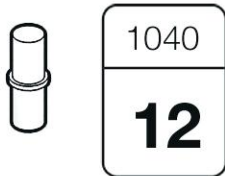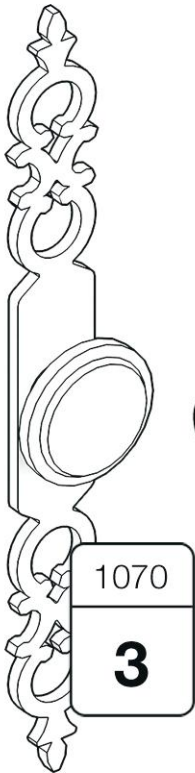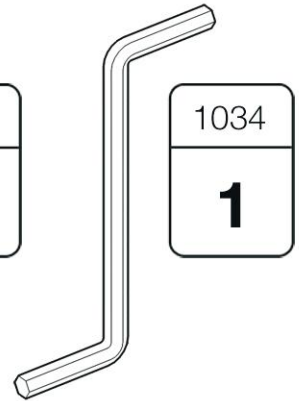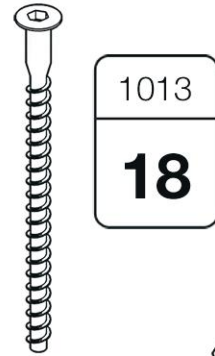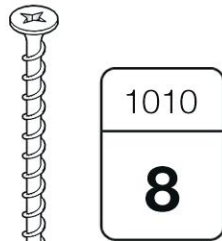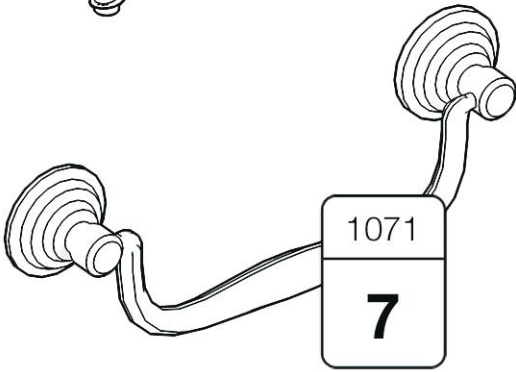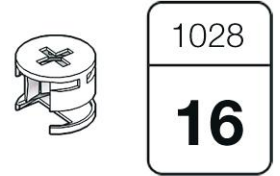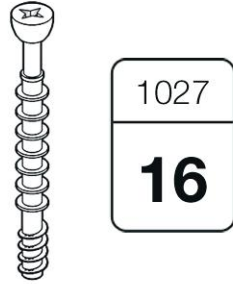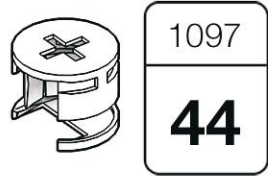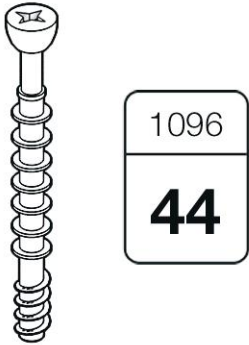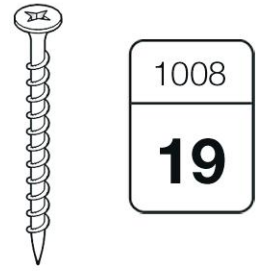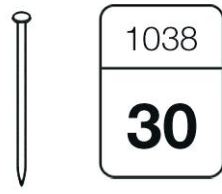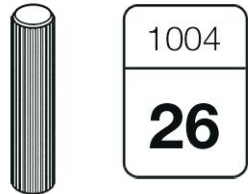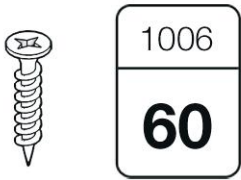

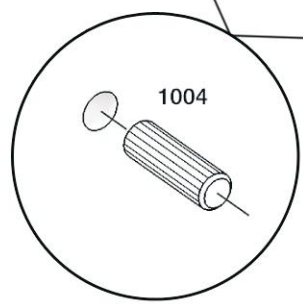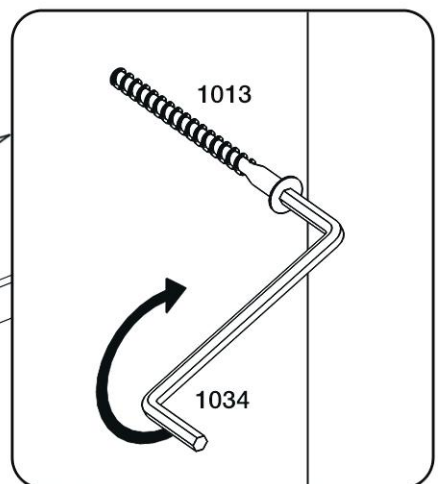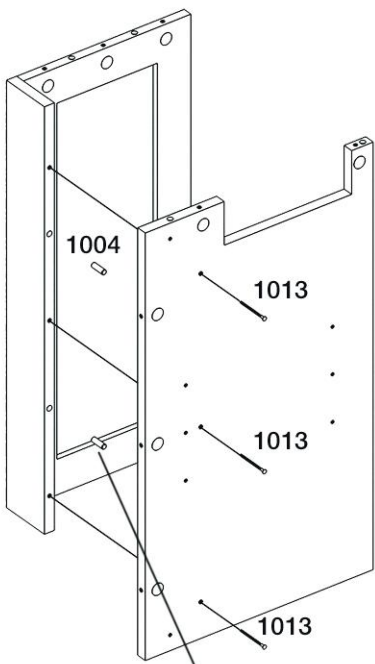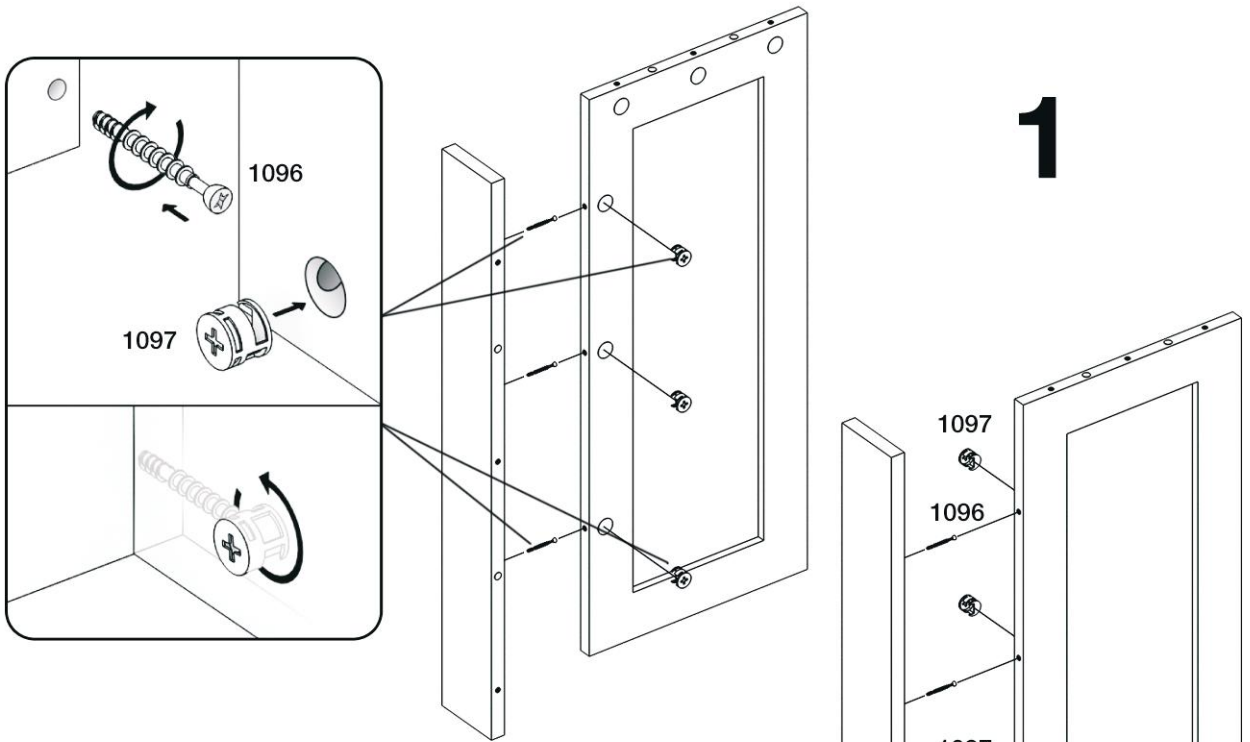


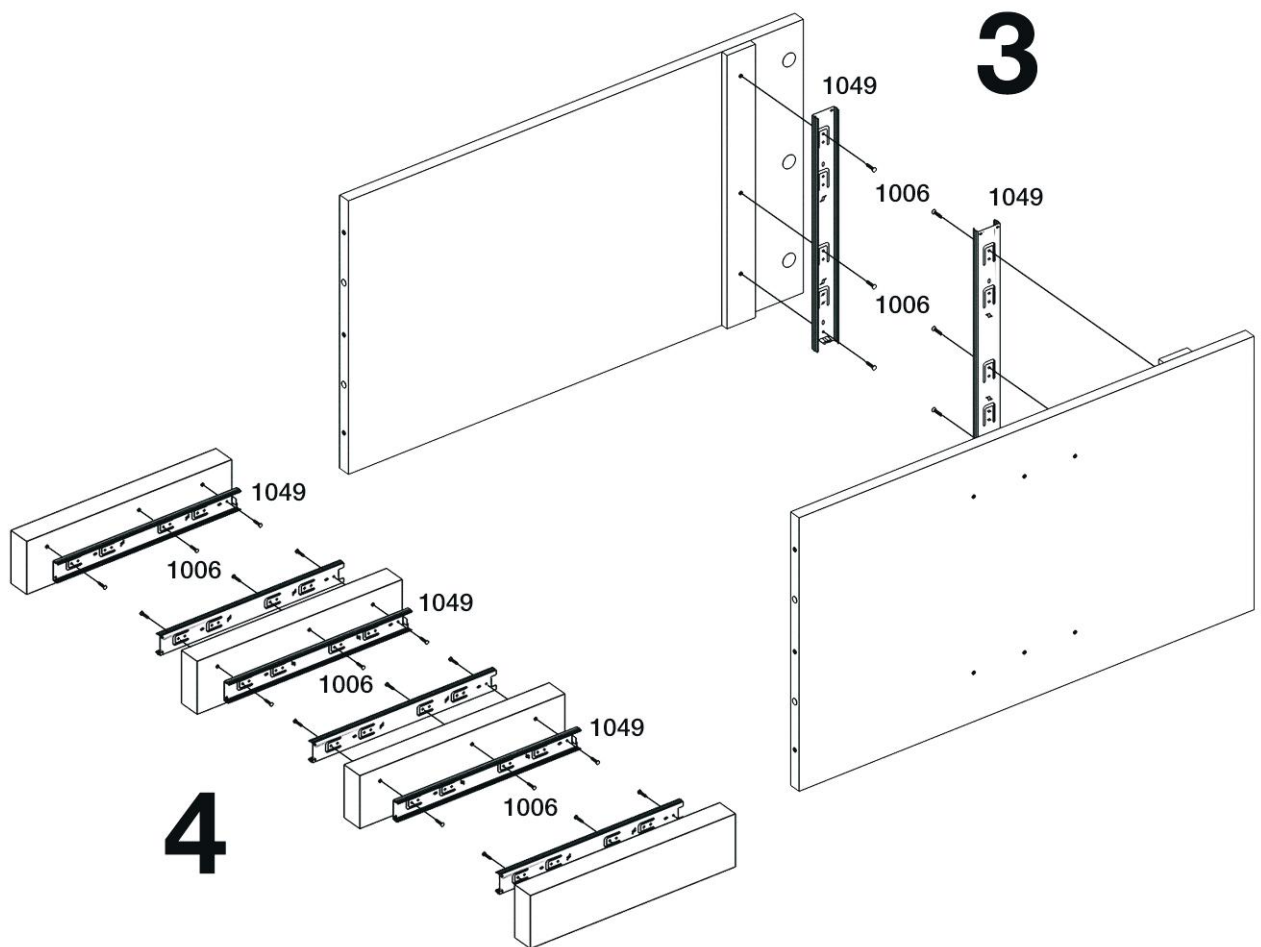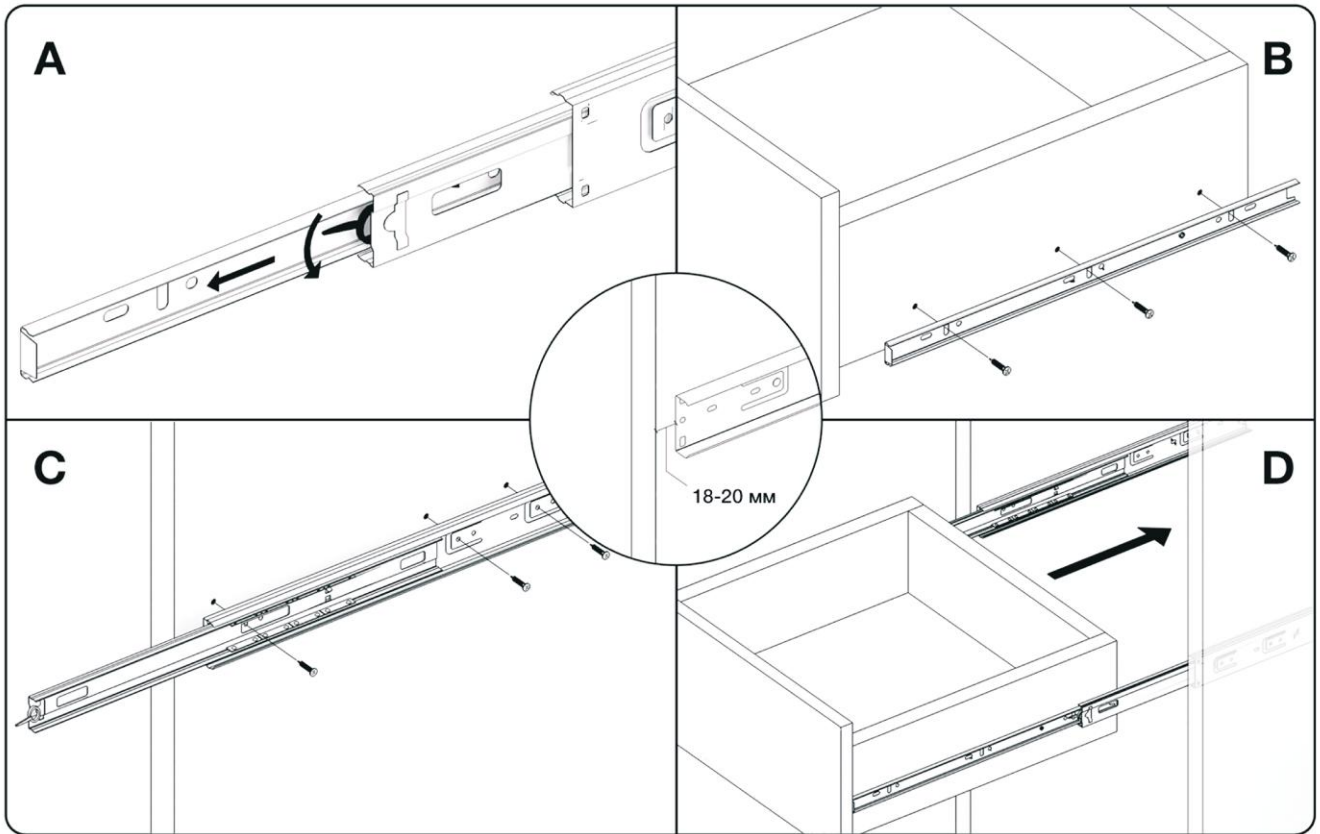

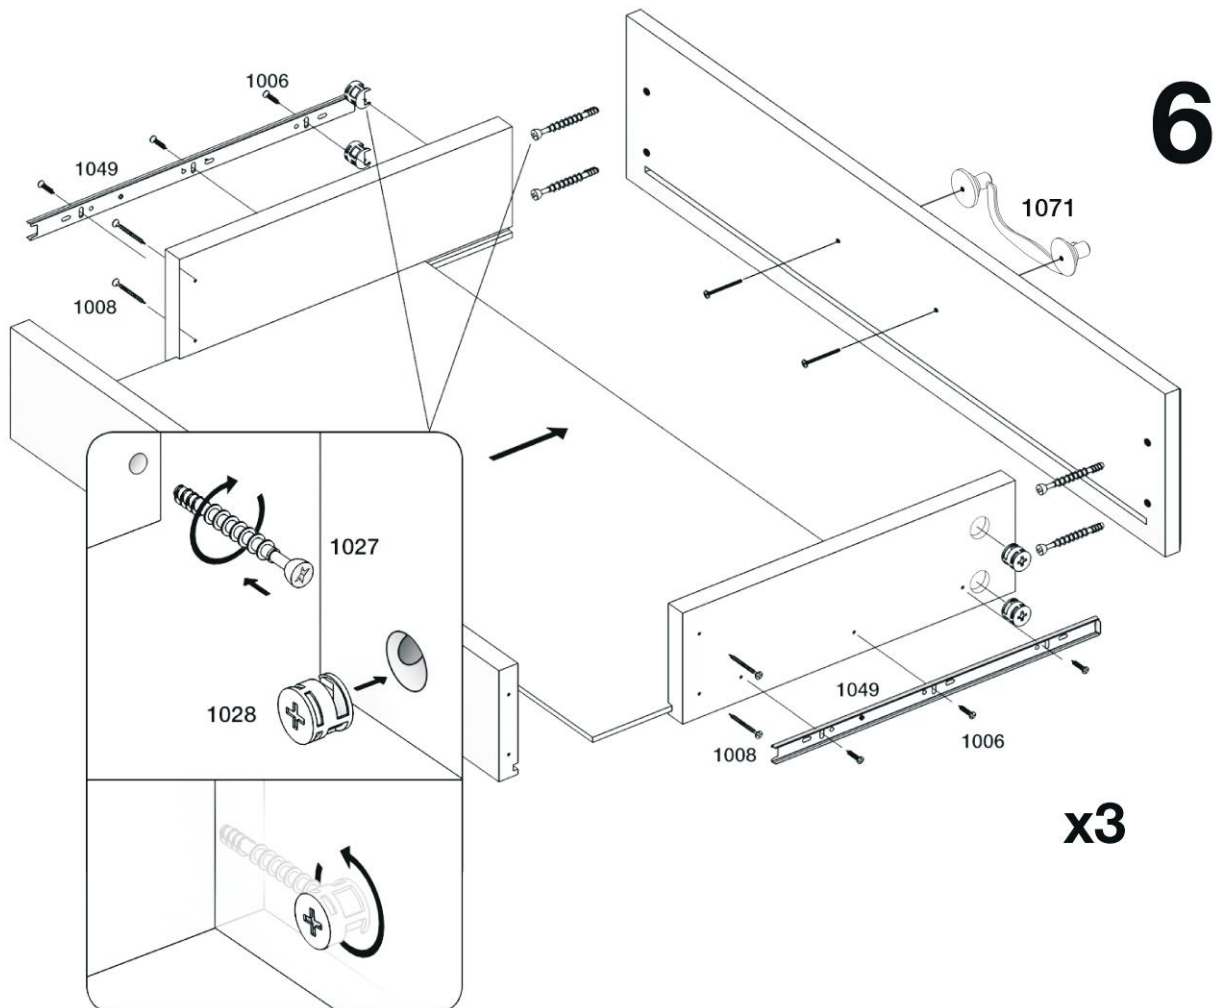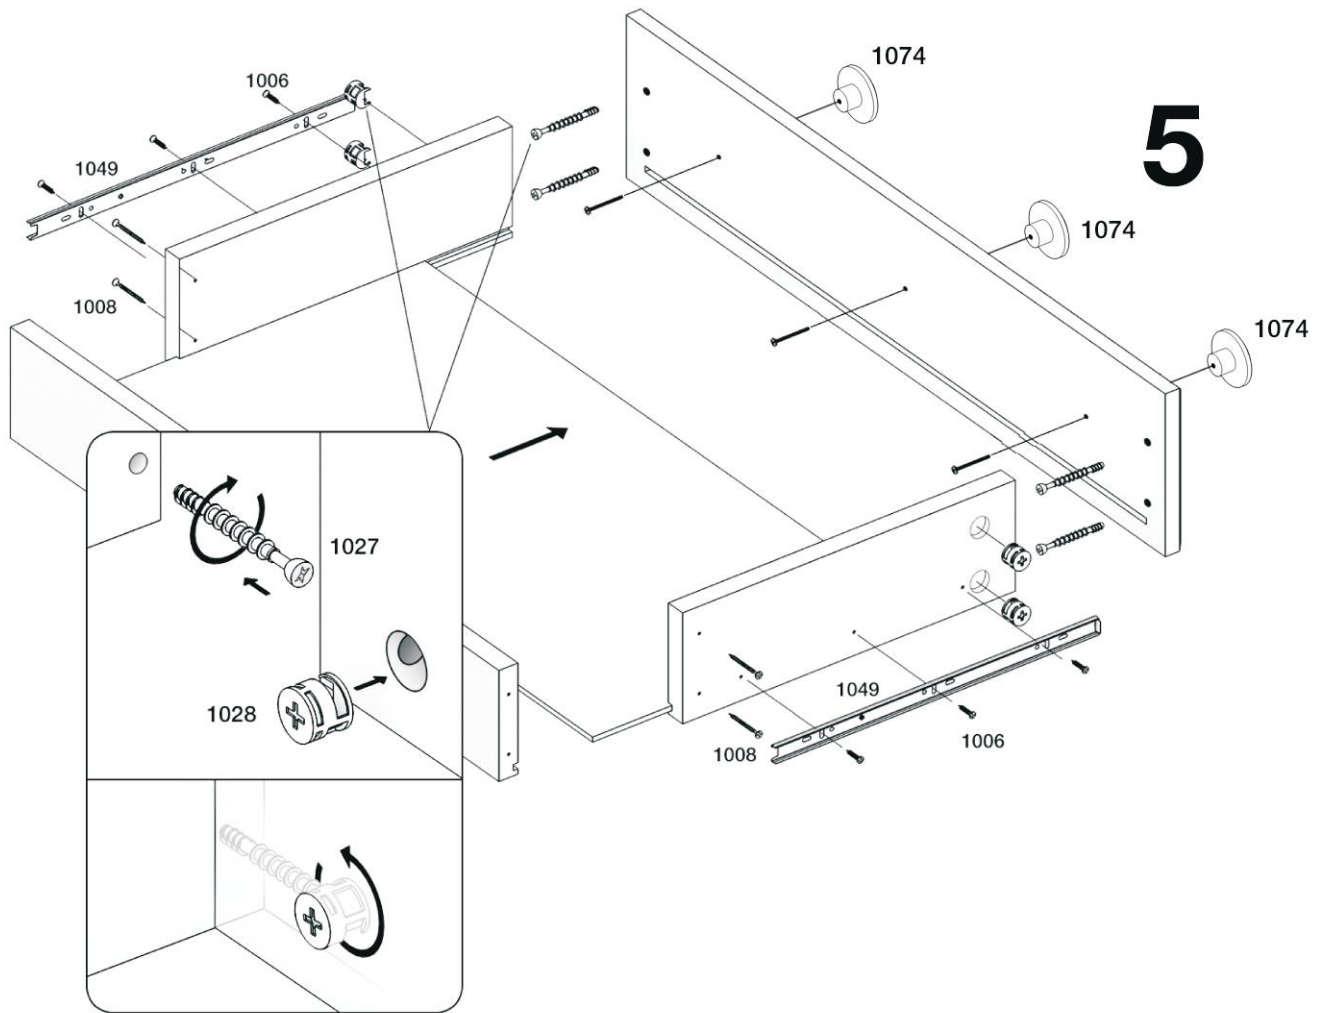


x3


 
7

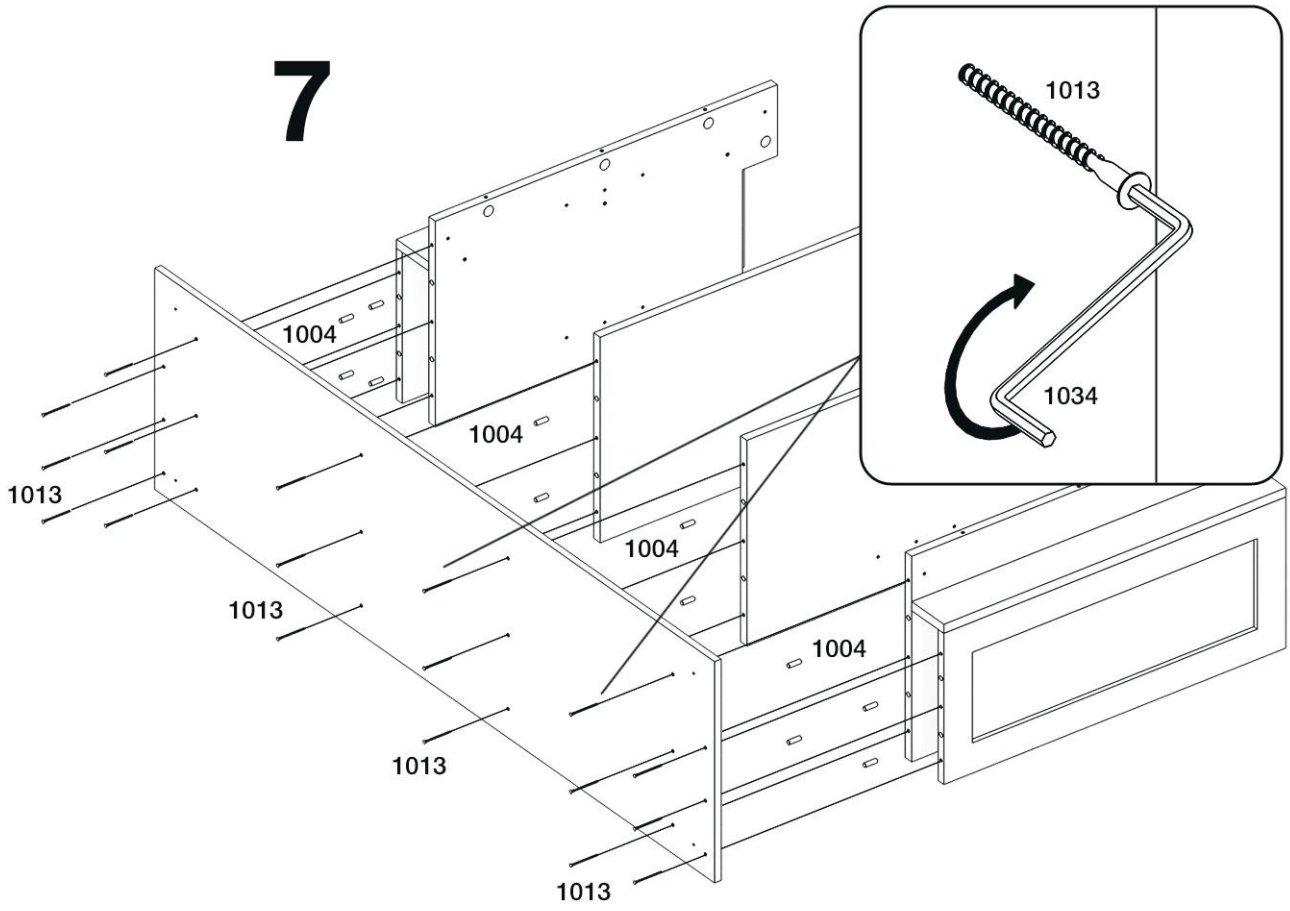


8

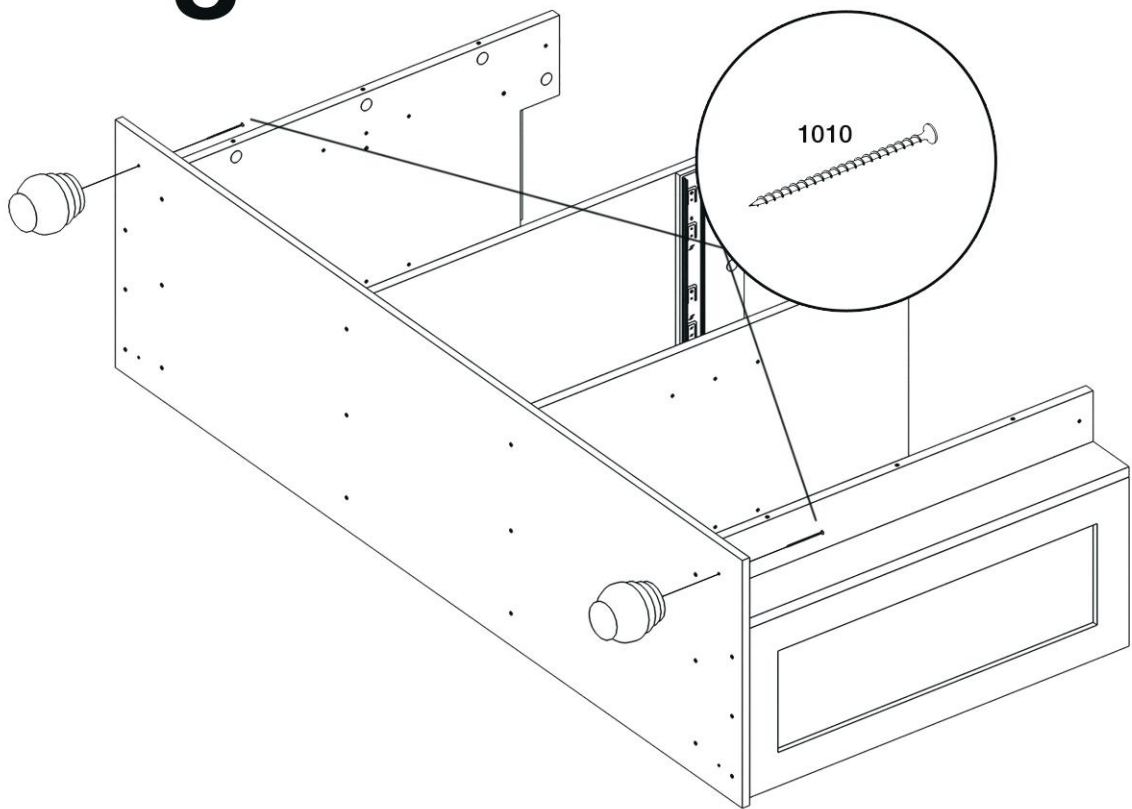 



9

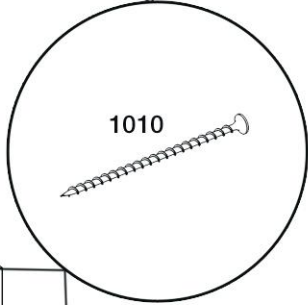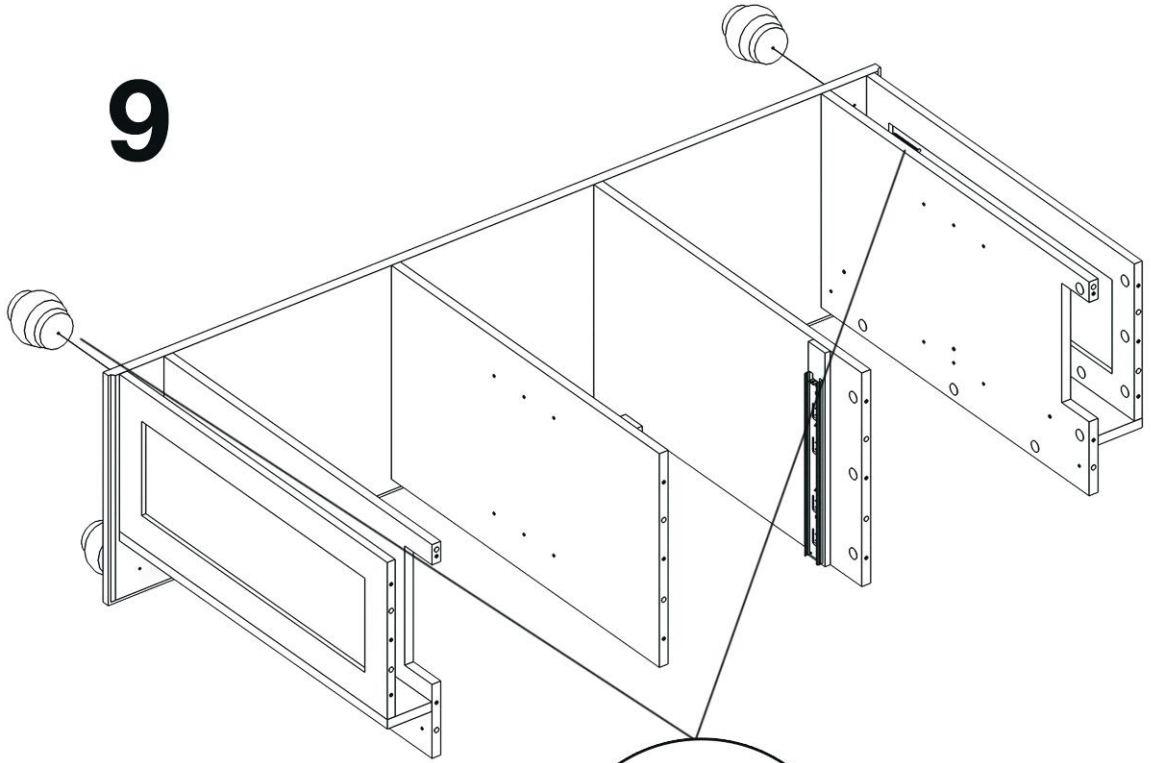  


10


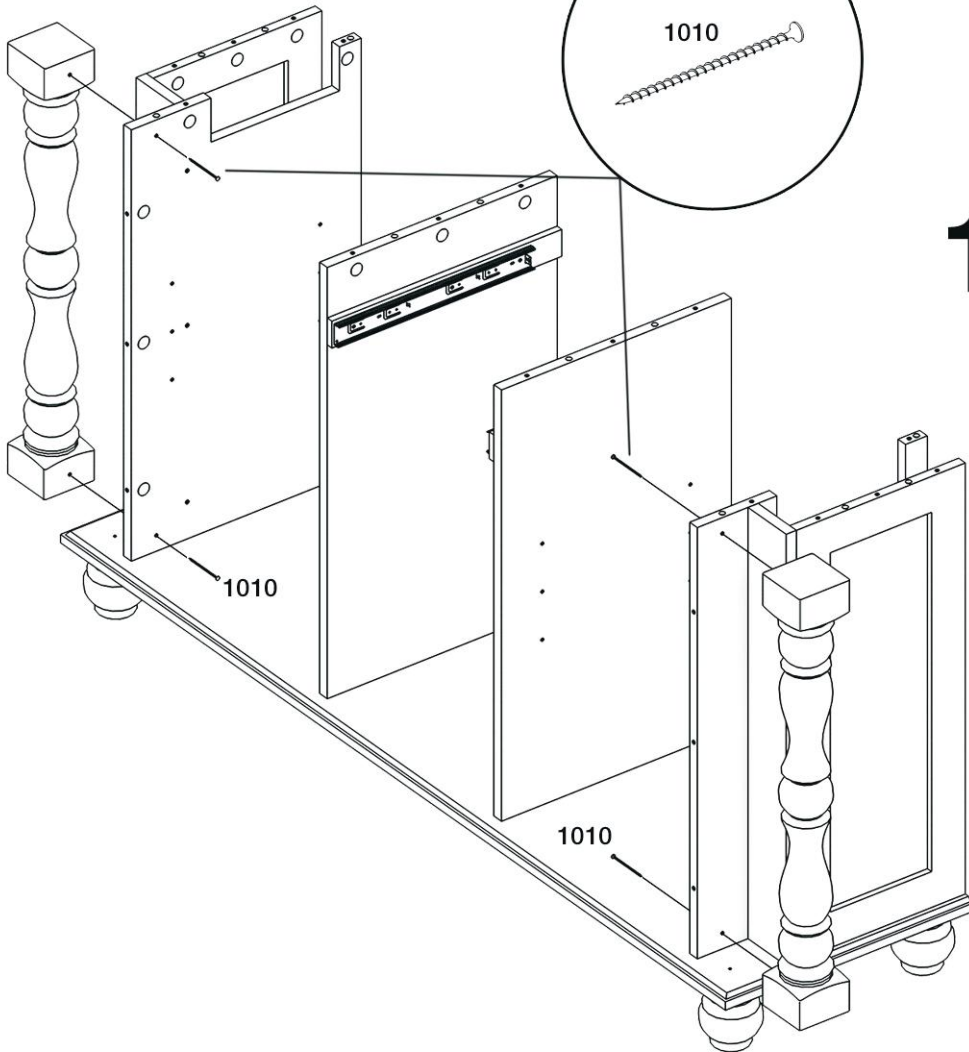 


11

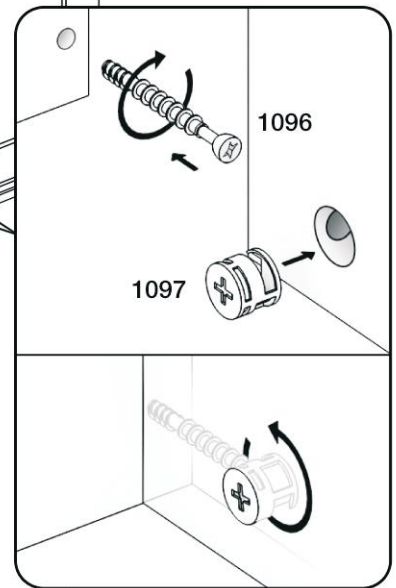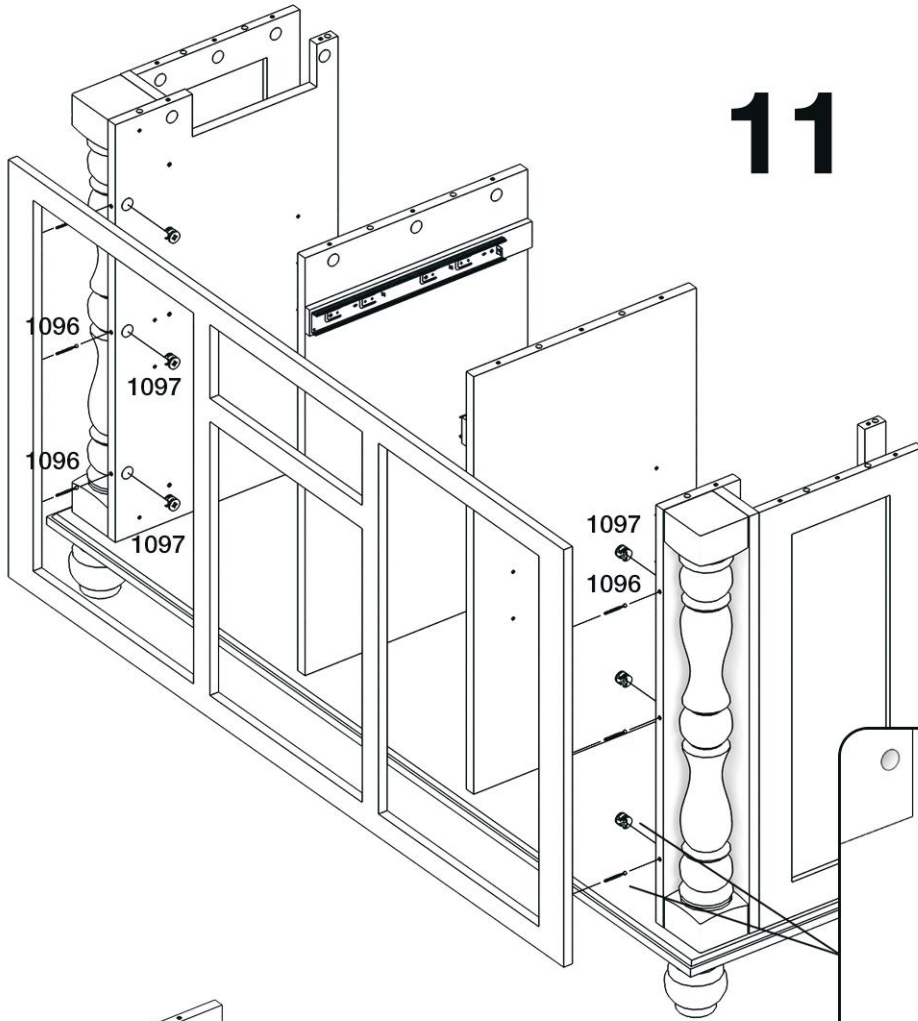  


12


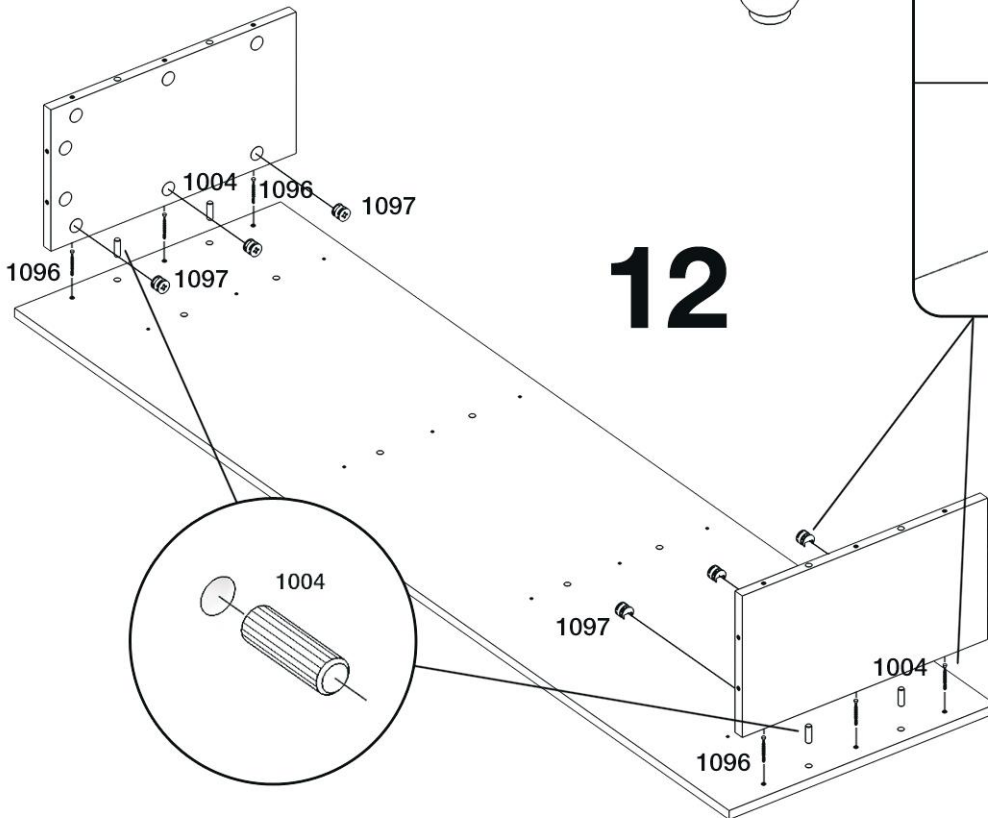 


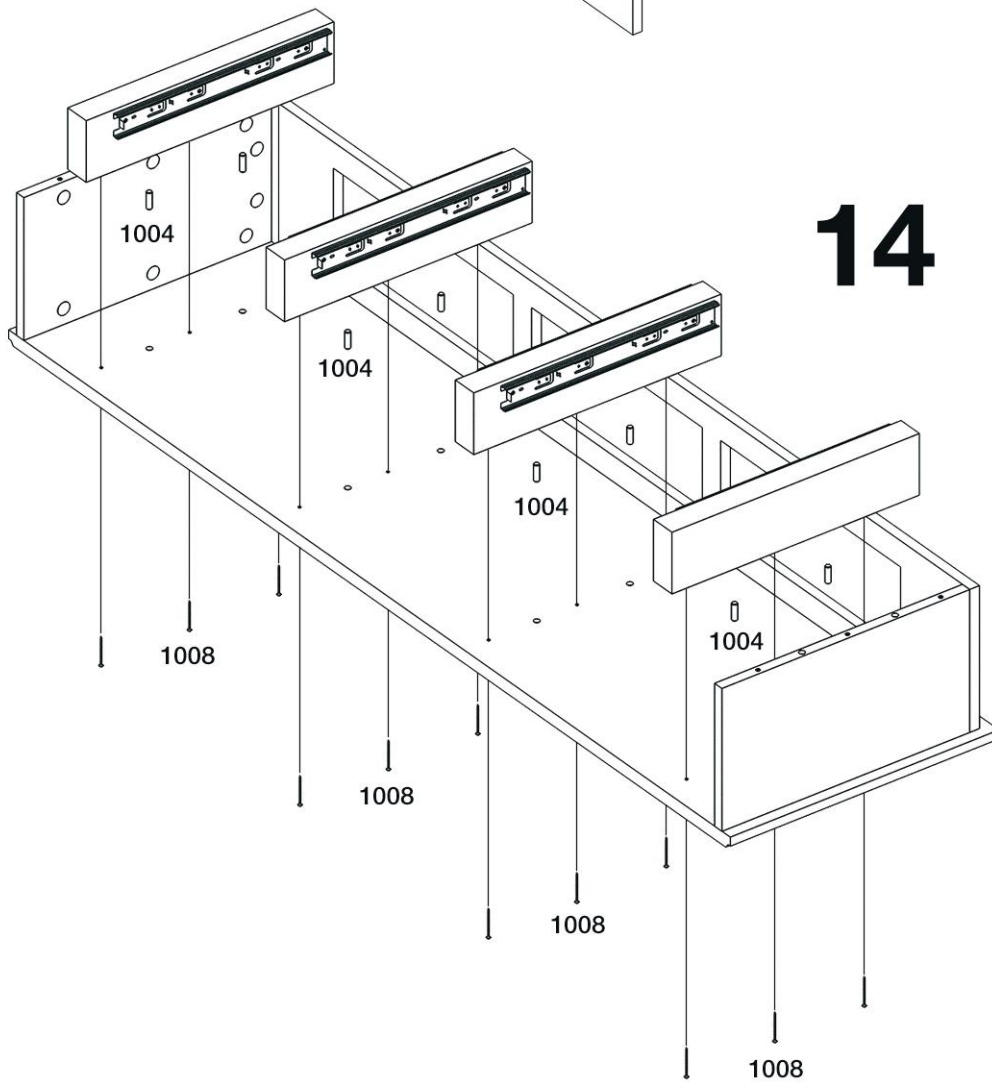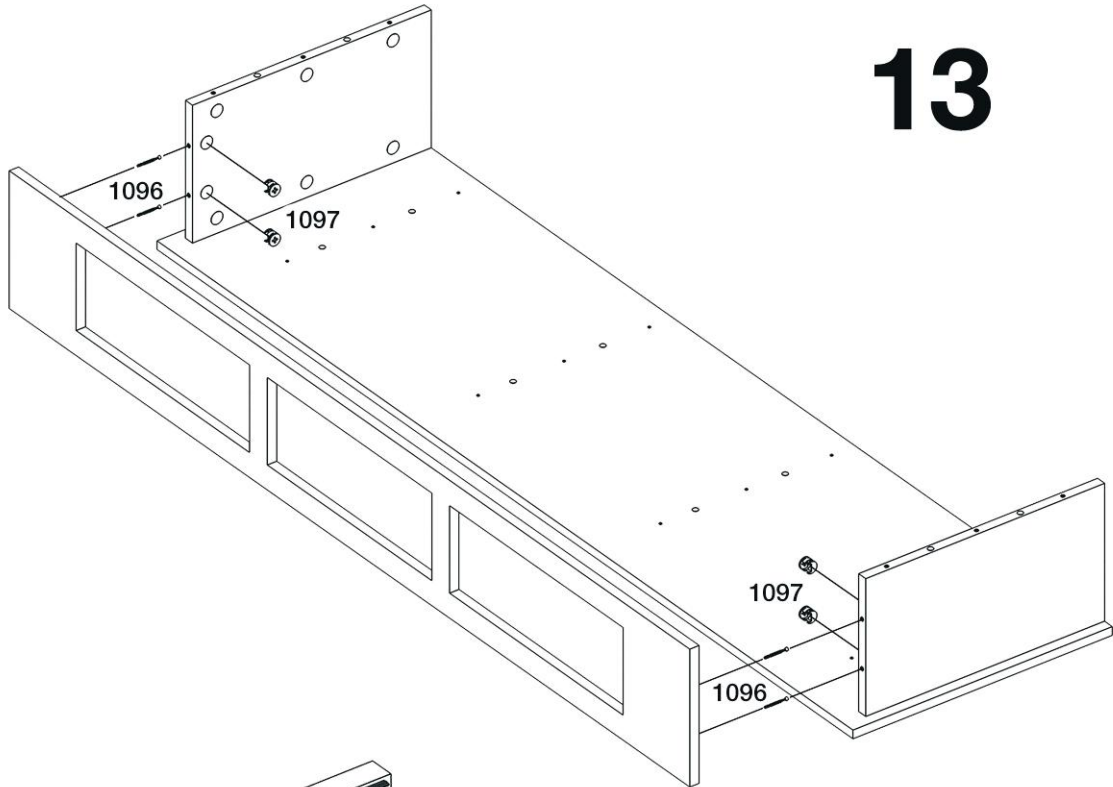  

15

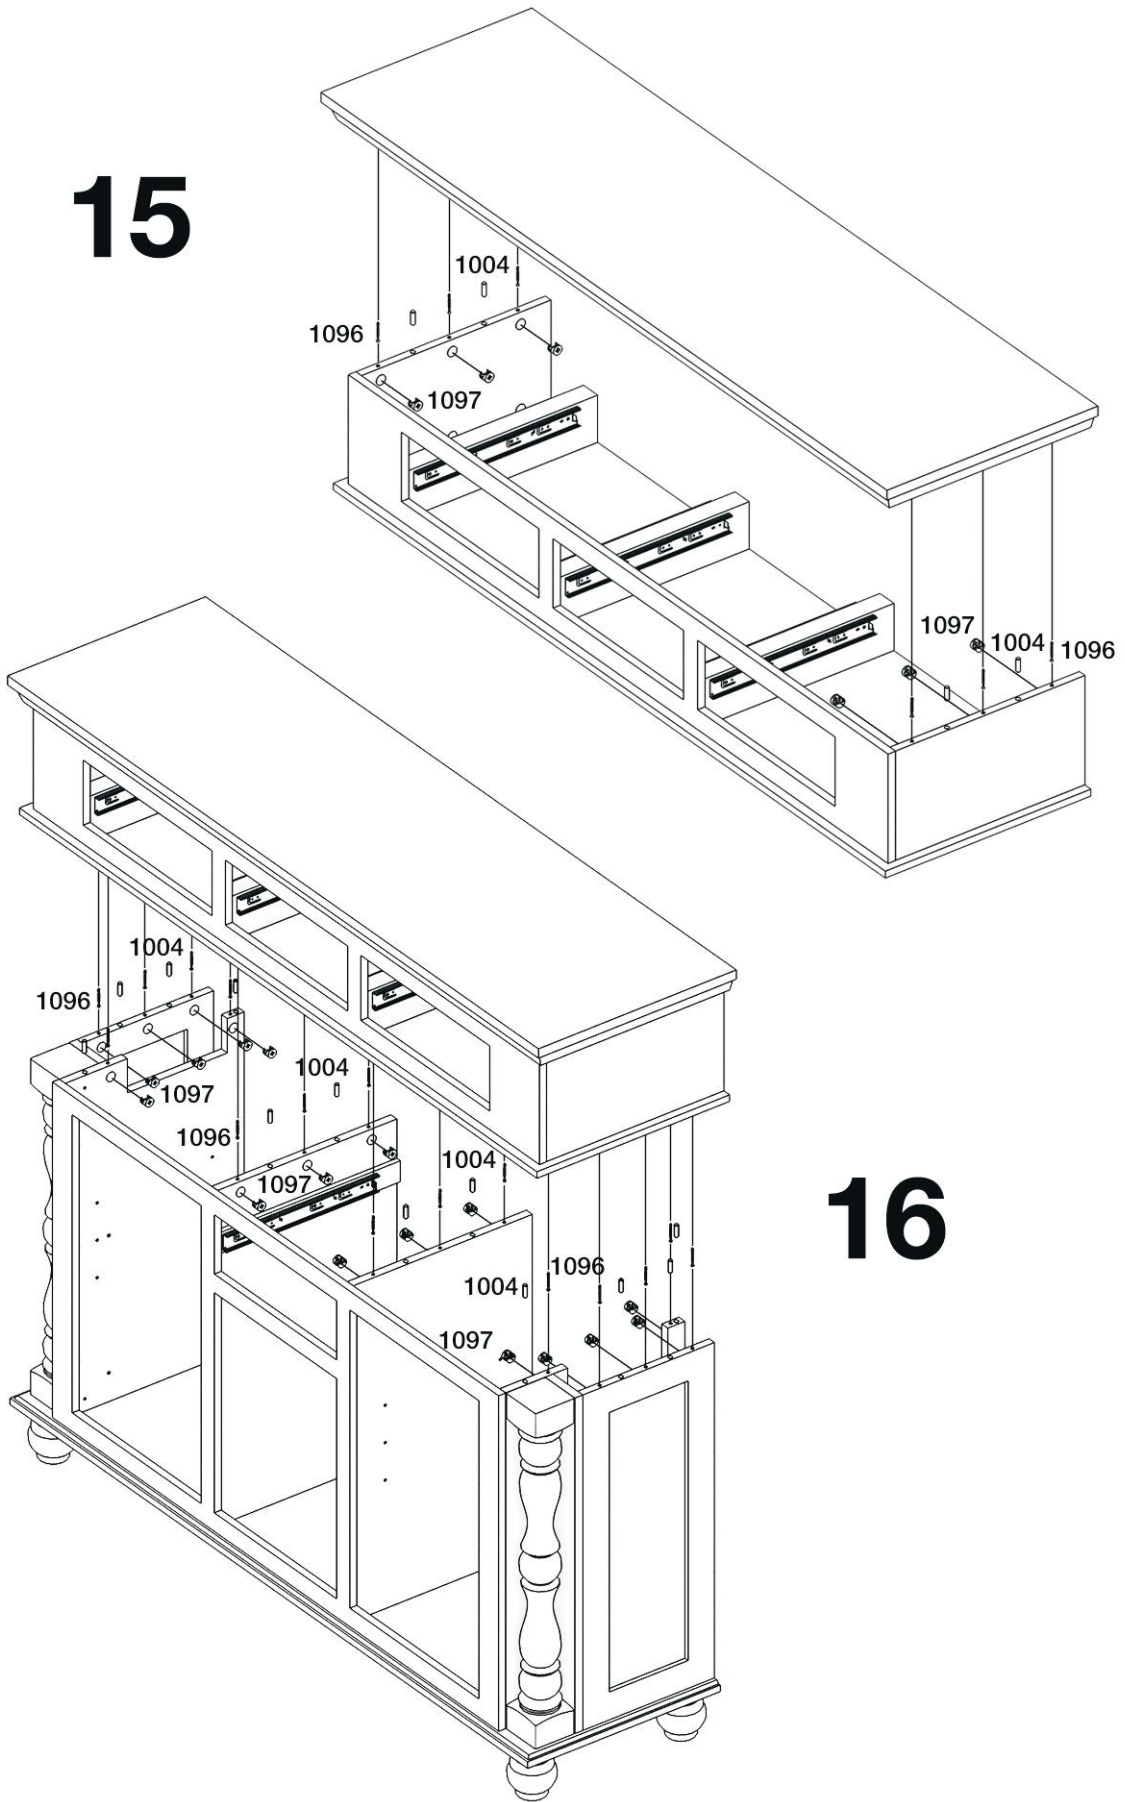 

16

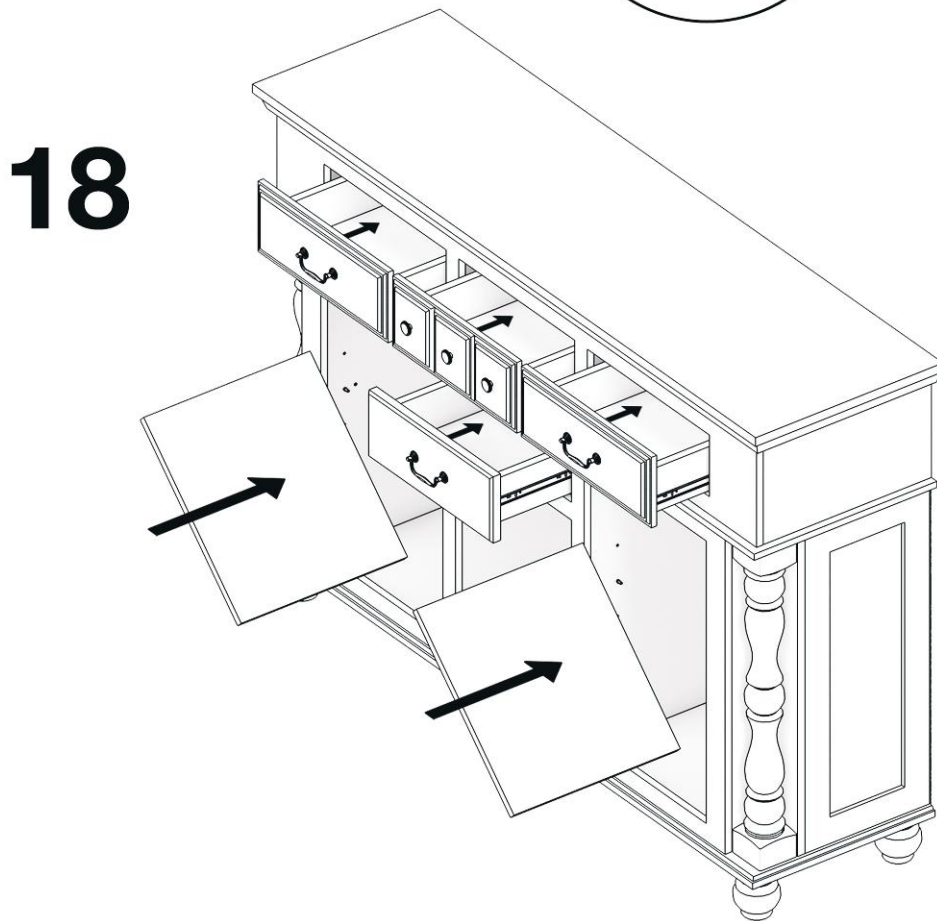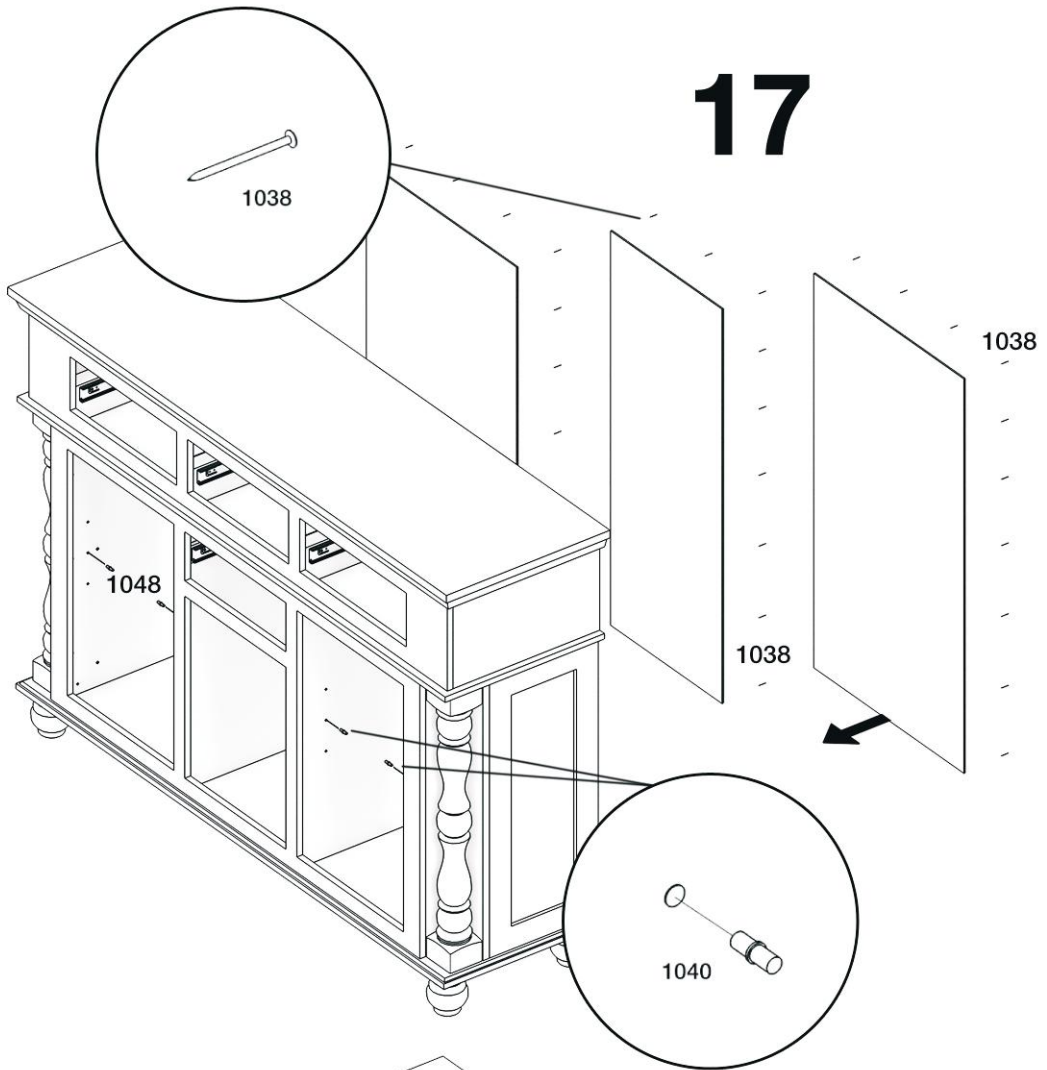  

19

