 


1-29, 1-30, 2-6
2-32, 2-33, 2-58
2-59, 2-60, 2-61
2-62

Берх / Top / Yläpuoli

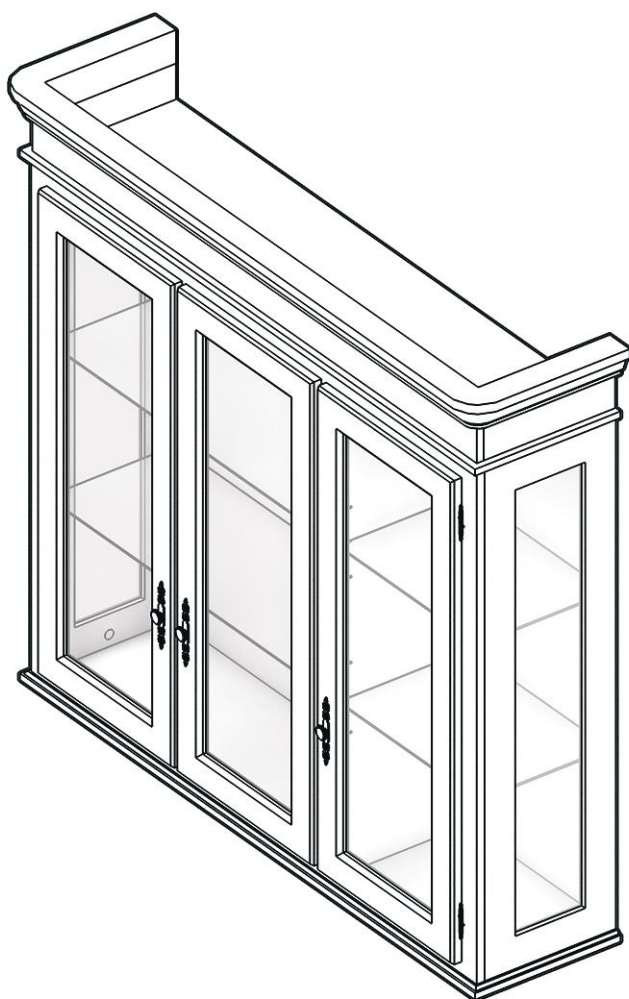

1-58, 1-59, 1-60
2-63, 2-64, 2-19
2-22

Берх / Top / Yläpuoli

 **TIMBERICA**

RU Инструкция по сборке
EN Assembly instruction
FI Koontaohje



1038
80



 
1004
12



1097
26




1096
26

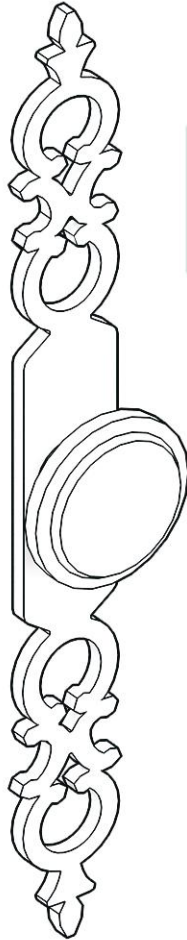


1070
3



 1100
16

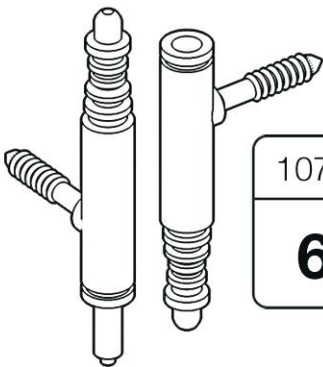


1072
6

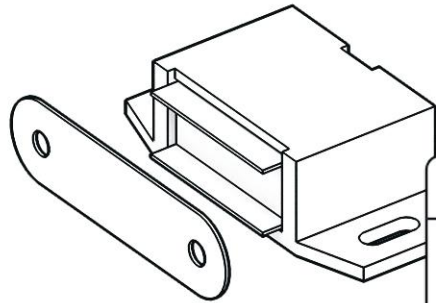 


1042
3



 
1036
2

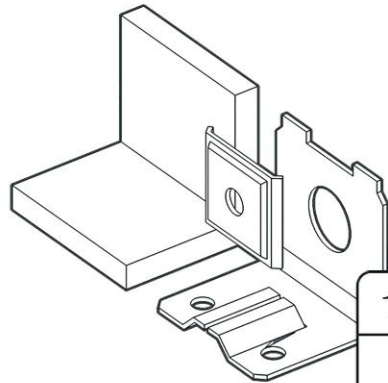


1099
2

 


1006
28

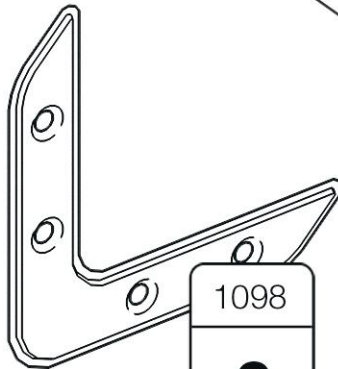 


1098
2

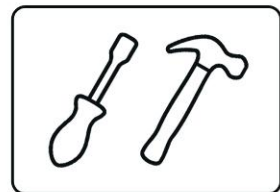 



1

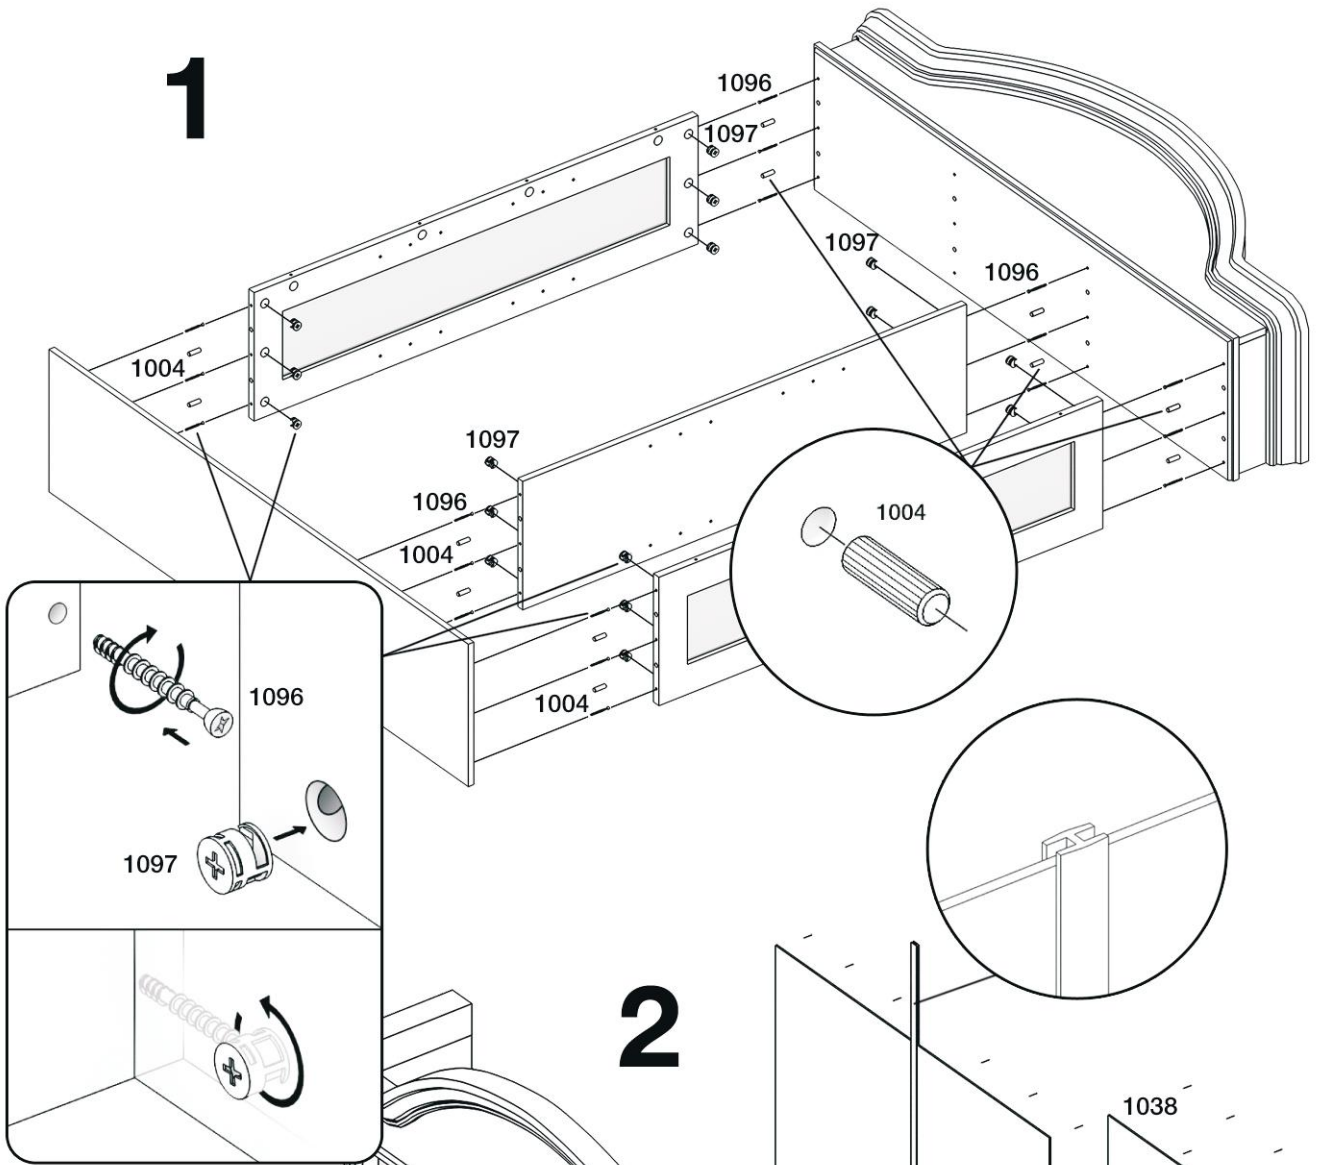 


2

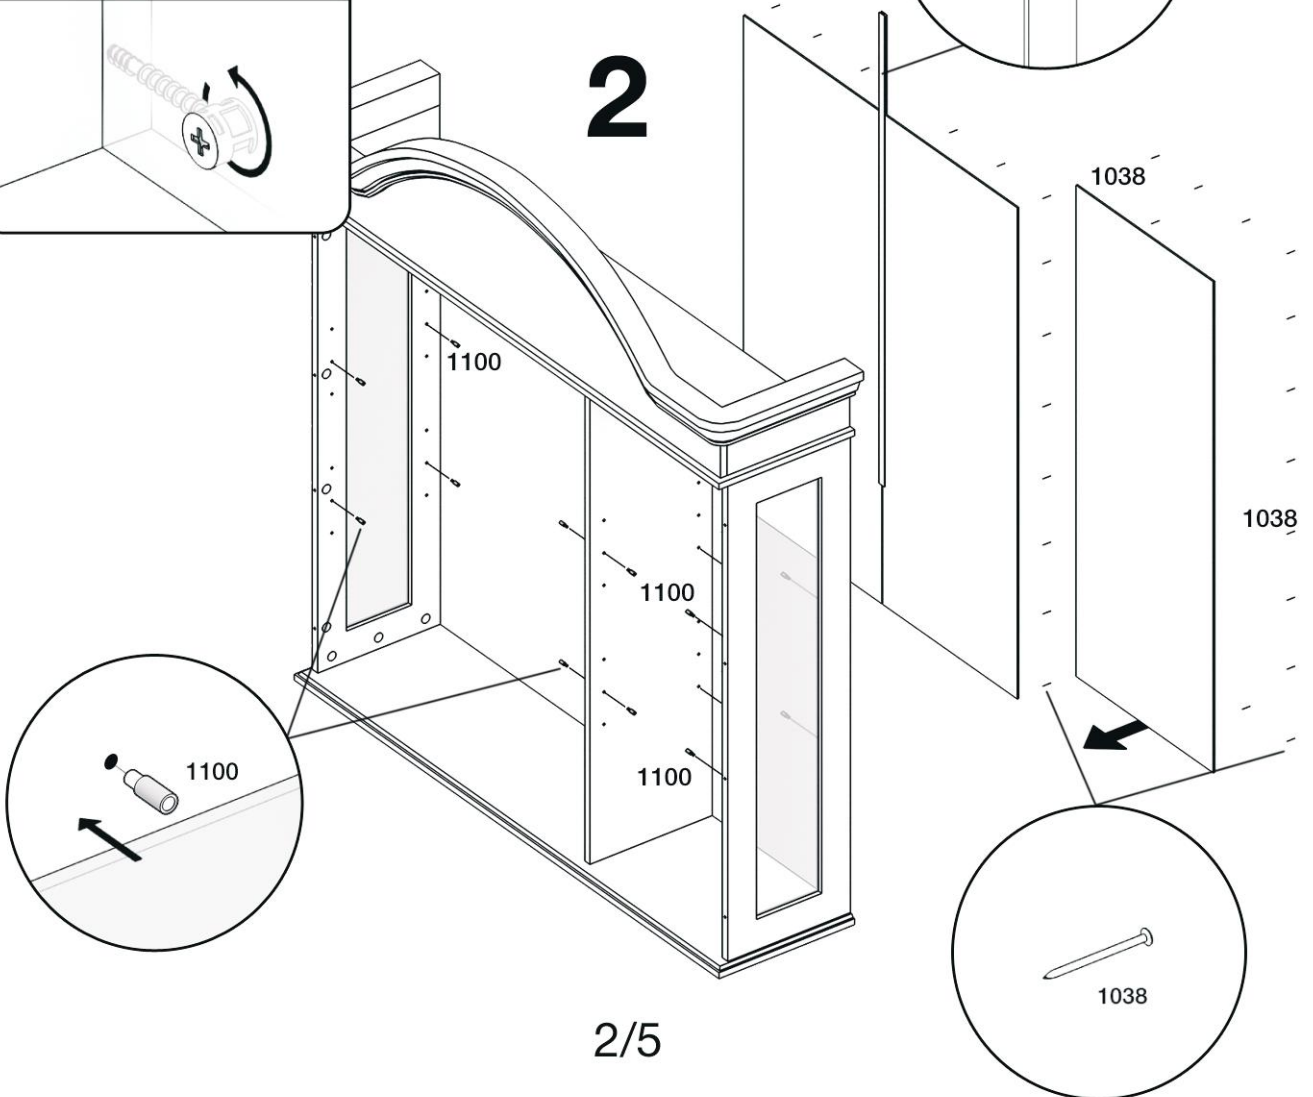 


3

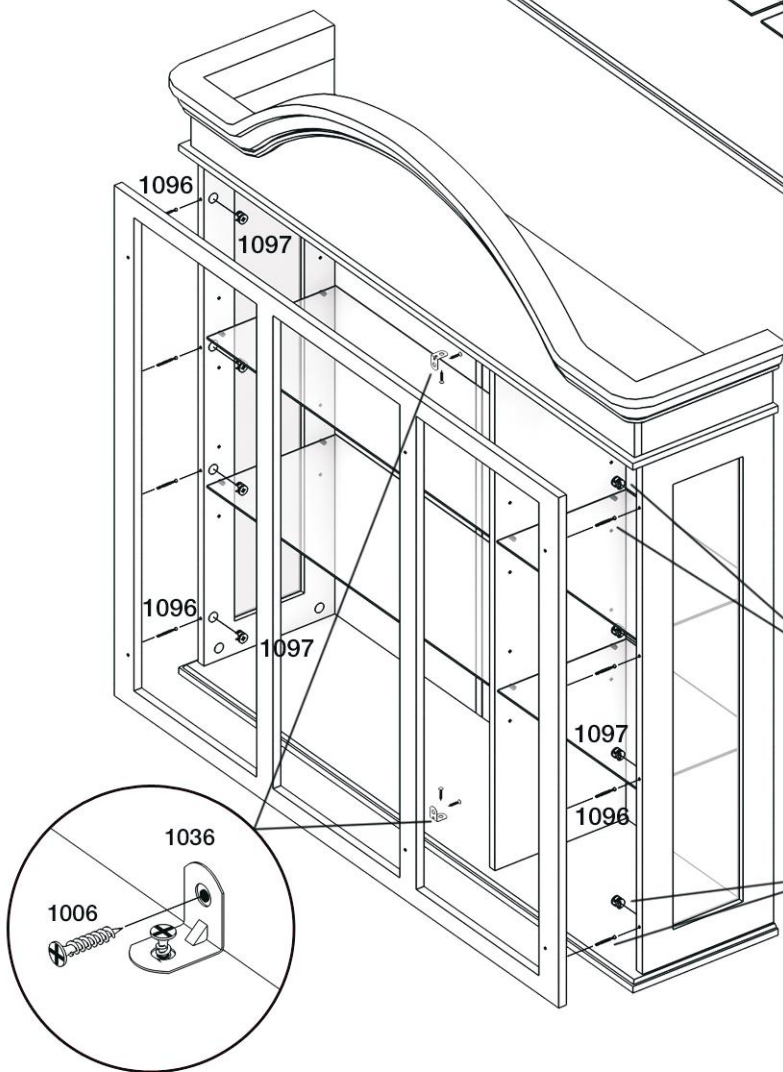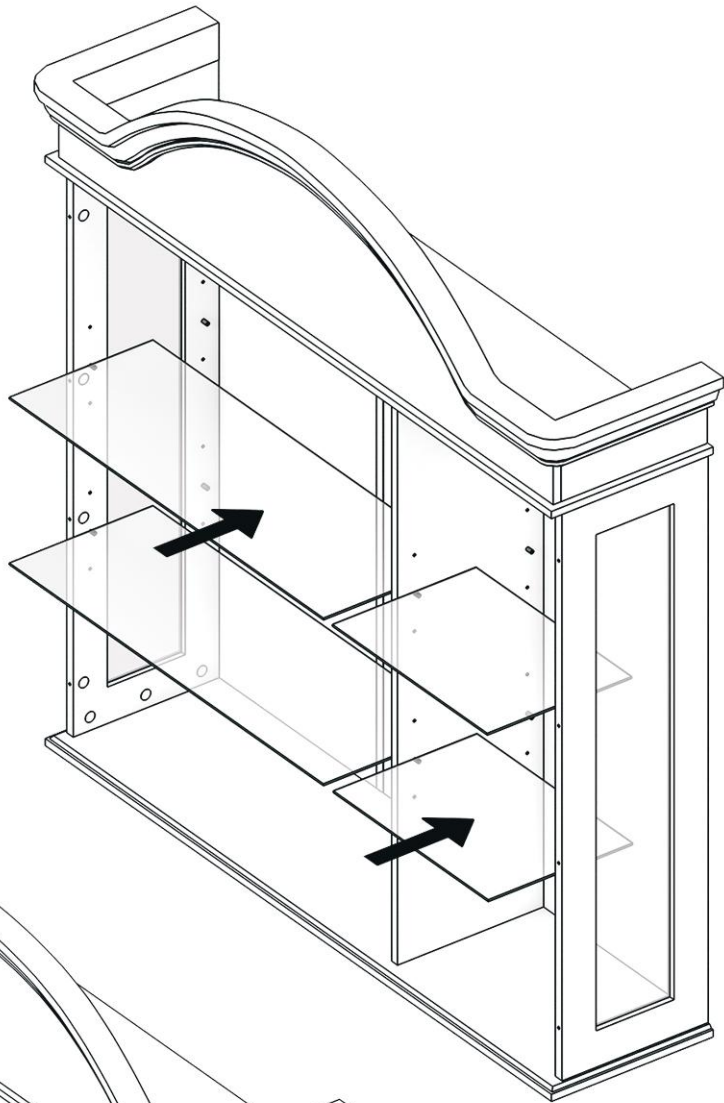  

4

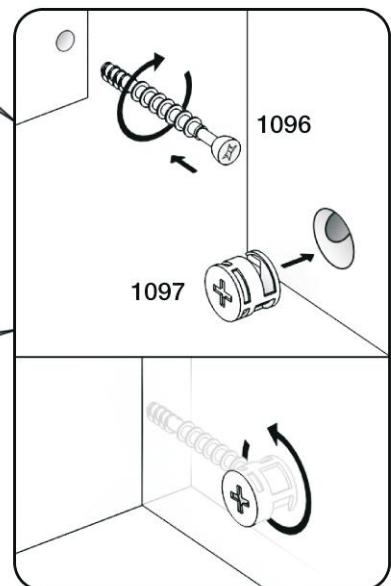 

5

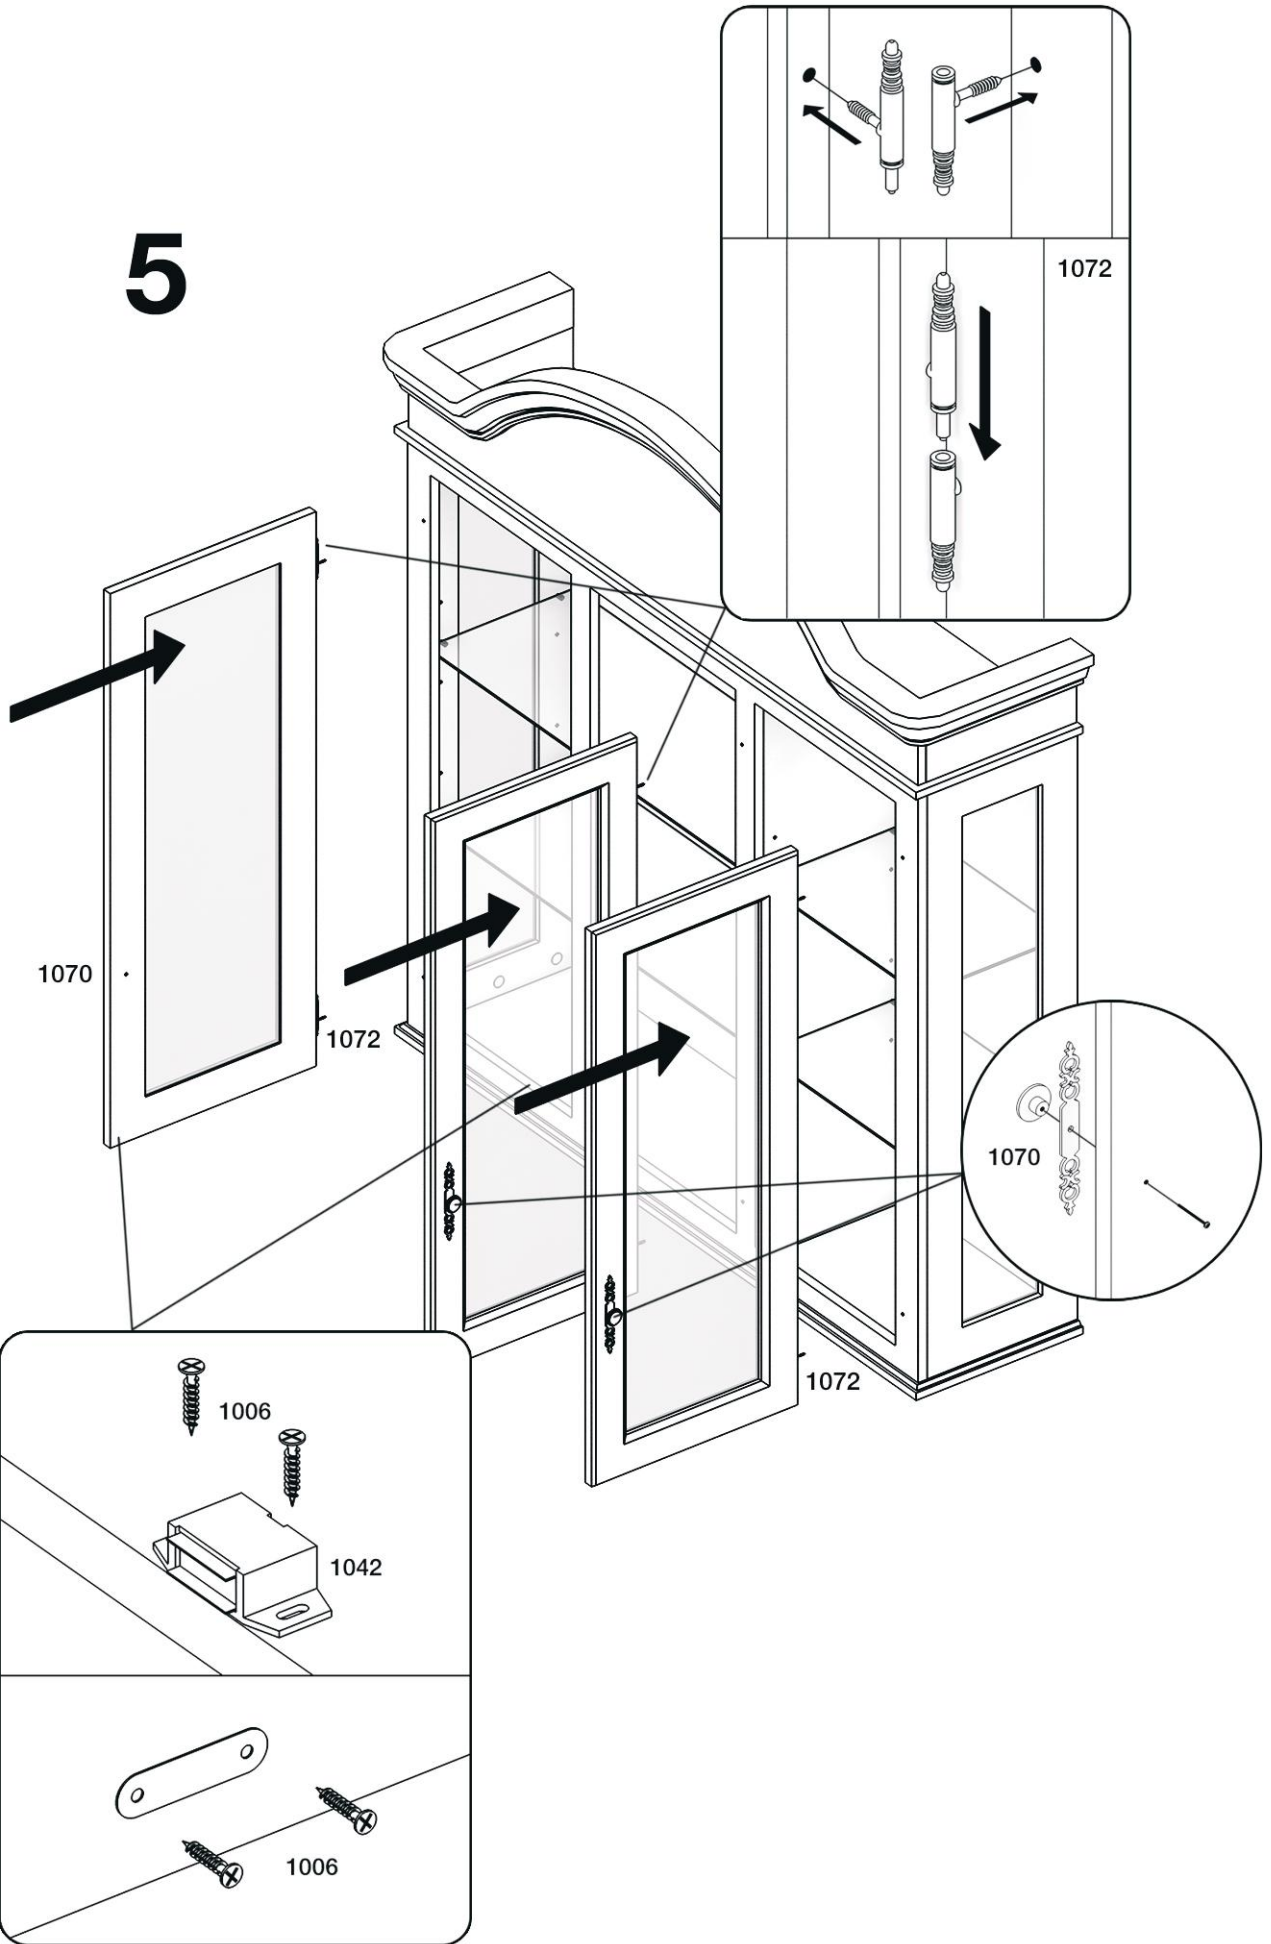 

6

