 
 
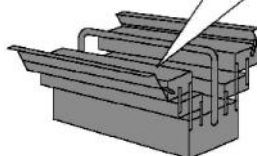 
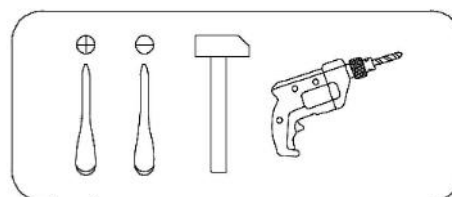 


- | | | | |
|-----------|------------------------------------|-----------|--------------------------------|
| D | Montageanleitung | GB | Assembly instructions |
| FR | Notice de montage | IT | Istruzioni di montaggio |
| NL | Handleiding voor de montage | PL | Instrukcja montażu |
| CZ | Montážní návod | SK | Návod na montáž |
| HU | Szerelési útmutató | RO | Instruktluni de montaj |
| TR | Montaj talimatı | RU | Инструкция по монтажу |

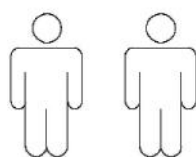


1-6

EAC

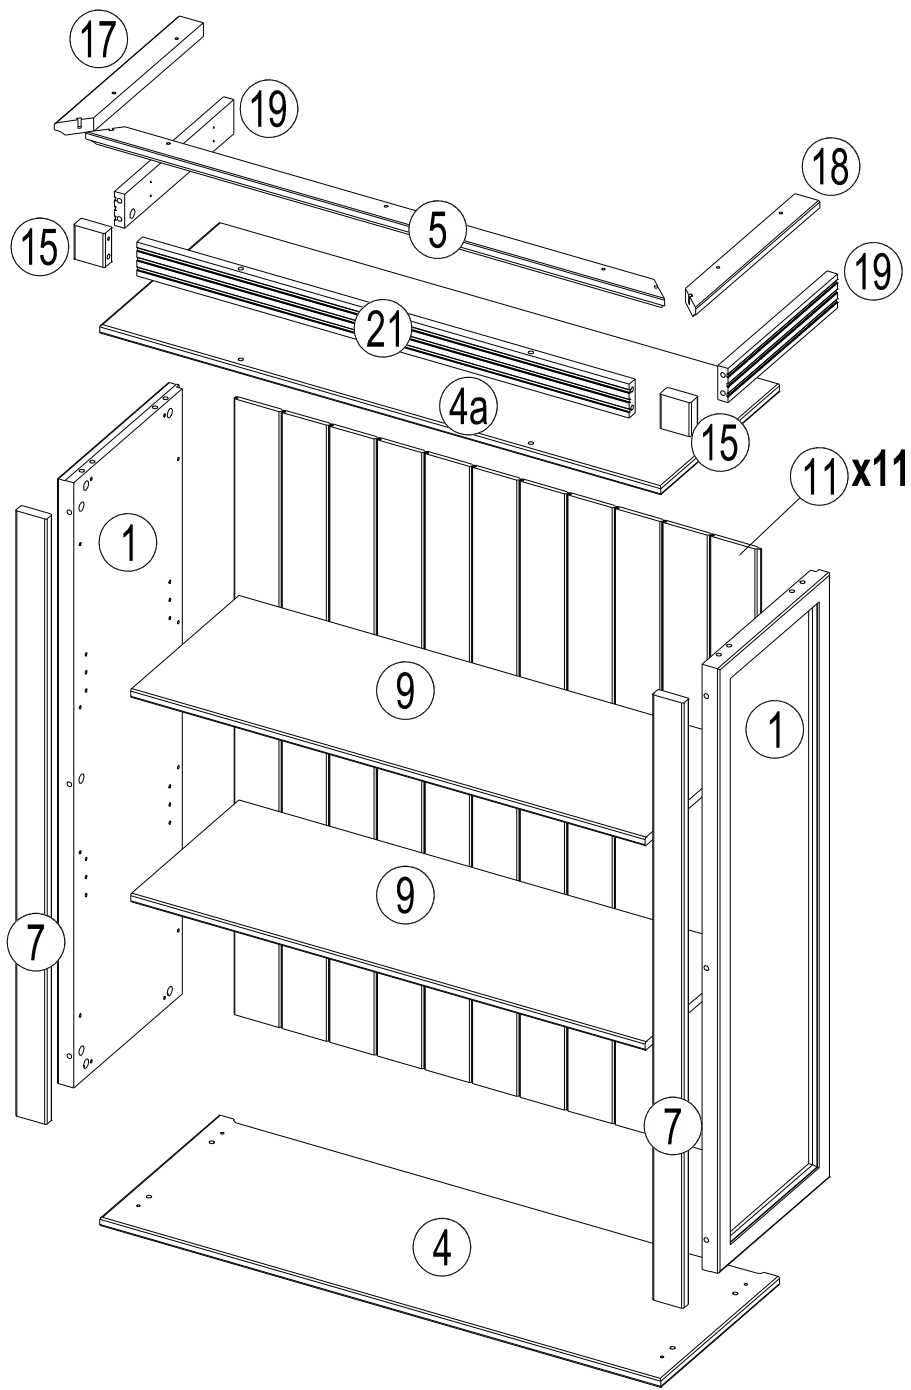


A 030093 x18	B 220043 1,2x20 x1	C 180017 x2	D 190009 x8	E 180074 x6	F 230010 8x32 x16
G 220018 15 x2	H 250012 3,5x15 x20	J 250024 3,5x35 x7	K 030110 15x11 x18	L 090004 8x40 x1	M 180080 76x31x15 x1
				N 250012 3,5x15 x1	O 250044 4x40 x1

 4

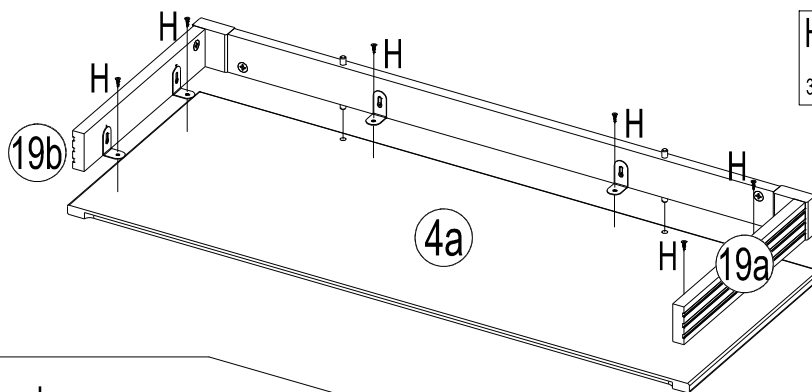

H 250012
3,5x15 x6

 
5

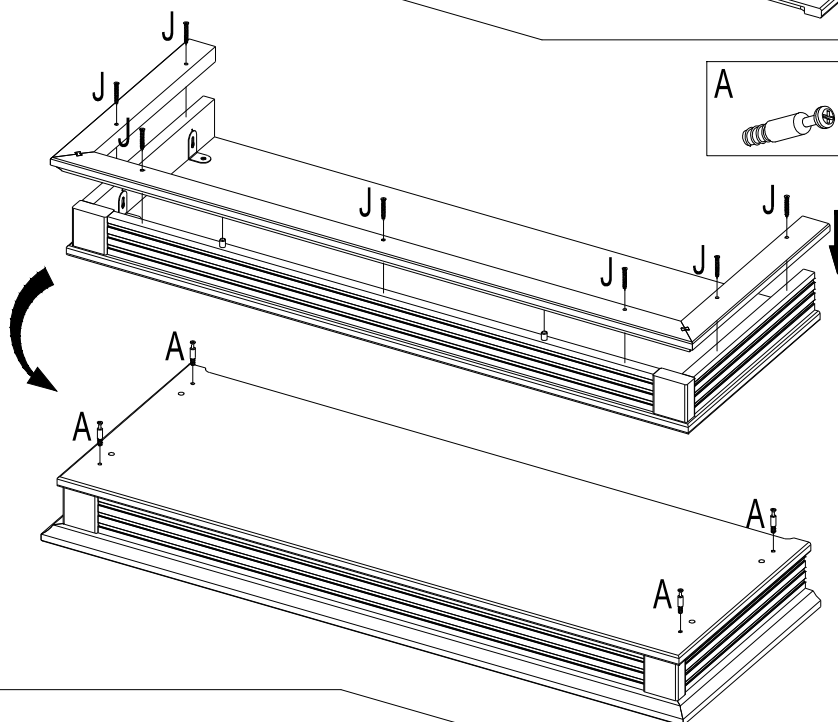


A 030093
x4

J 250024
3,5x35 x7

 6

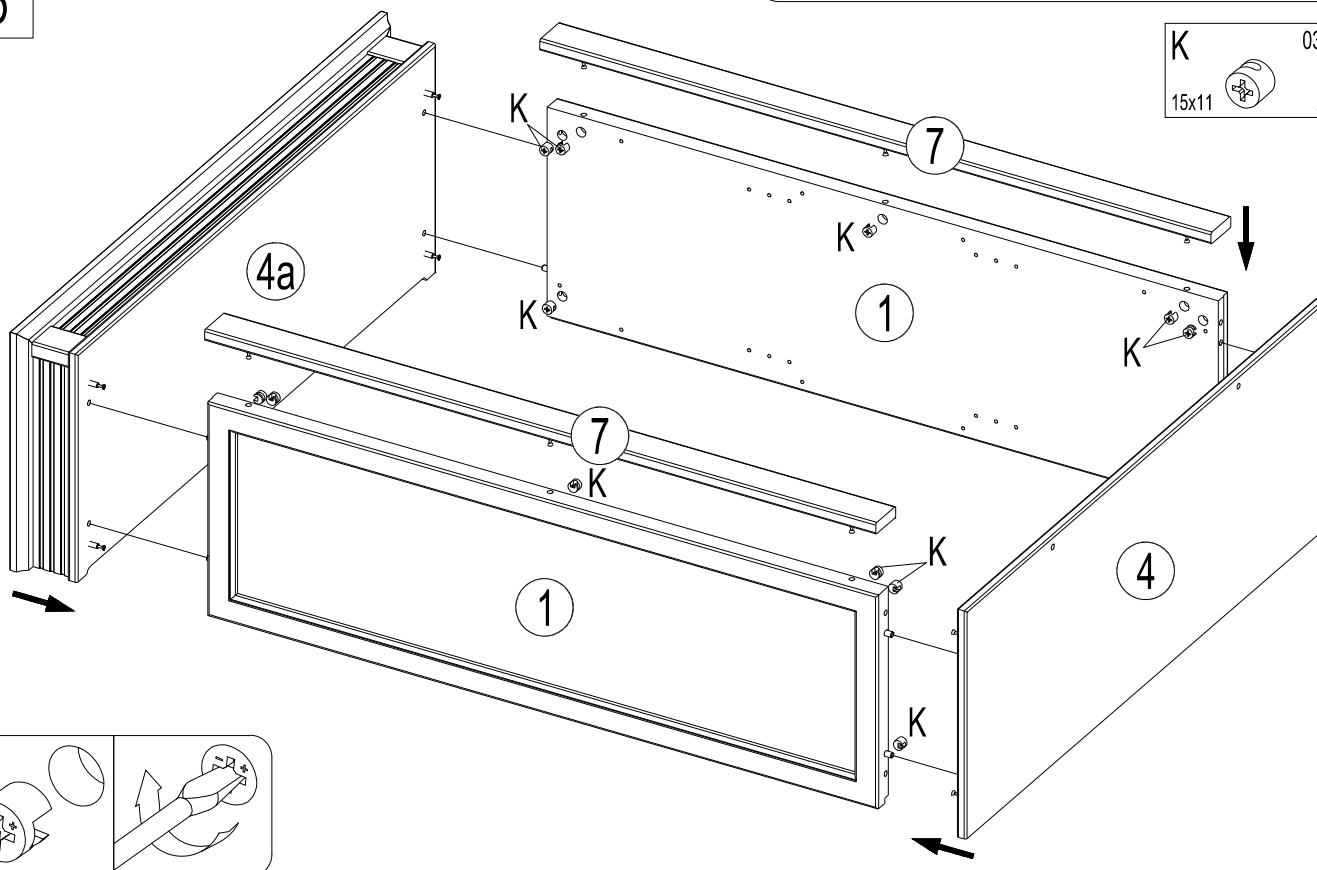


K 030110
15x11 x14

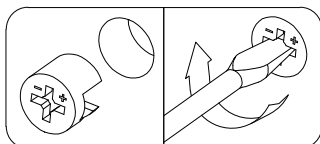 


7

 B 220043
1,2x20 x1

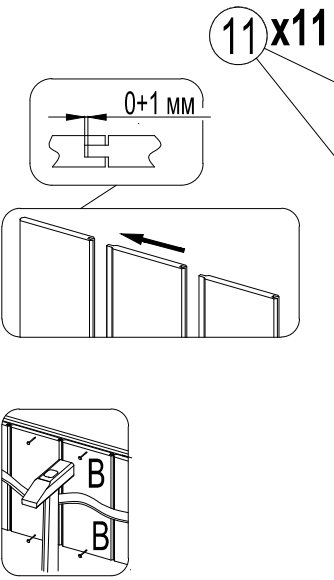



11x11

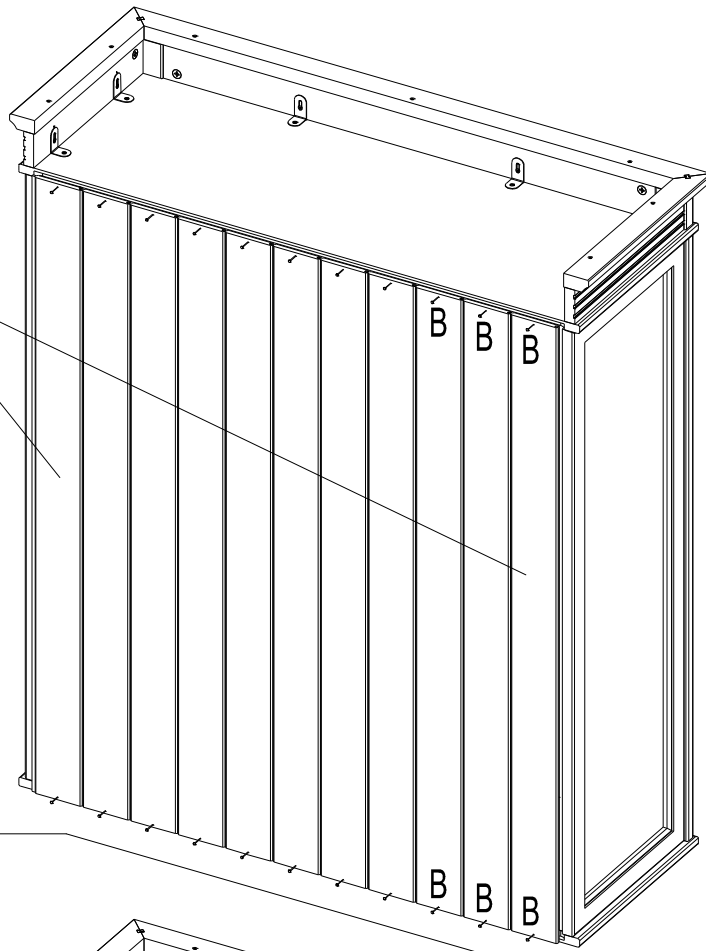 

8

C 180017
x2

  H 250012
3,5x15 x8

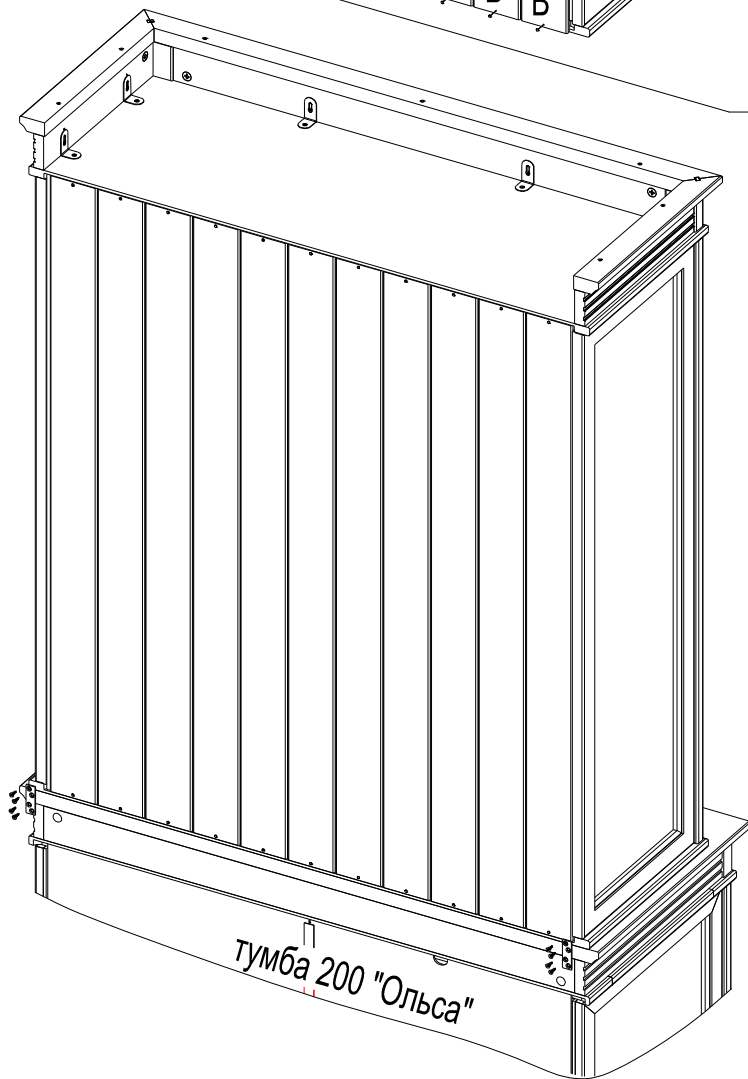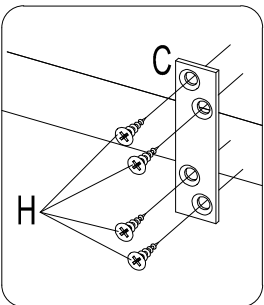

9

D 190009
x8

L 090004
8x40 x1

M 180080
76x31x15 x1

N 250012
3,5x15 x1

O 250044
4x40 x1

