


1-39, 2-65, 2-66, 2-67, 2-68 2-69, 2-70, 2-71, 2-72

Верх / Top / Yläpuoli

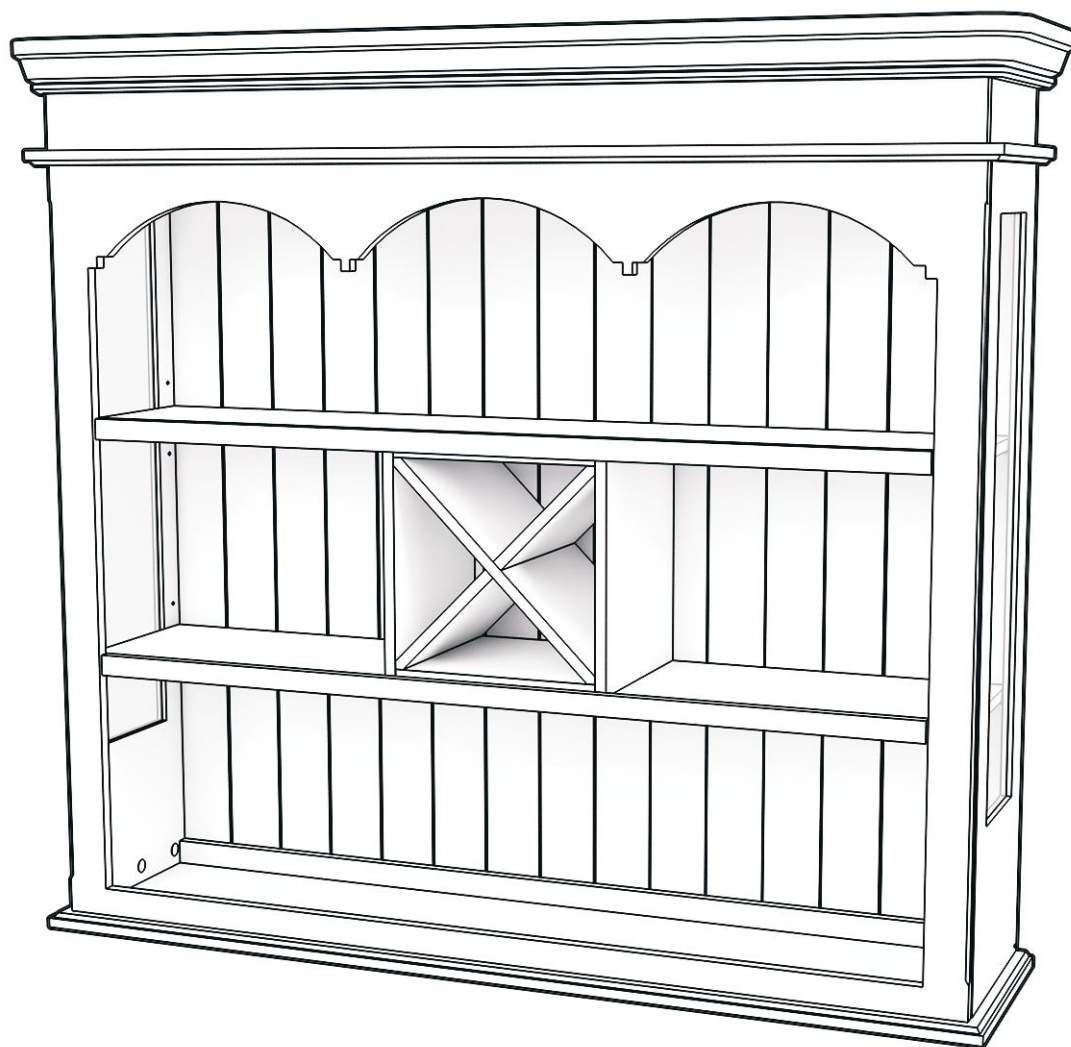

RU Инструкция по сборке

EN Assembly instruction

FI Koontaohje




1004
8



1097
18



1096
18

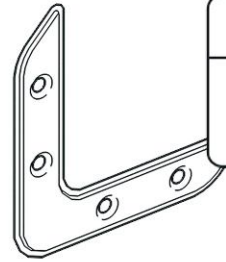

1098
2




1040
8



1013
2






1034
1

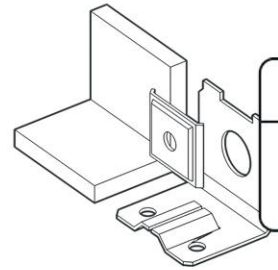


1099
2




1006
12

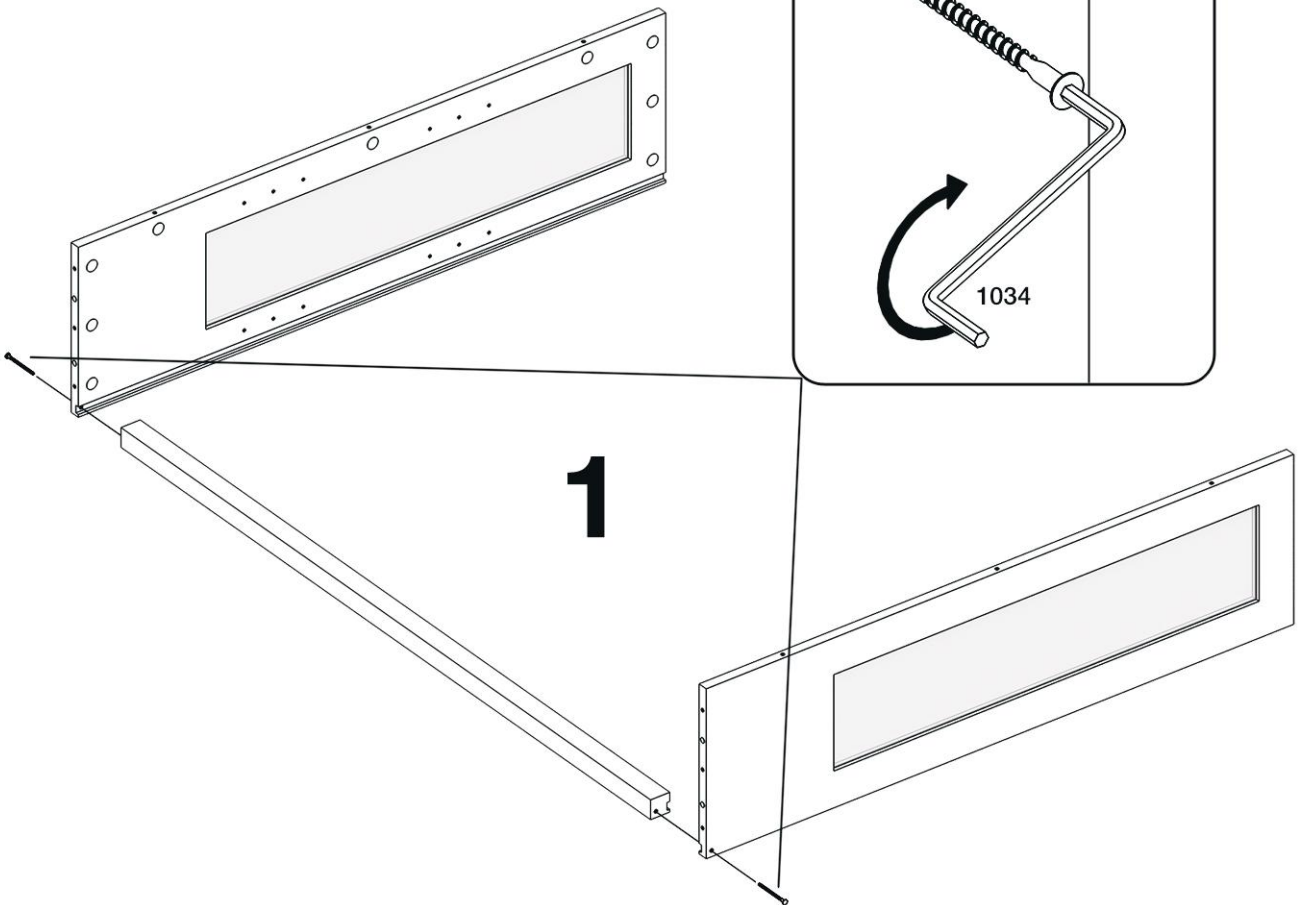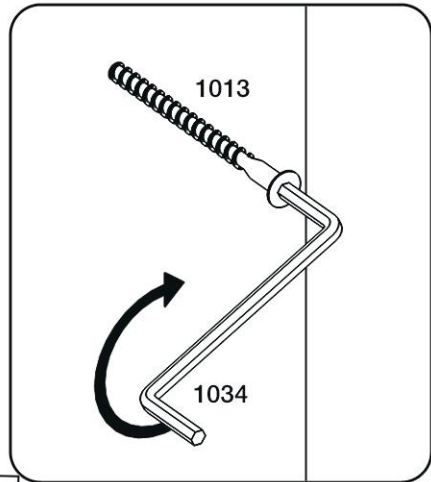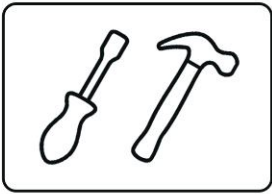


2

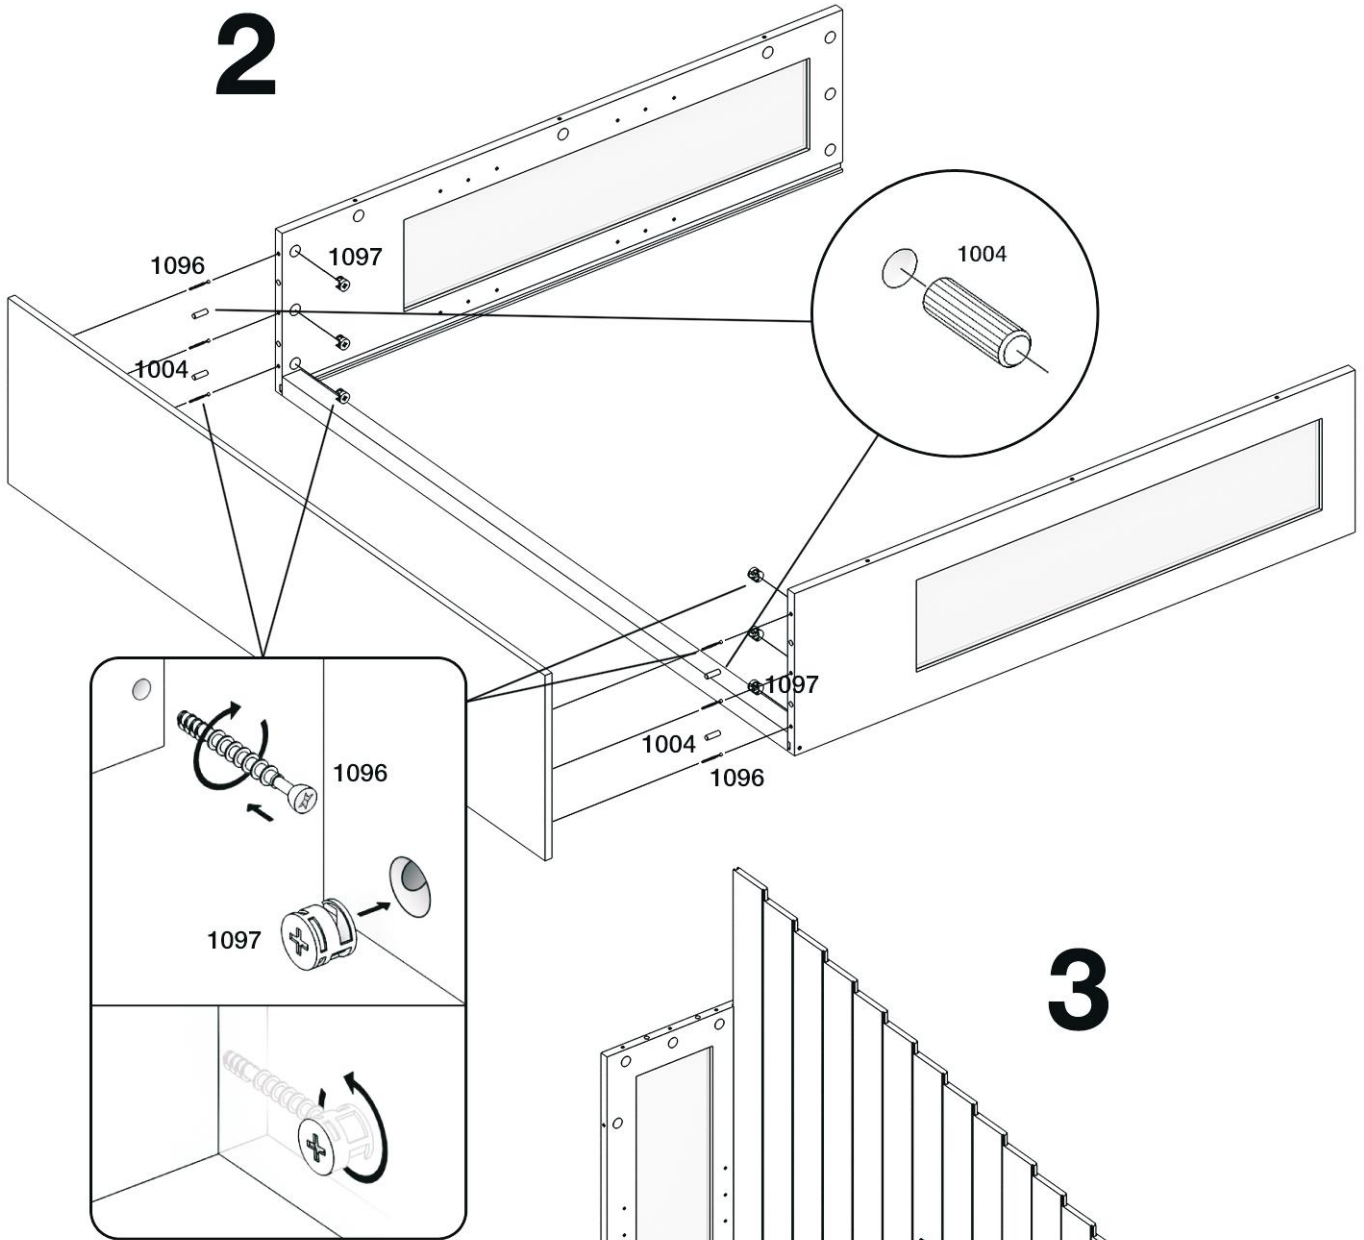

3


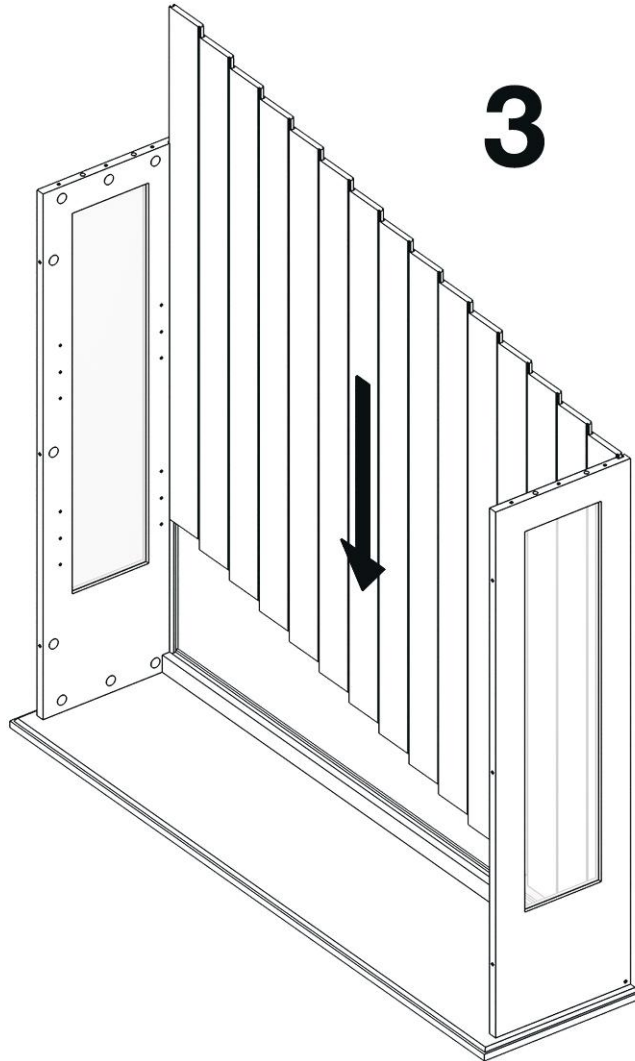


4

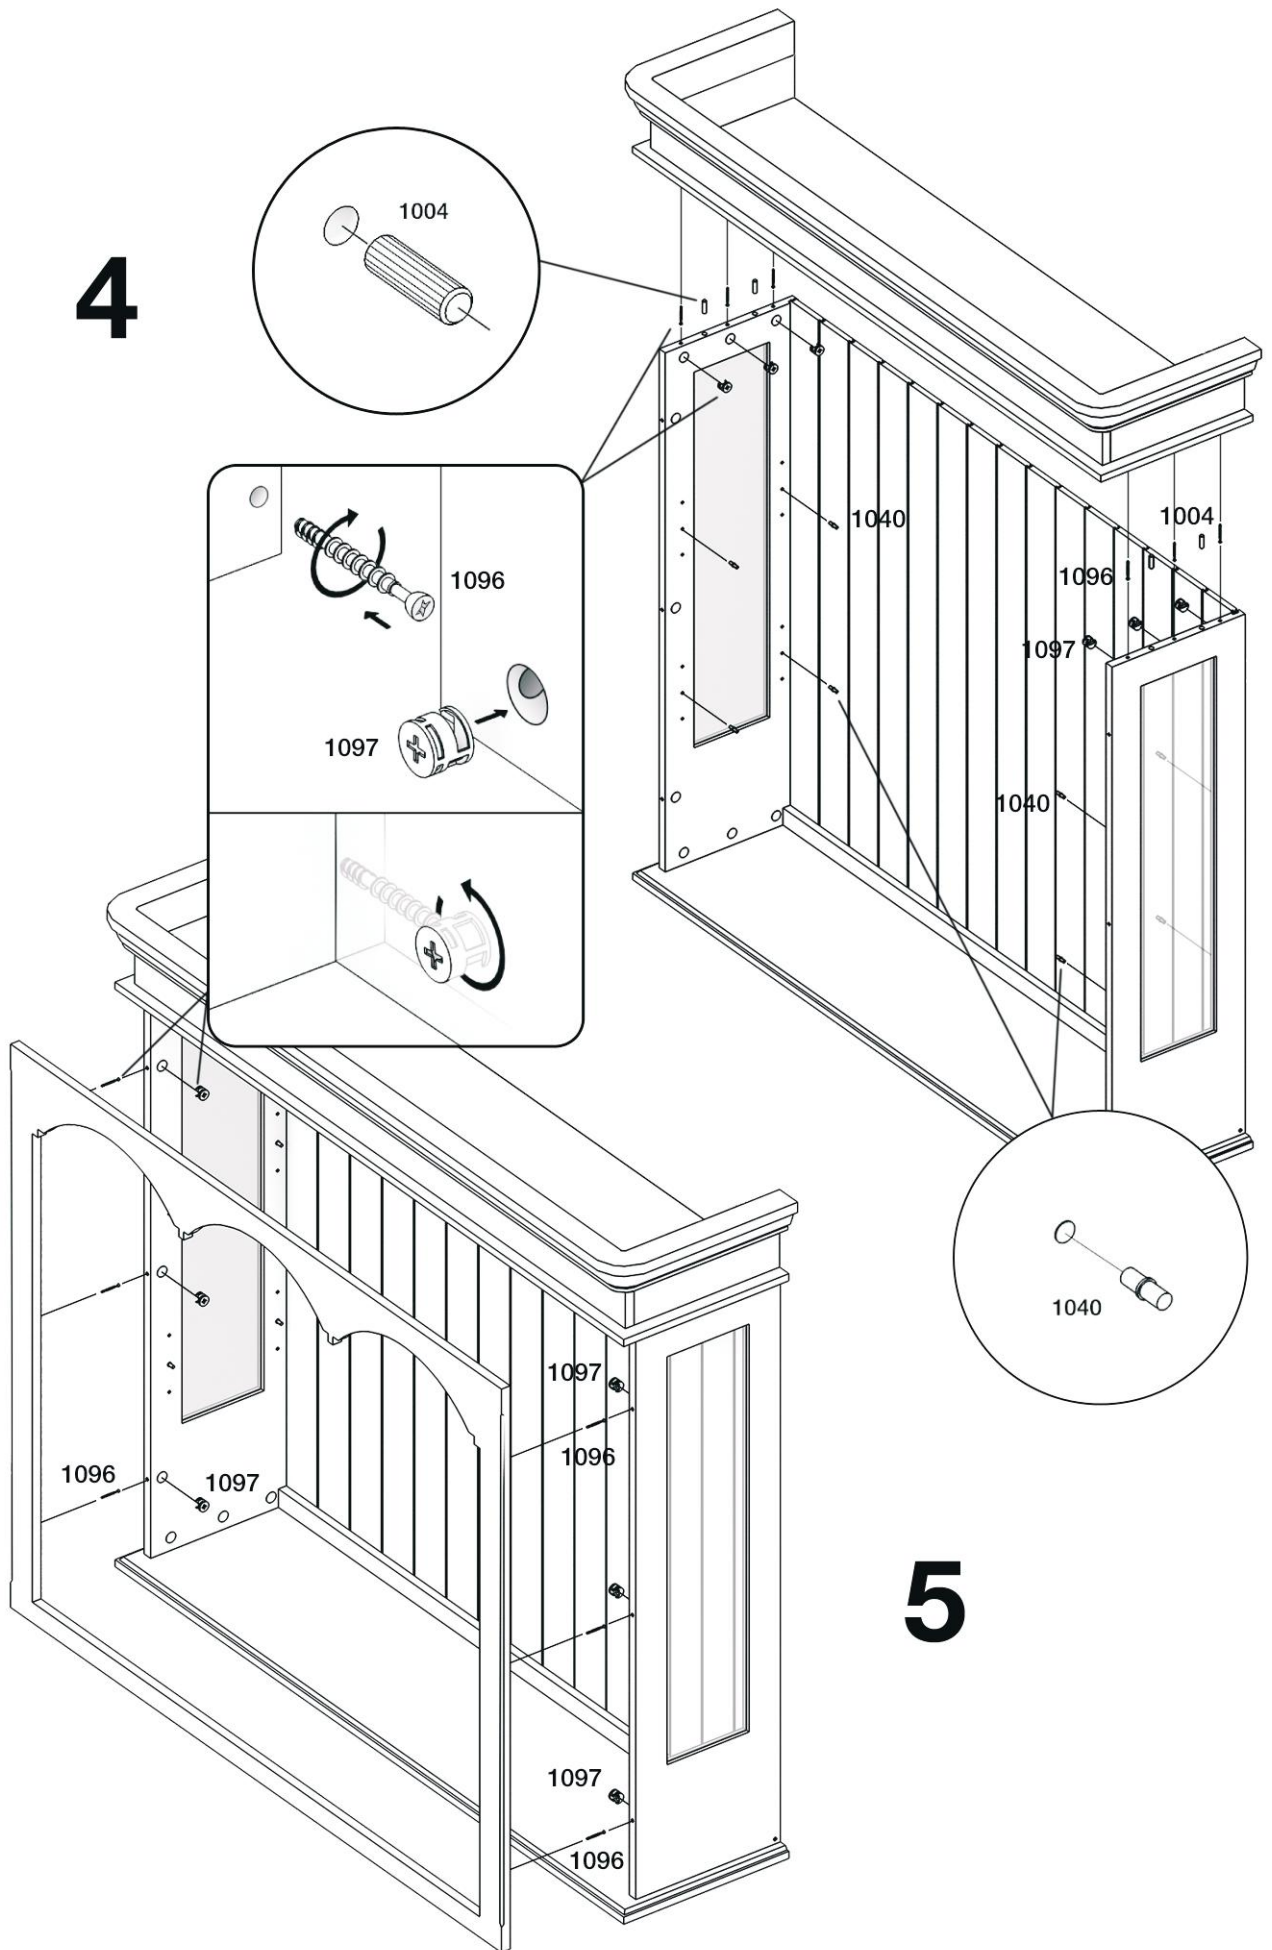

5

6

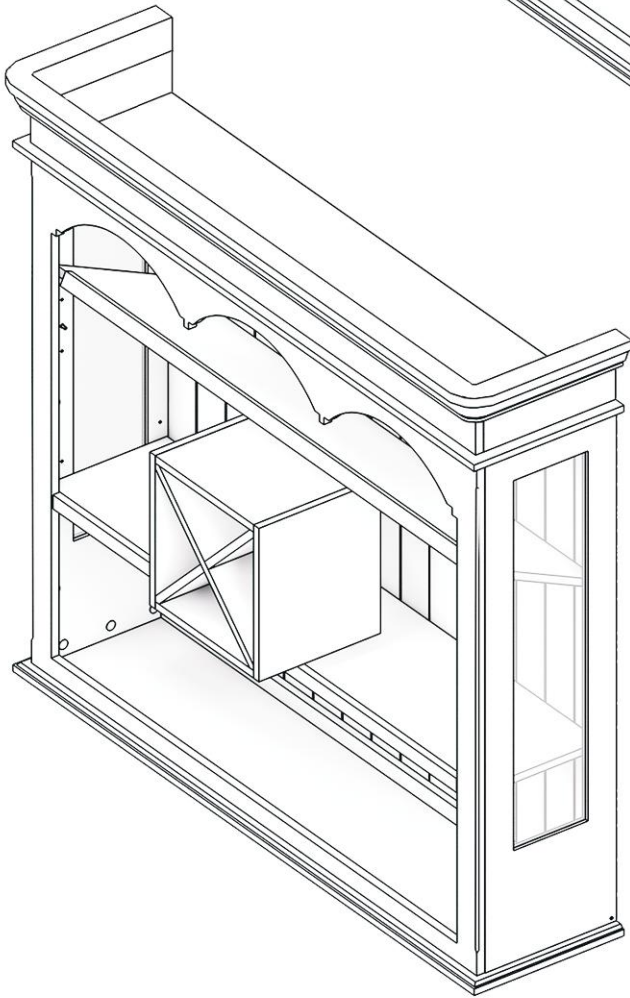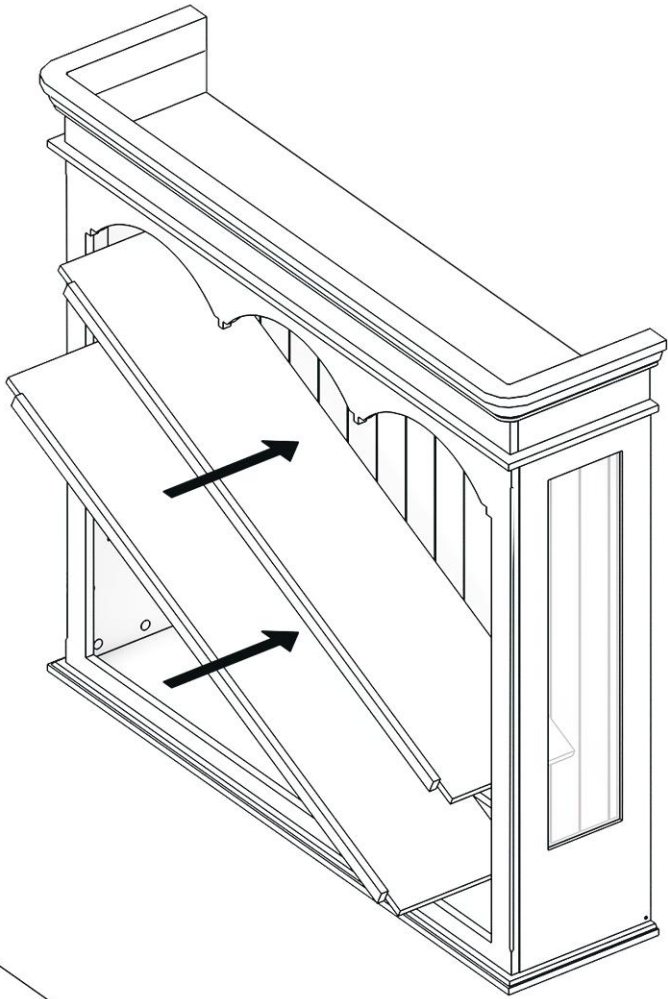

7

8

