

1-8

2-9, 2-10, 2-12

Низ / Bottom / Alapuoli



- RU** Инструкция по сборке
- EN** Assembly instruction
- FI** Koontaohje



1006
48



1038
40



1004
14



1096
18



1097
18



1027
16




1010
4




1008
19




1028
16


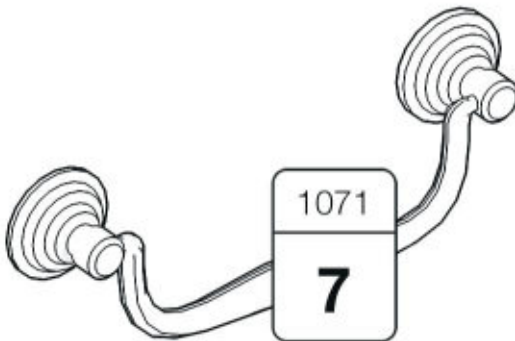



1071
7

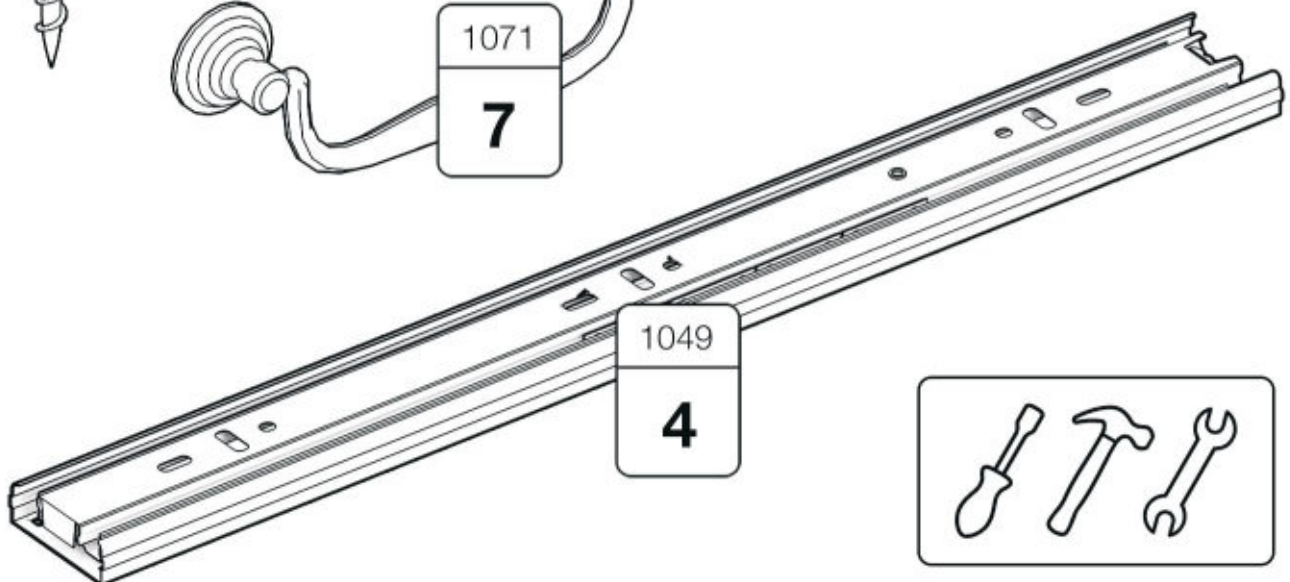


1049
4

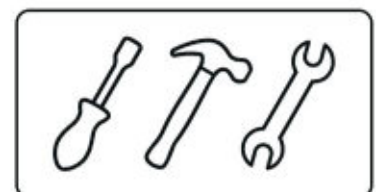

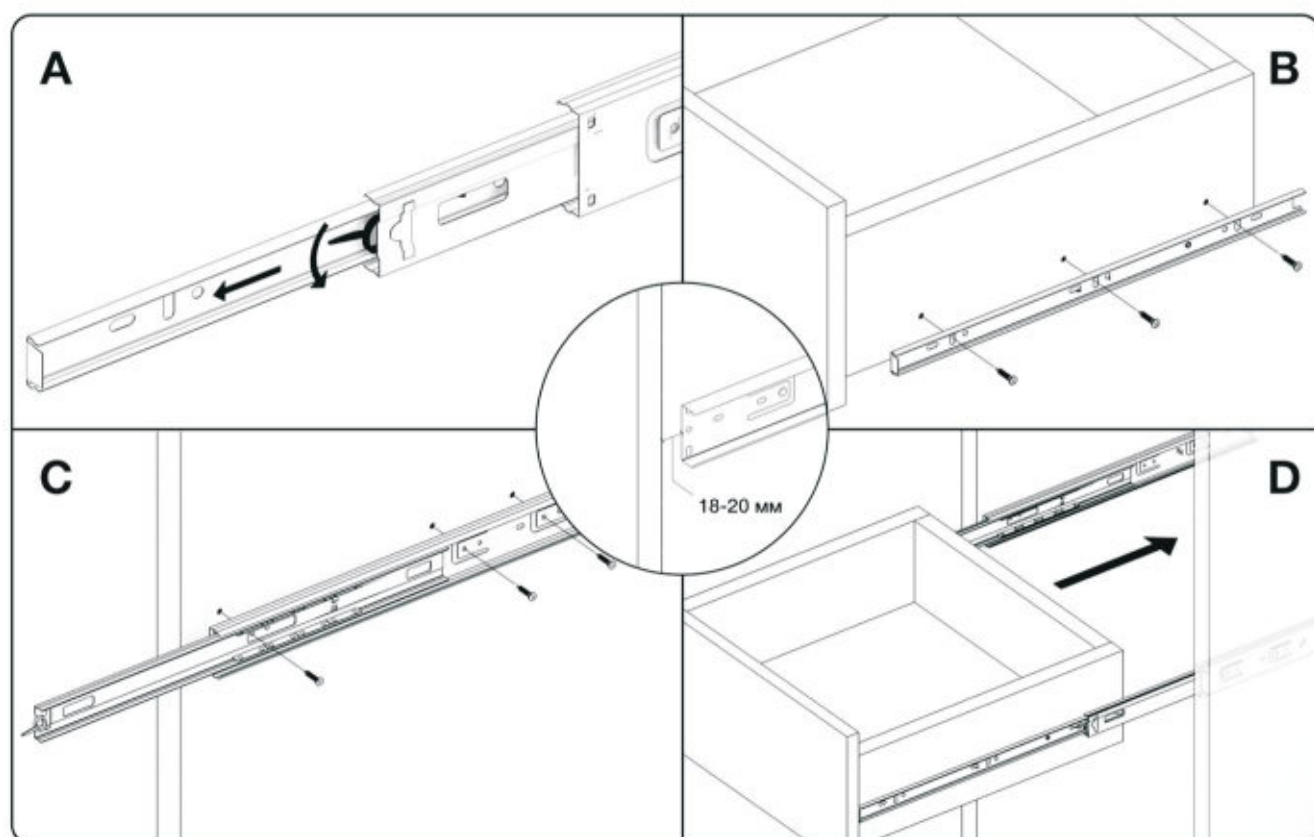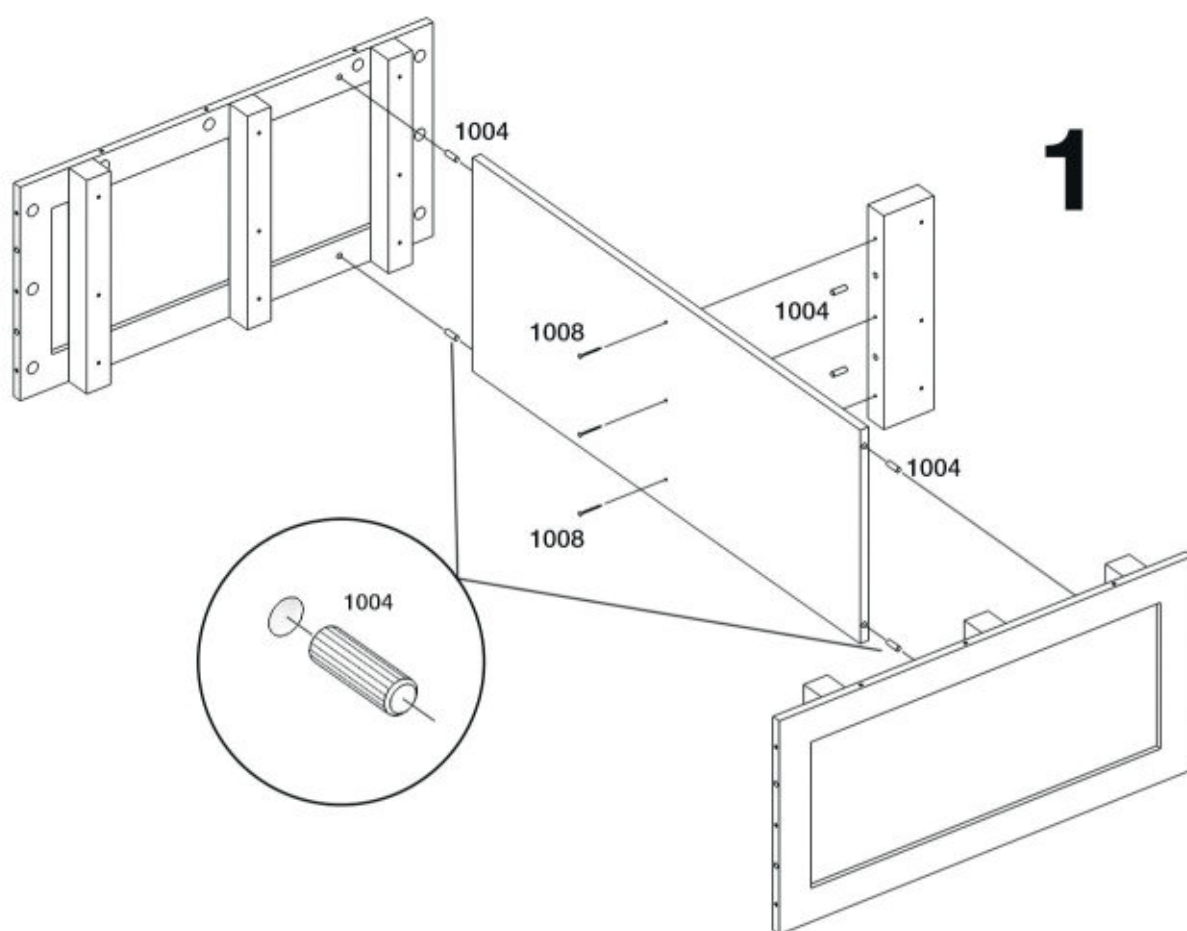

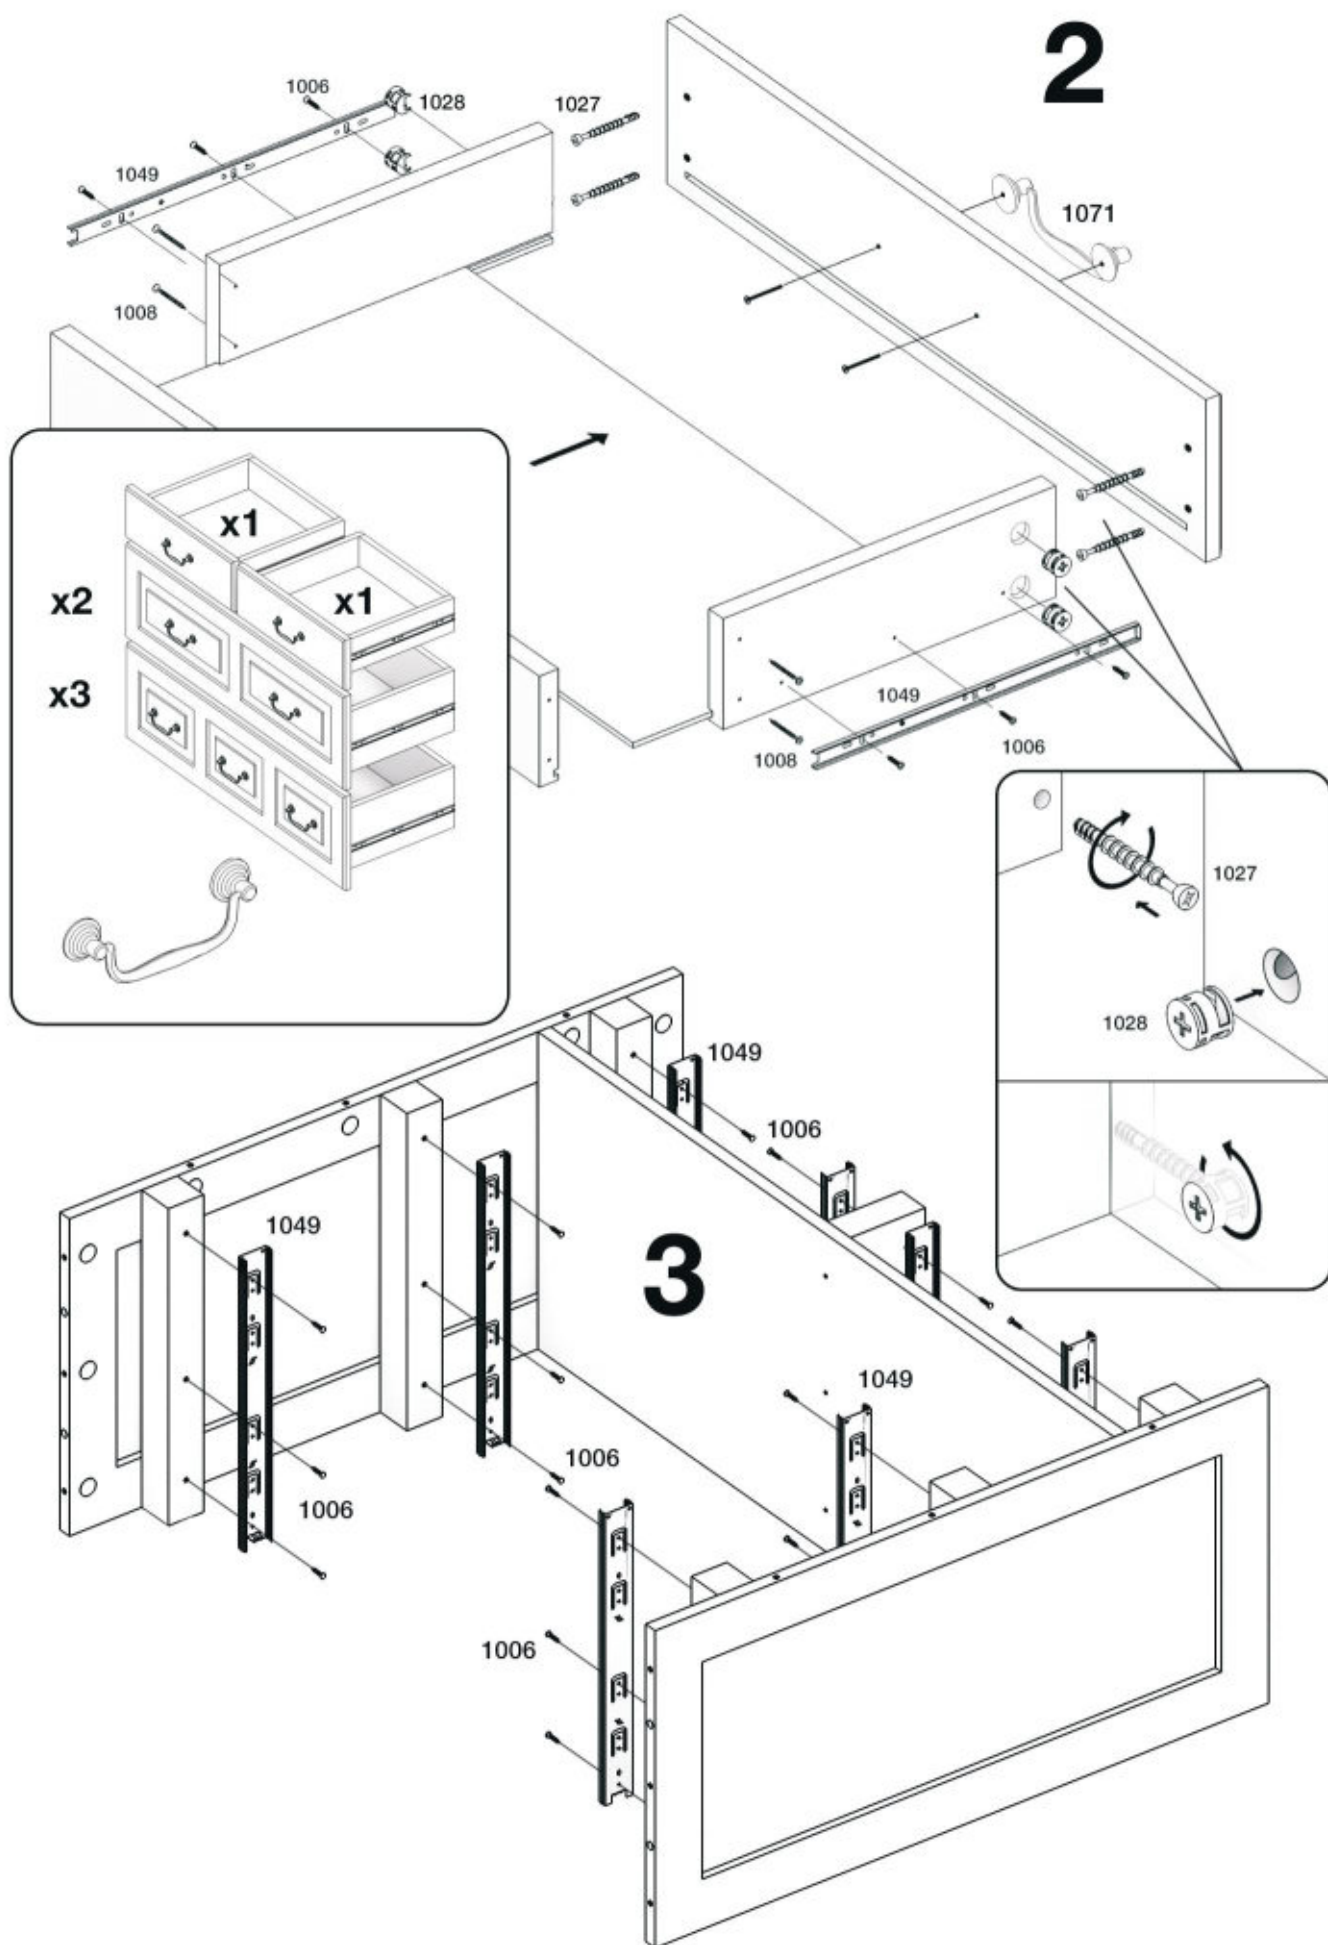

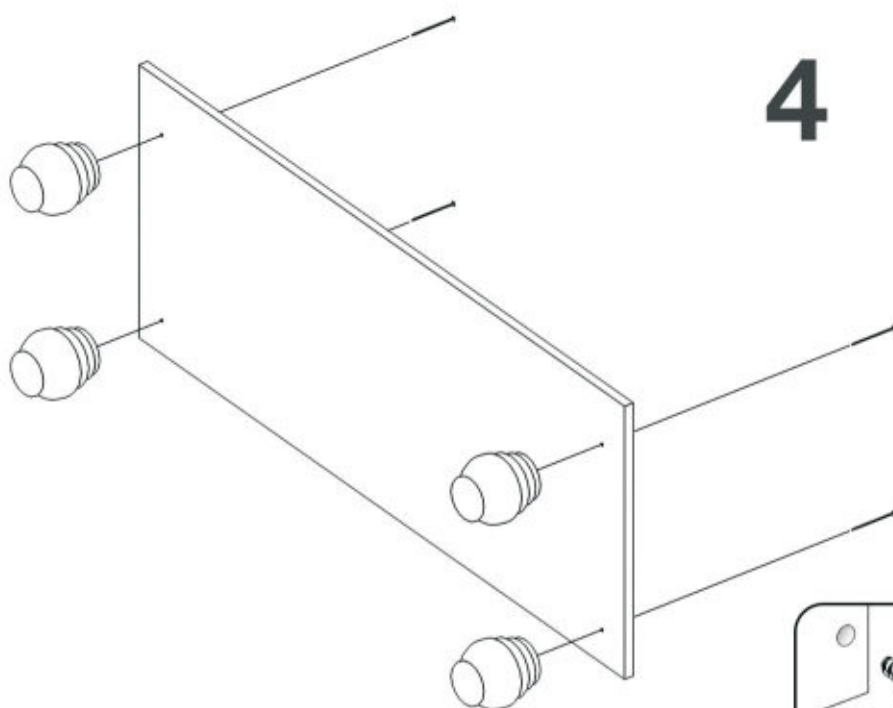

4

5

