

ДАНИЯ

Шкаф 3-створчатый №4



- RU** Инструкция по сборке
- EN** Assembly instruction
- FI** Koontaohje



1006
82



1004
30



1038
76



1008
8



1096
48



1097
48



 
1027
8




1028
8




1040
20

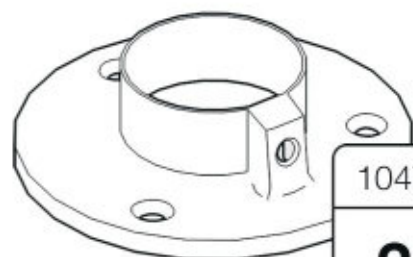

1047
2

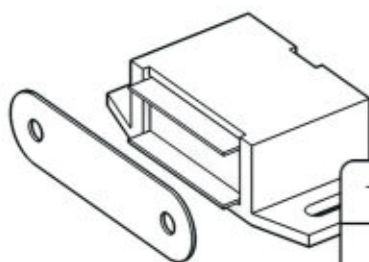 


1042
3

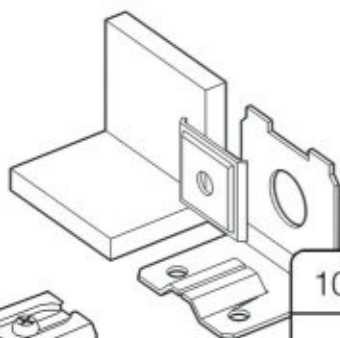 


1099
2



 
1020
5


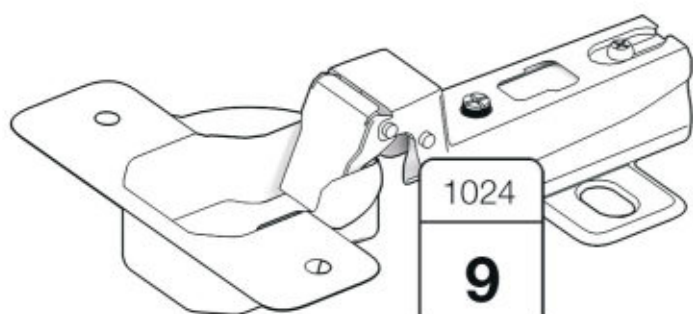



1024
9

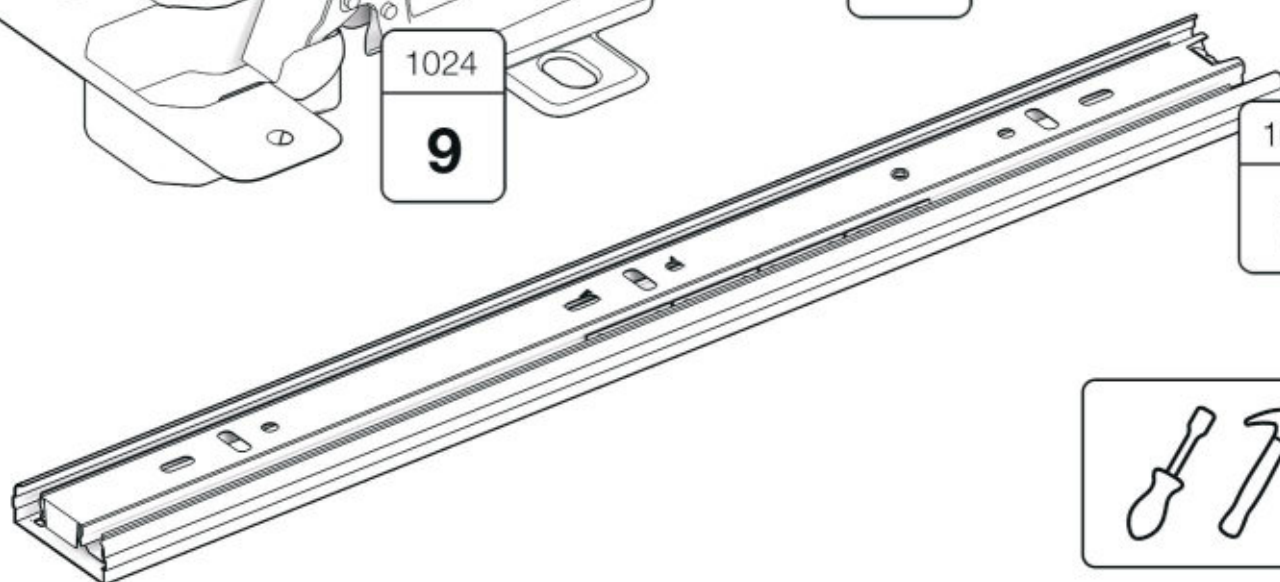 


1049
2

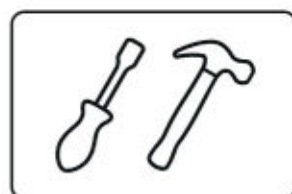 

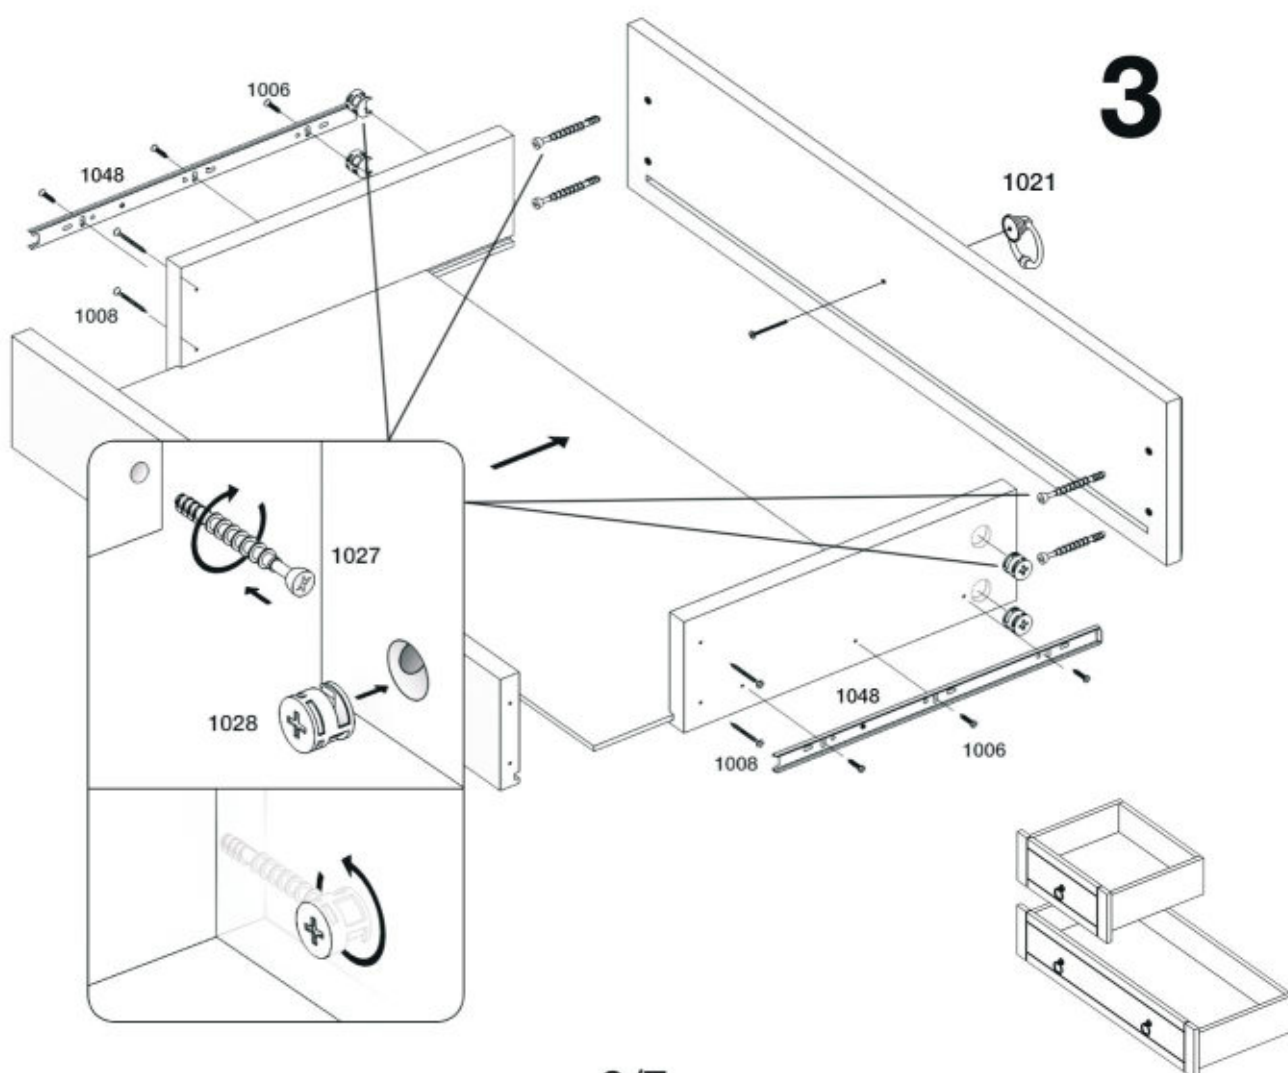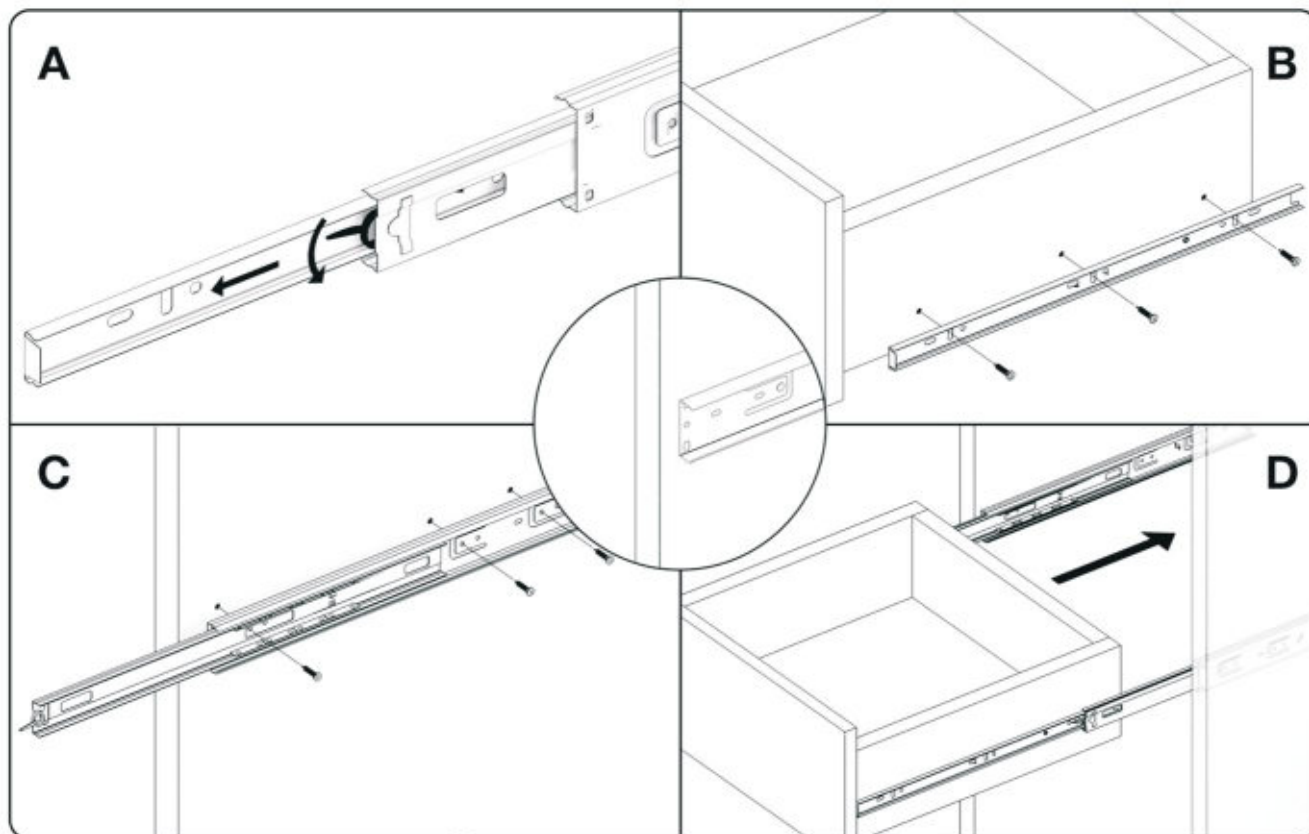  


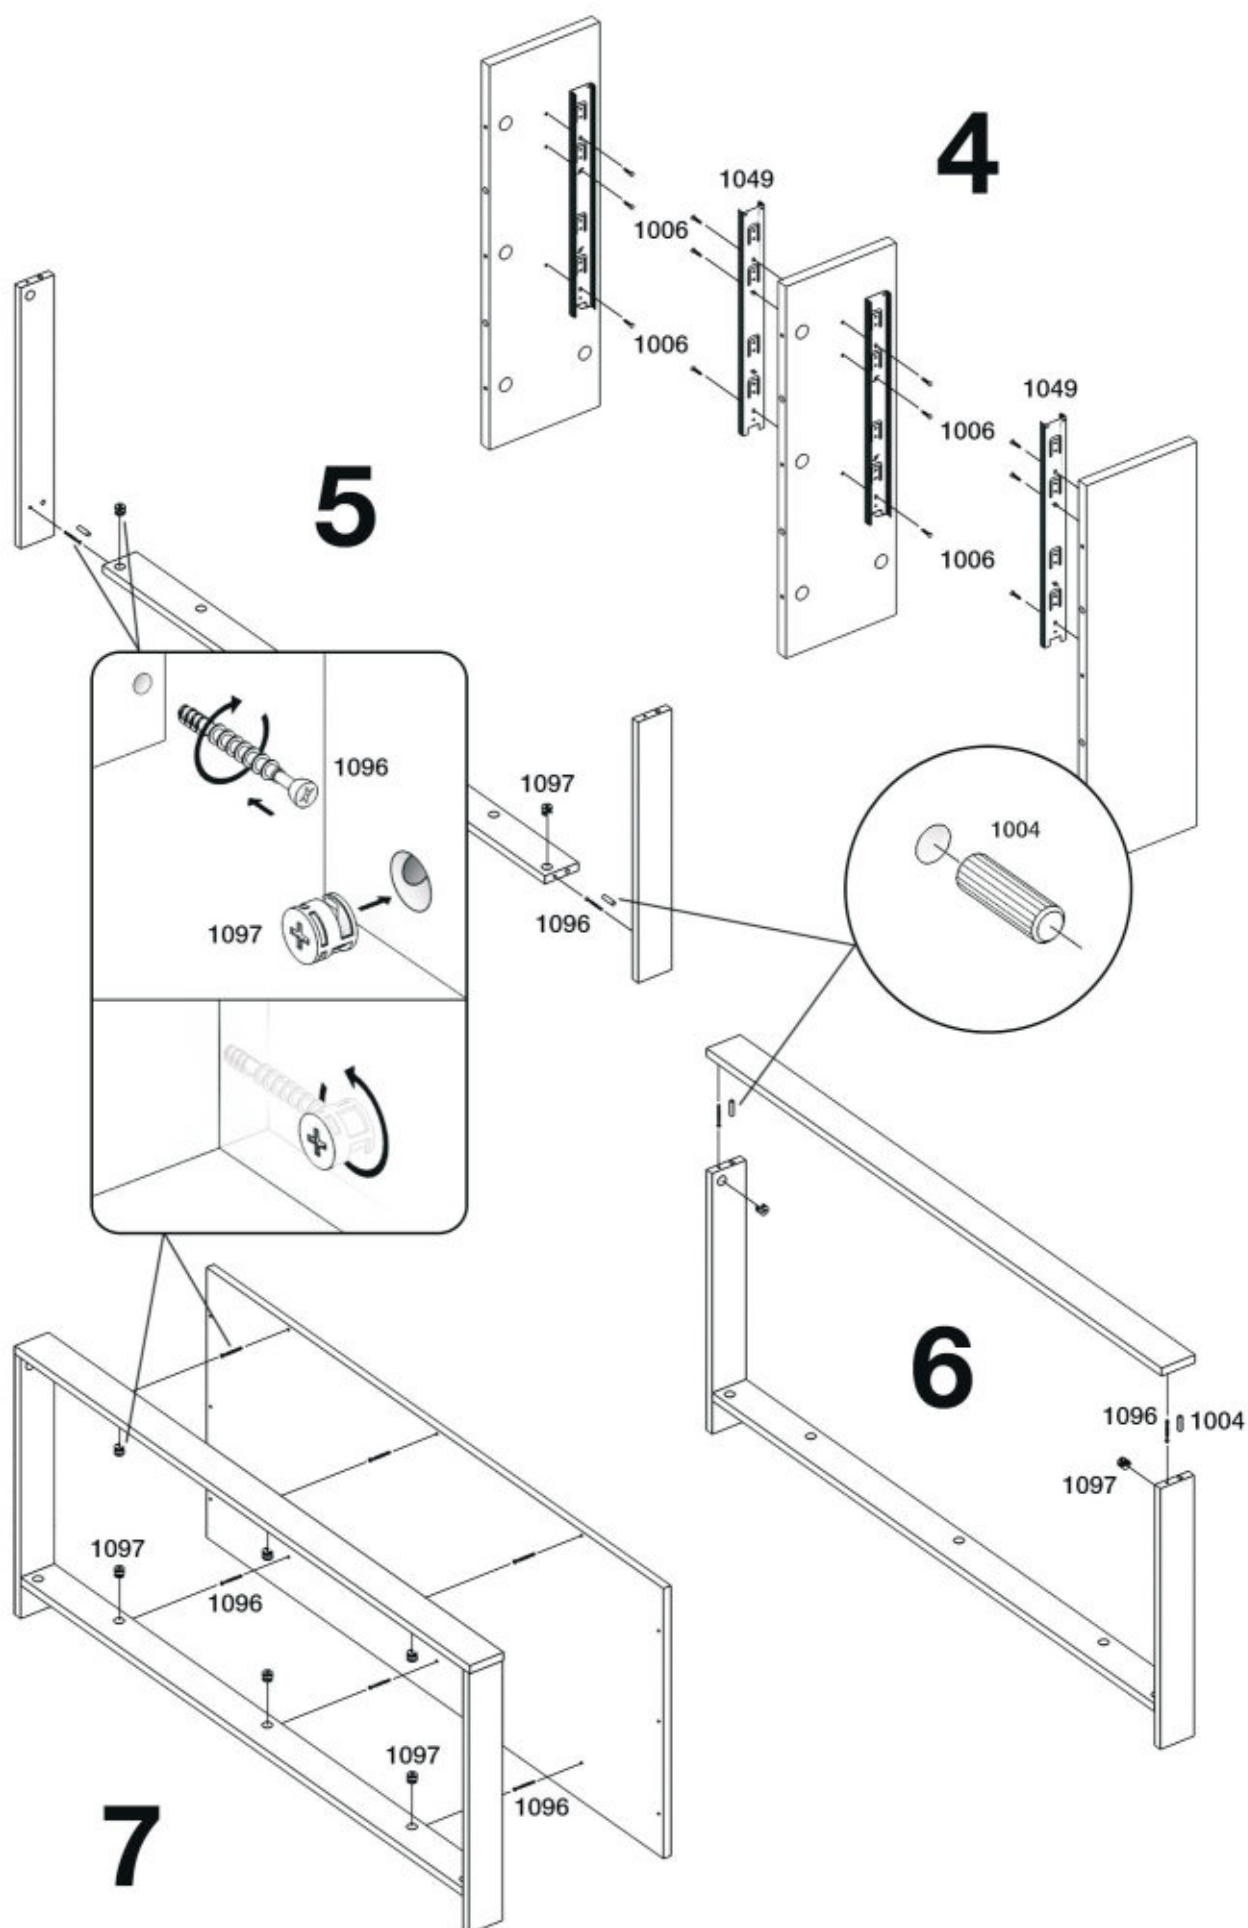 


8

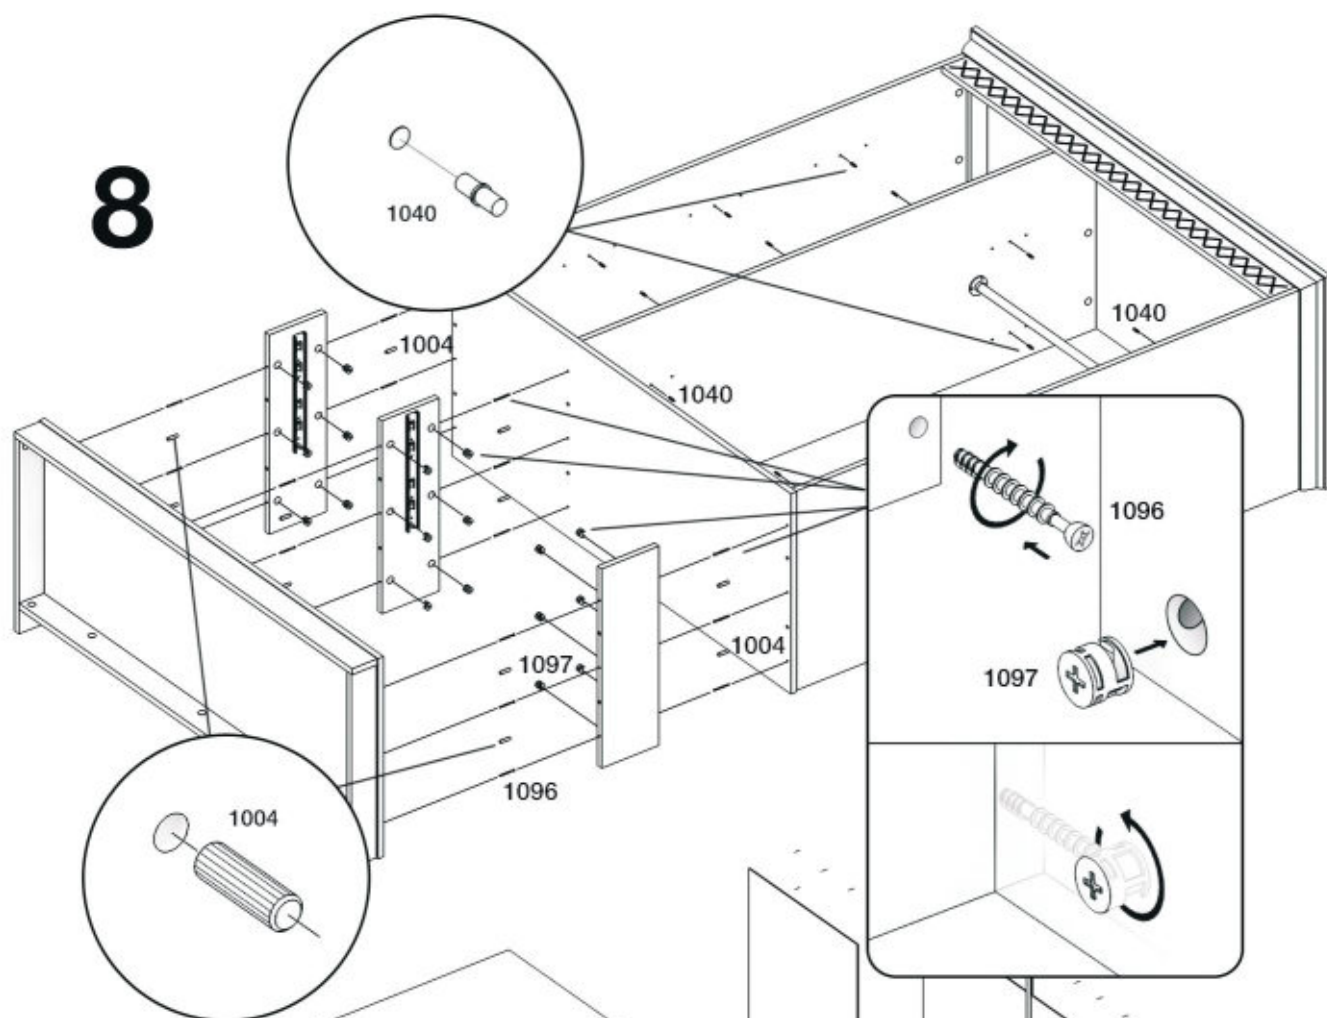 

9

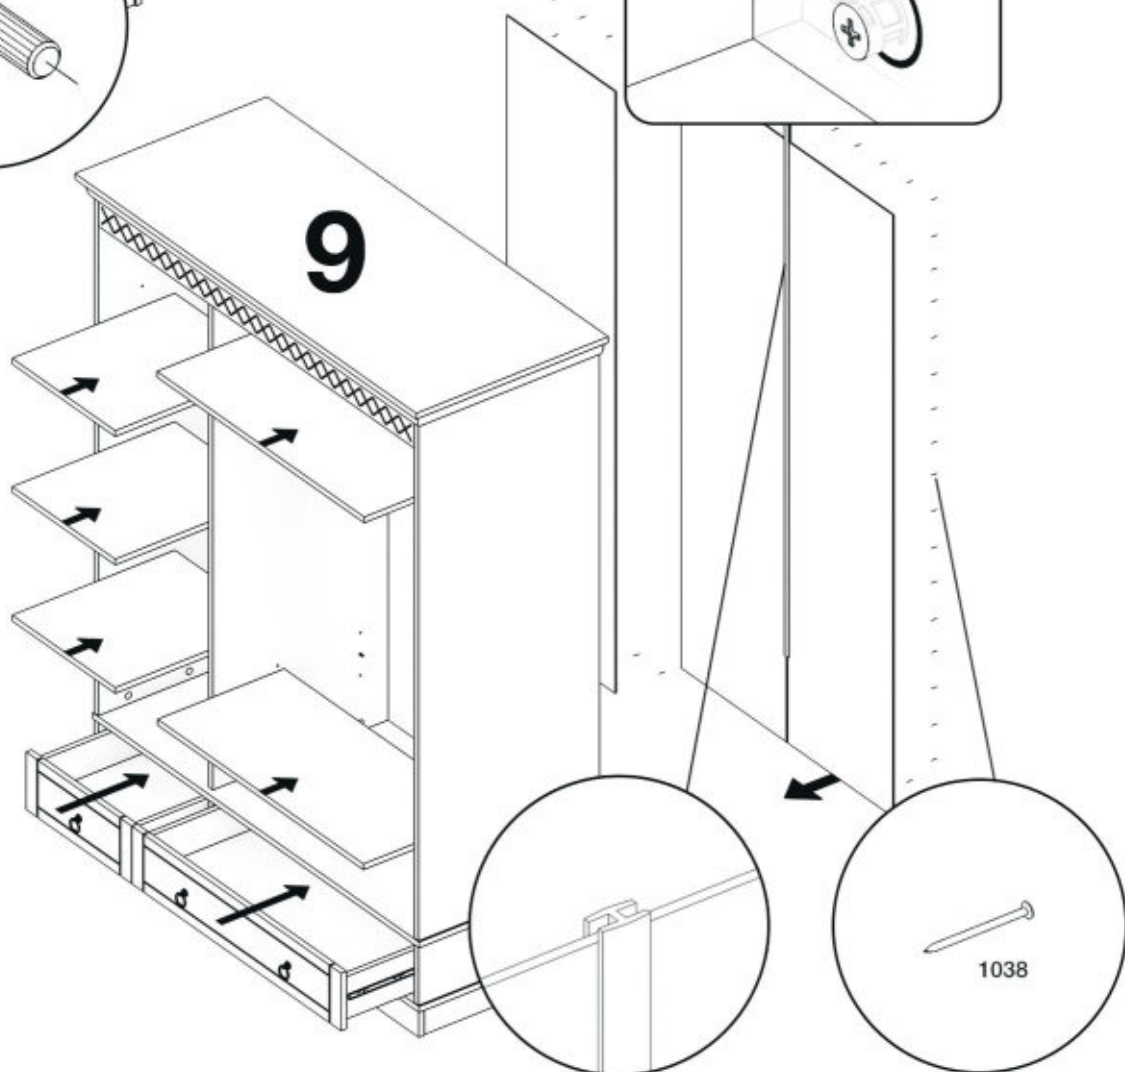 

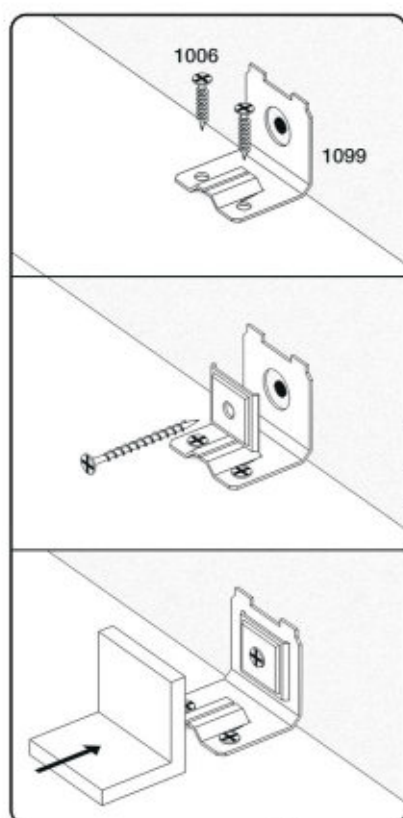 

10

