 


2-54

2-49, 2-50

Низ / Bottom / Alapuoli

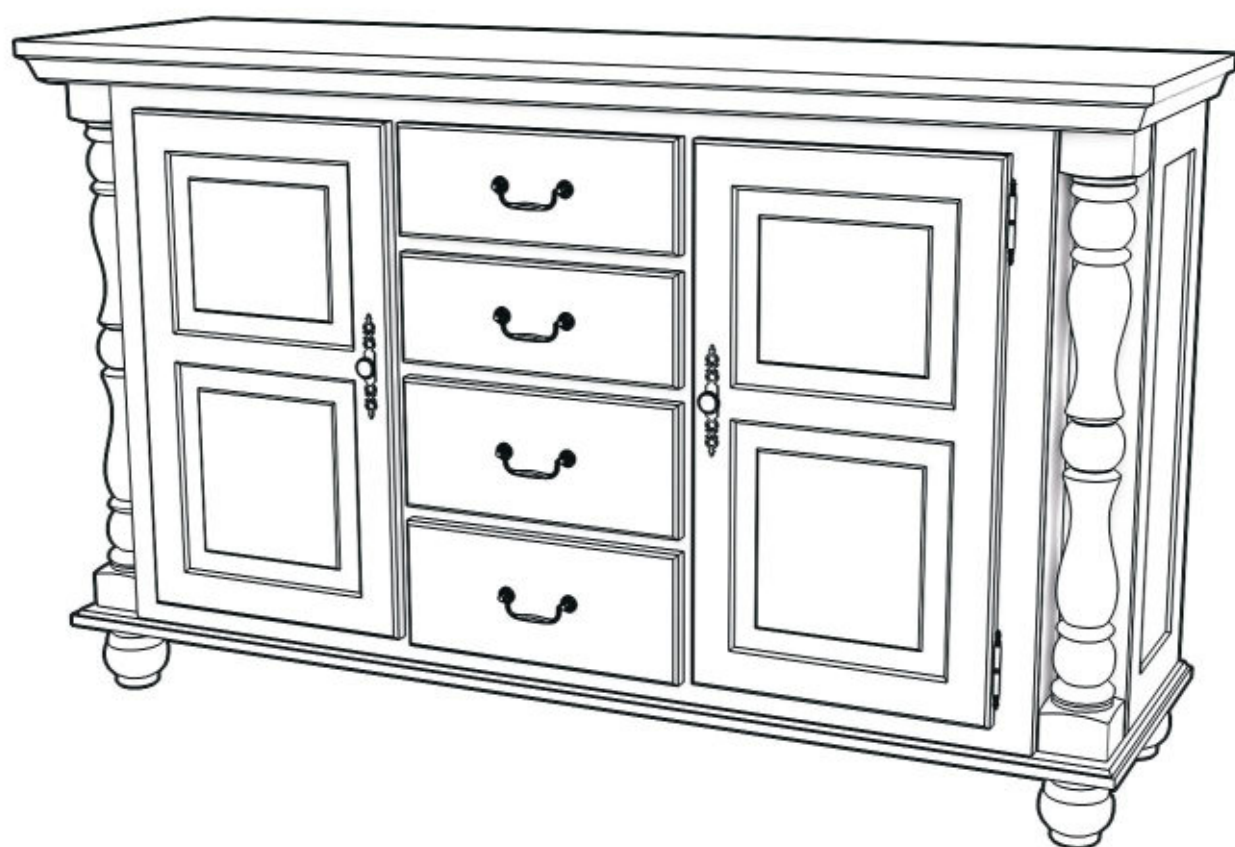

- RU** Инструкция по сборке
- EN** Assembly instruction
- FI** Koontaohje



1006
48



1004
28



1038
70



1008
16



1096
28



 
1097
28




1027
16



1028
16

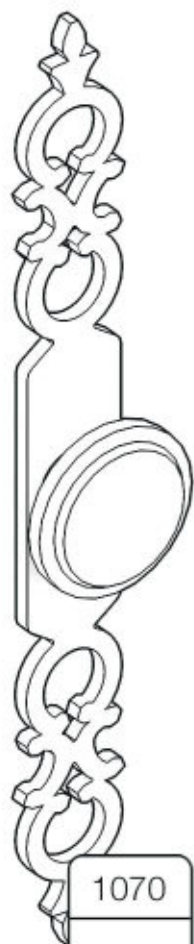

1070
2

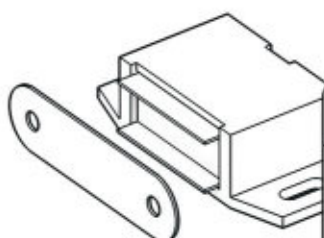 

1042
2



 
1013
18




1010
8




1040
8

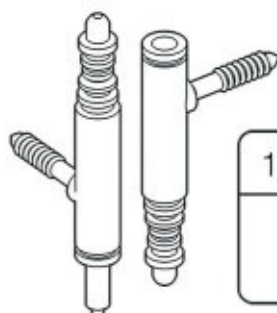


1072
4

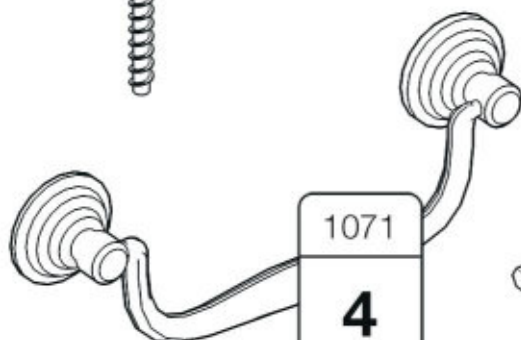 


1071
4


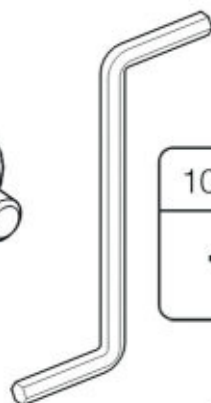 


1034
1

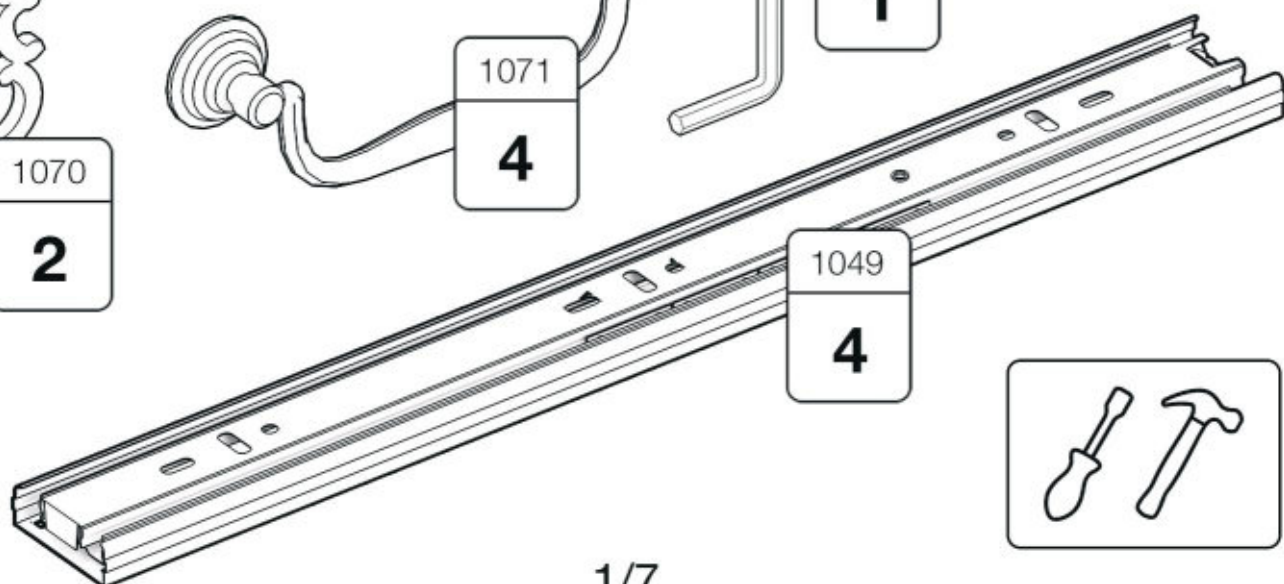 


1049
4



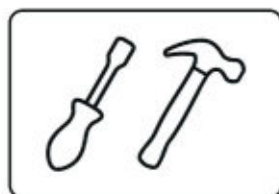 


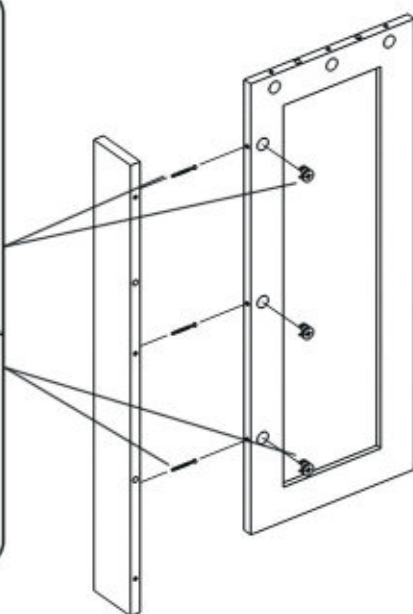 
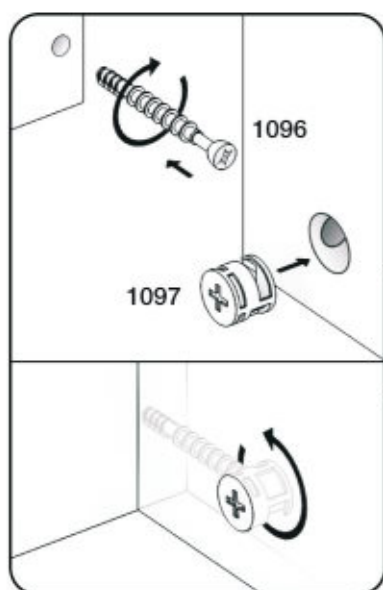 



1

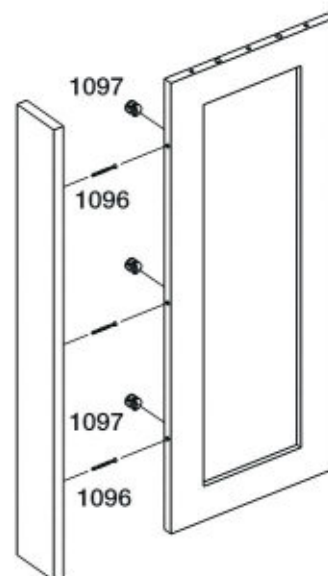 


2

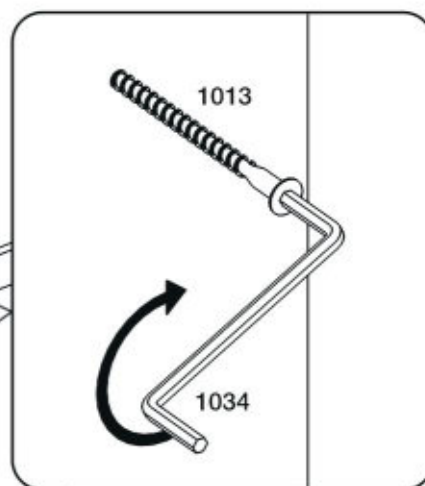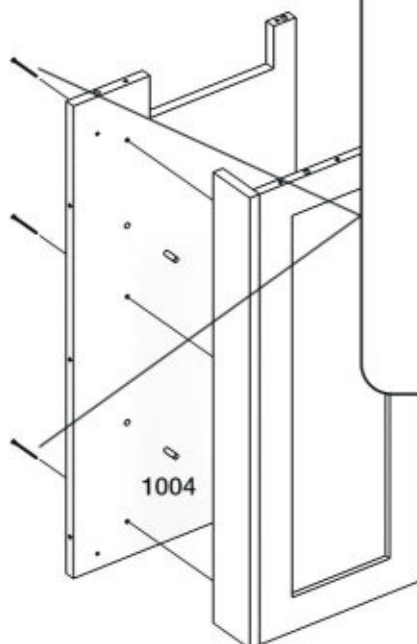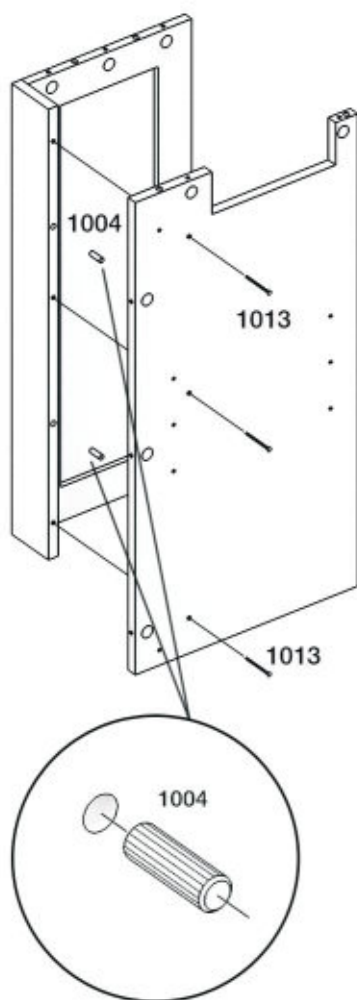   

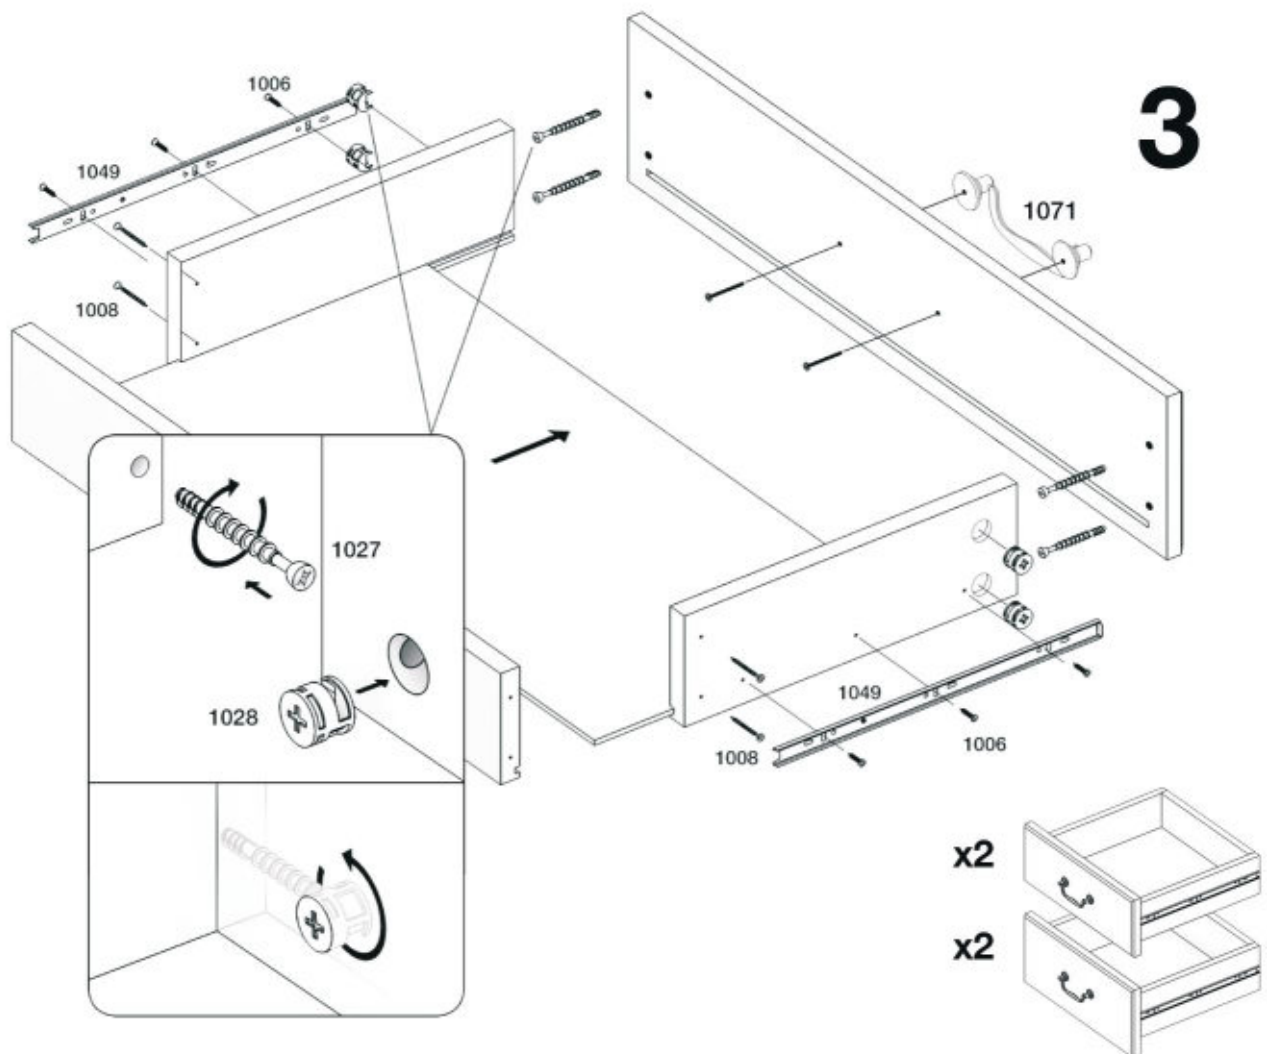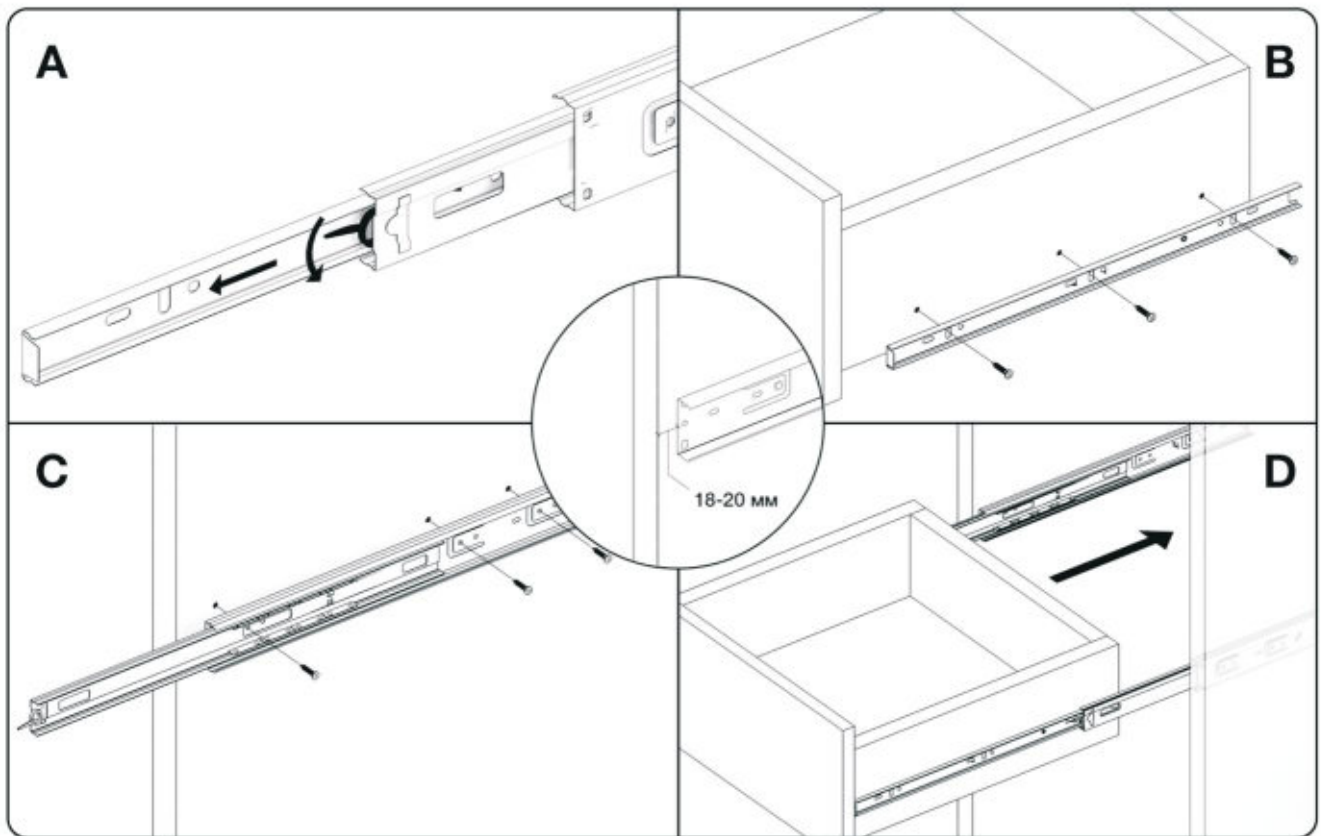  


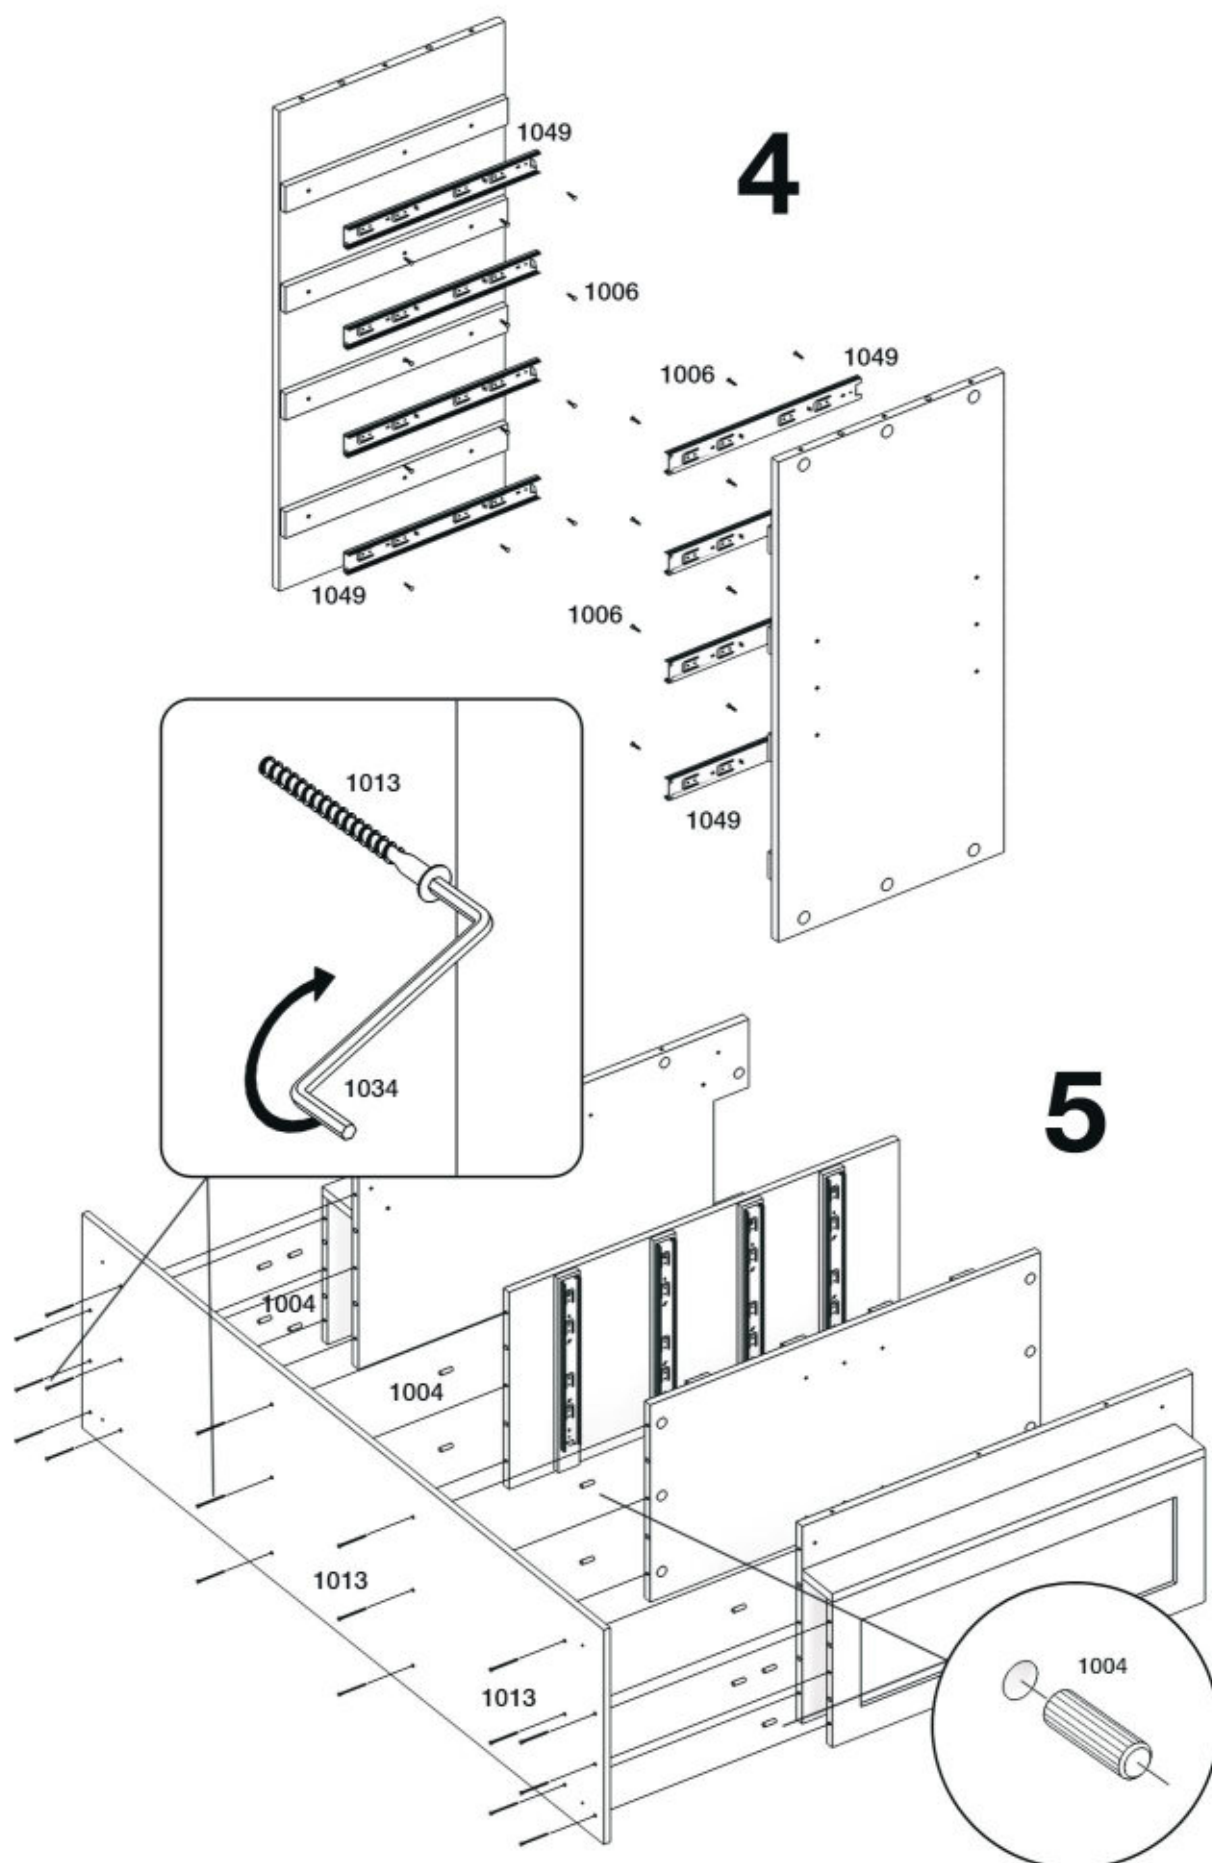 


6

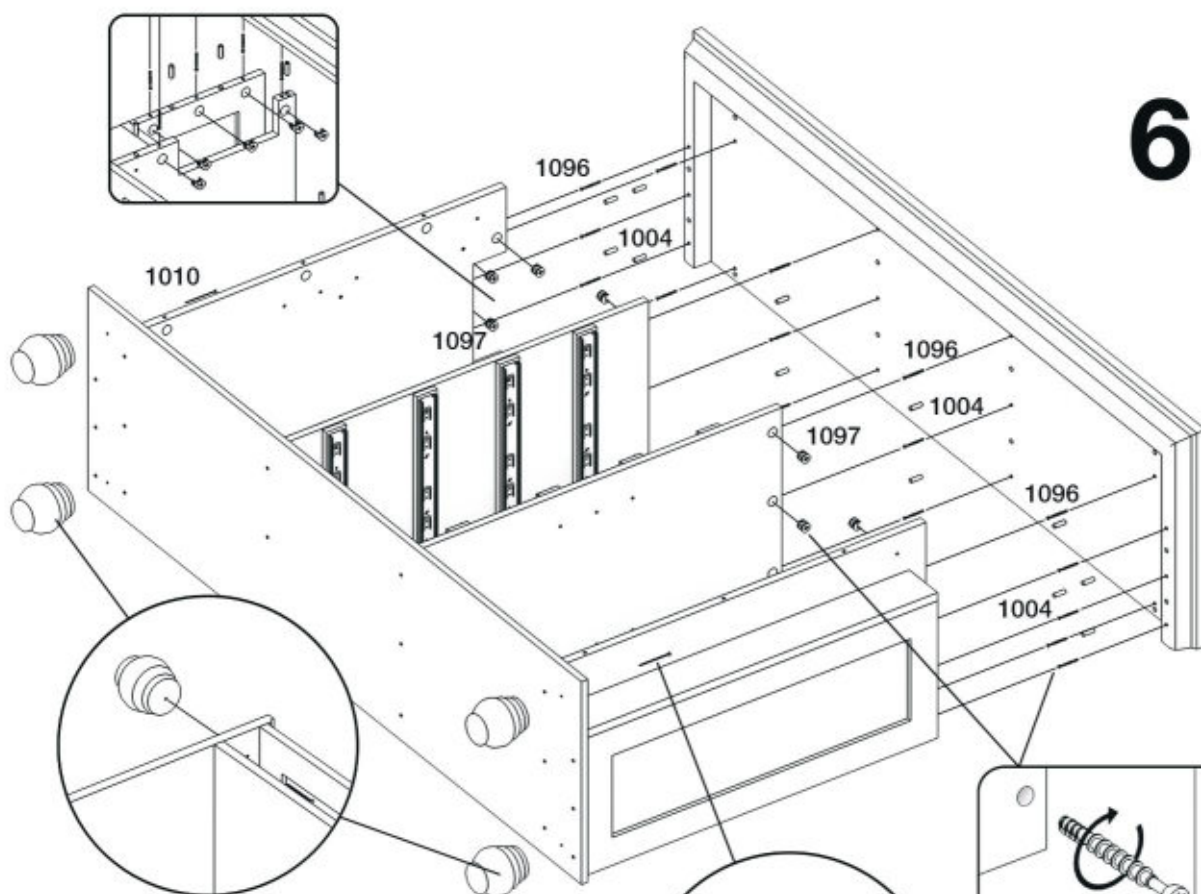 


7

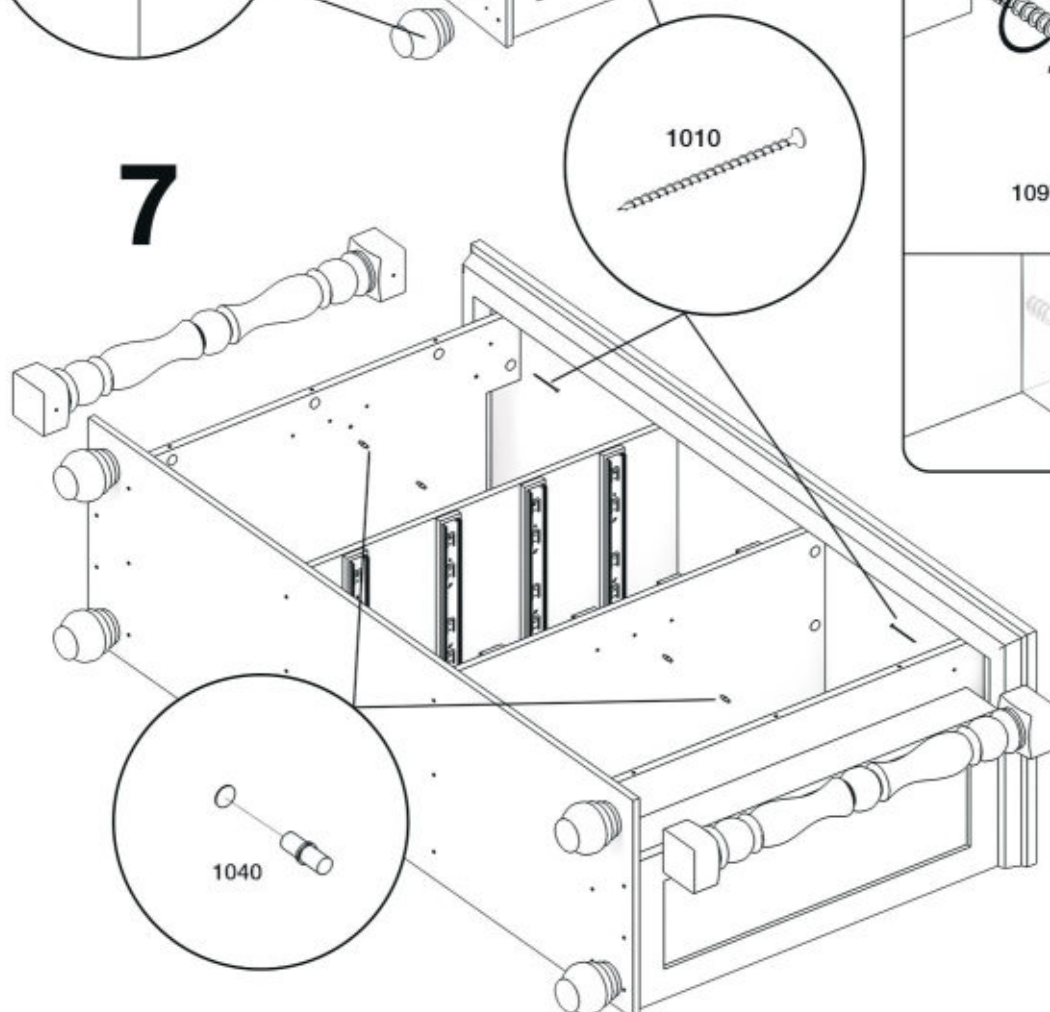 

8

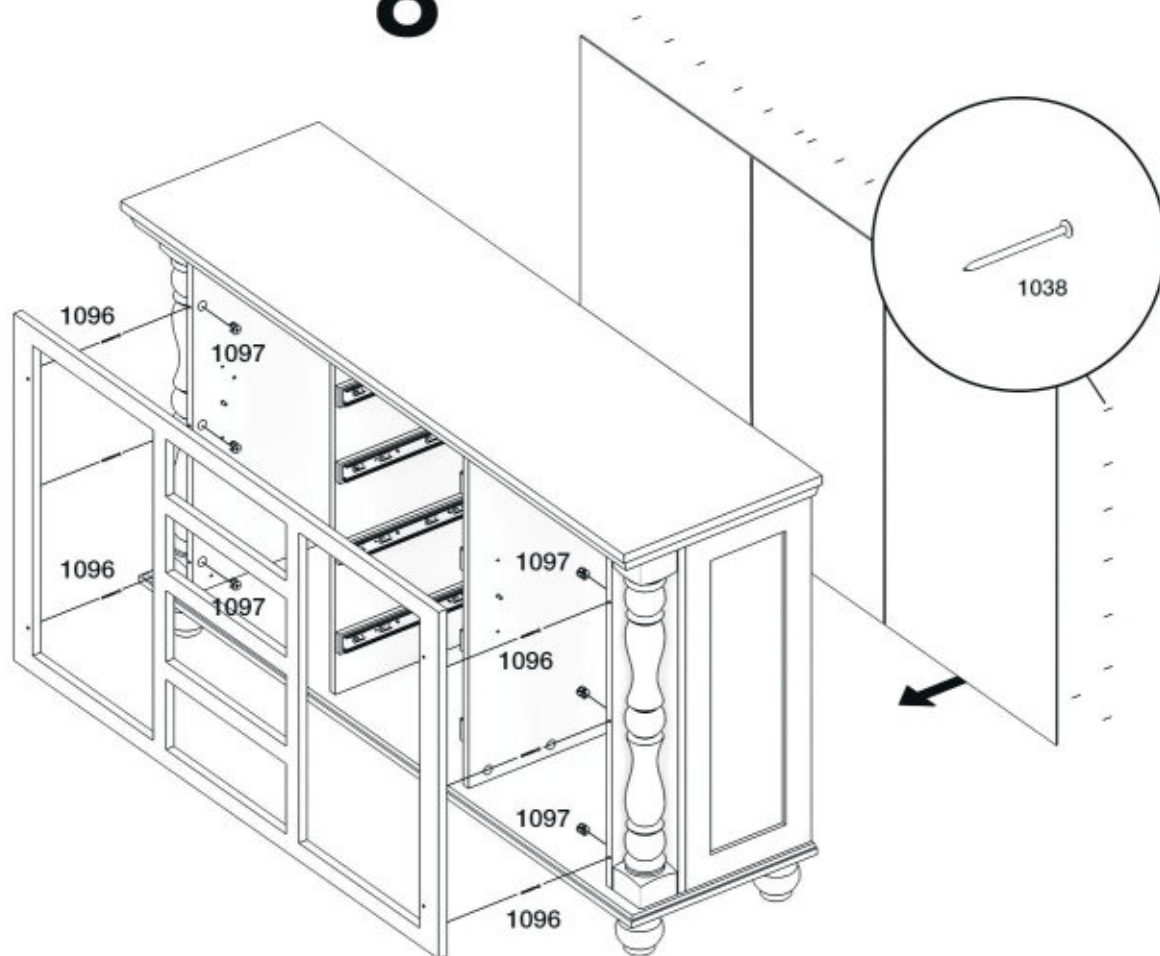 

9

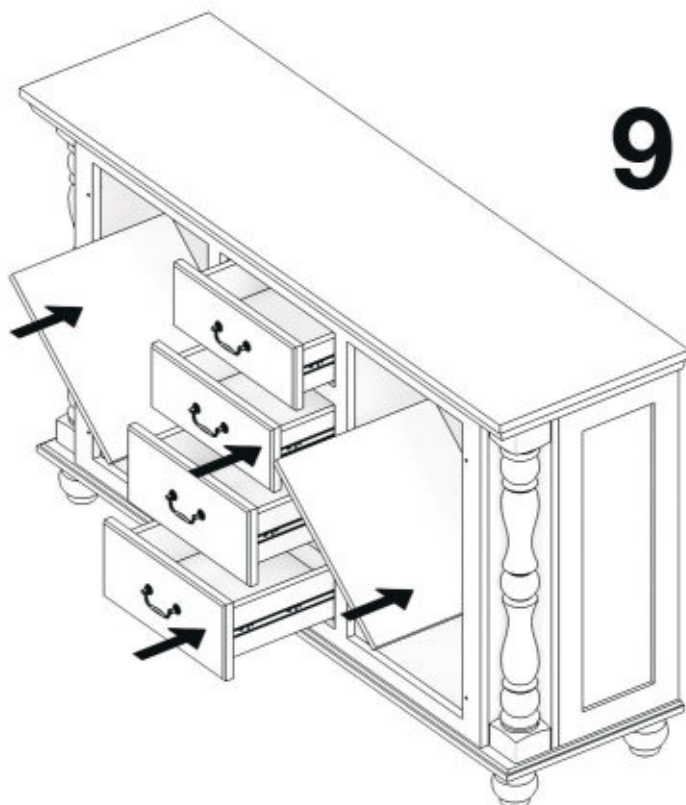 

10

