 


1-18

1-29, 1-39, 1-57, 1-59
2-5, 2-32, 2-53, 2-60, 2-70

Низ / Bottom / Alapuoli

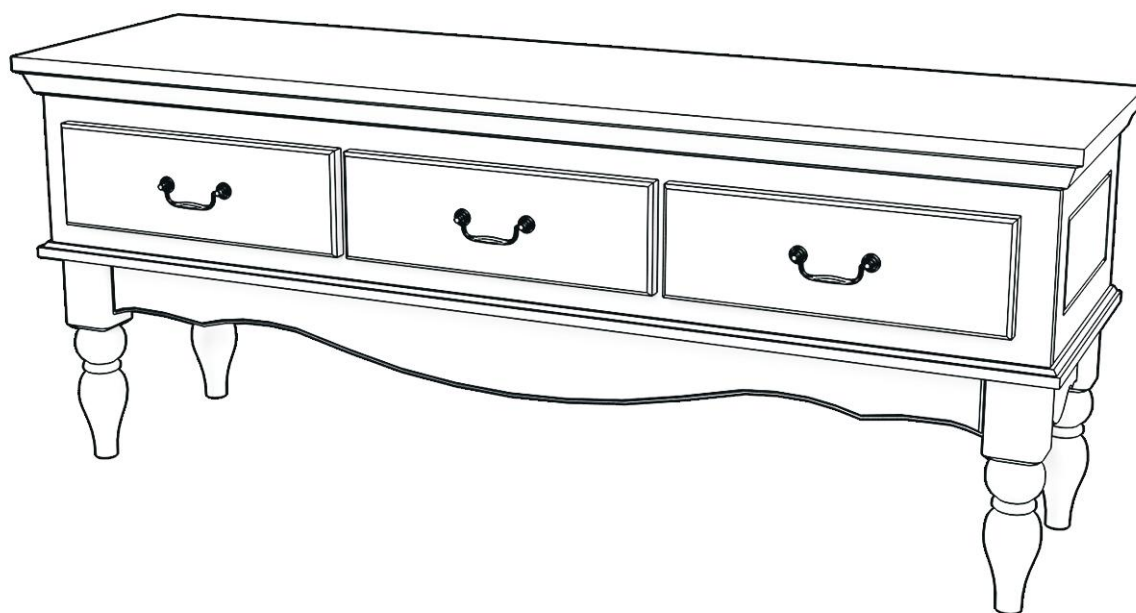

RU Инструкция по сборке

EN Assembly instruction

FI Koontaohje



1006
60



1038
30



1004
28



1008
18



1096
16



 
 
1097
16




1027
12




1028
12

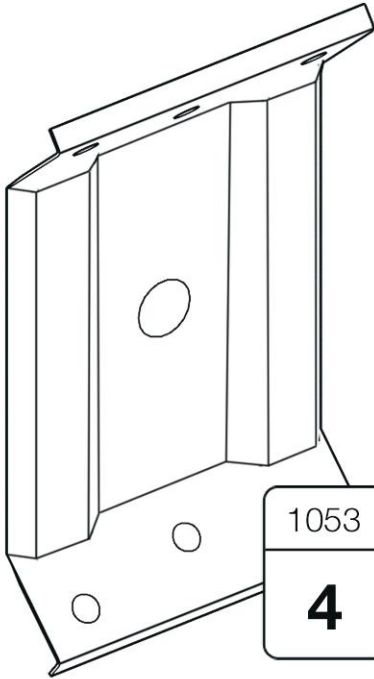


1053
4


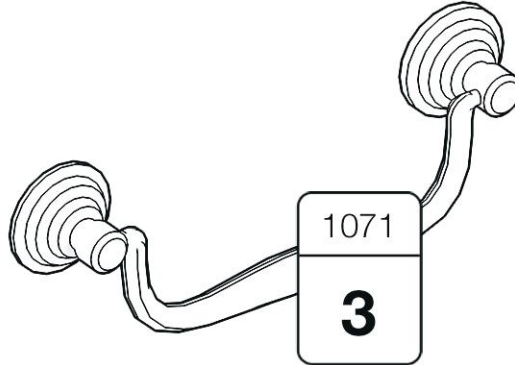 




1071
3


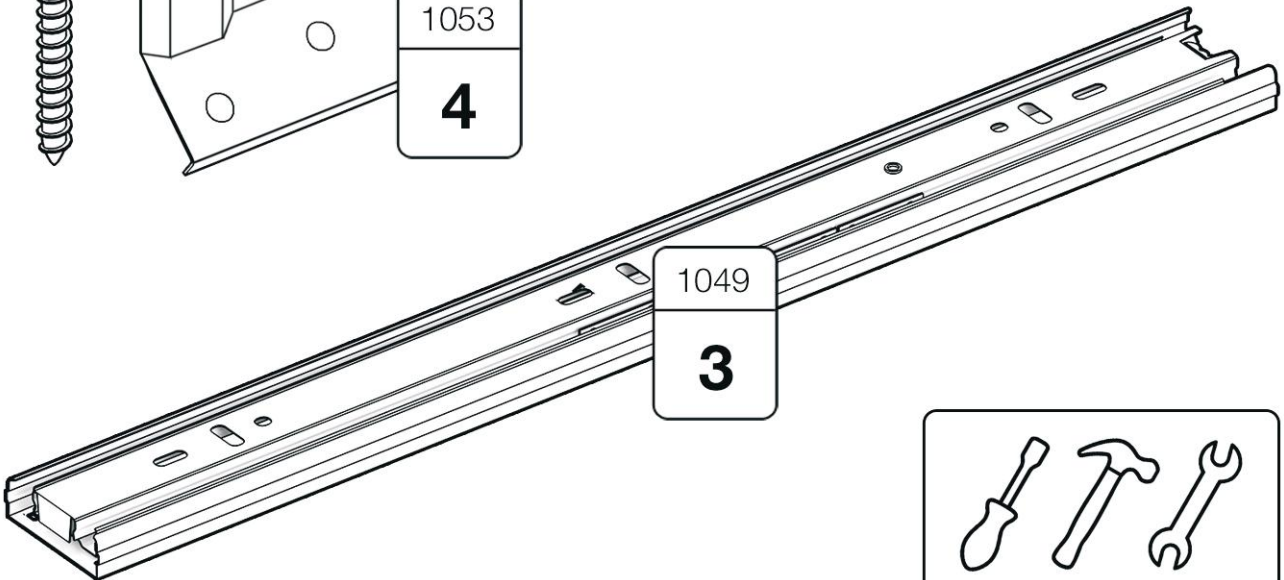 


1049
3

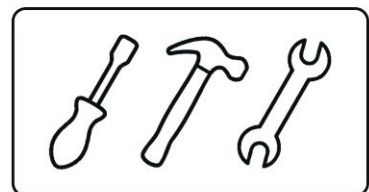 


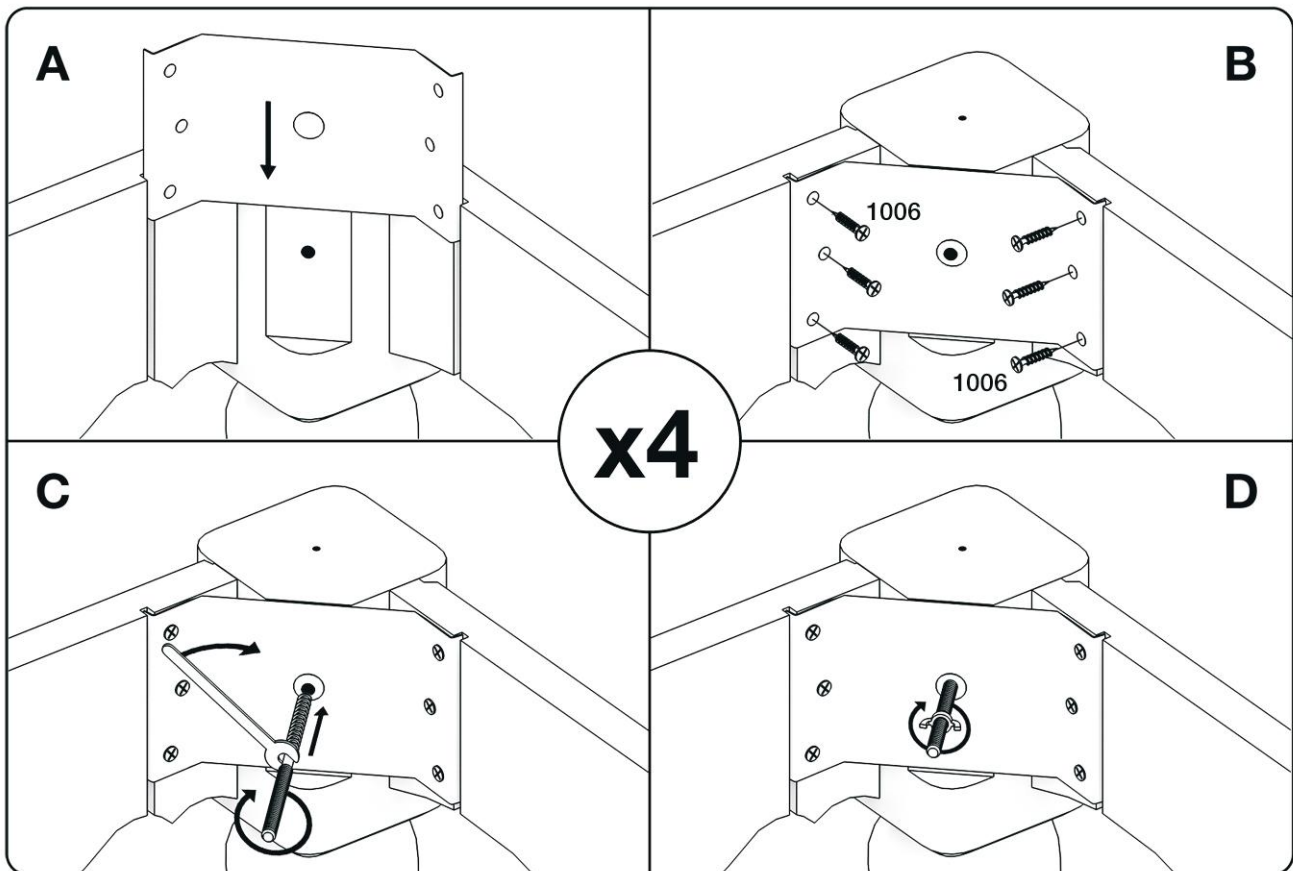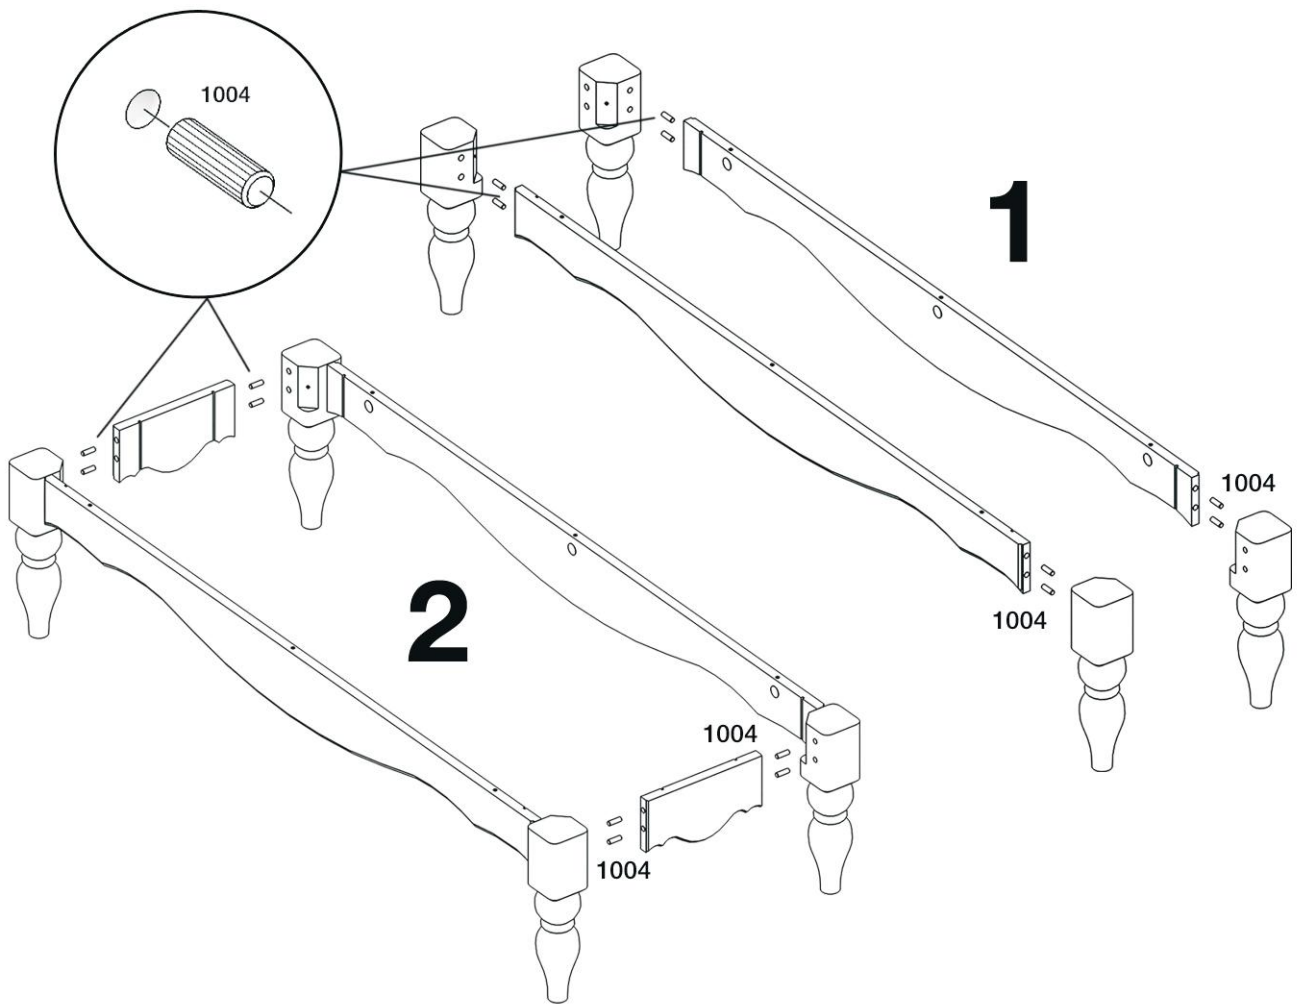  

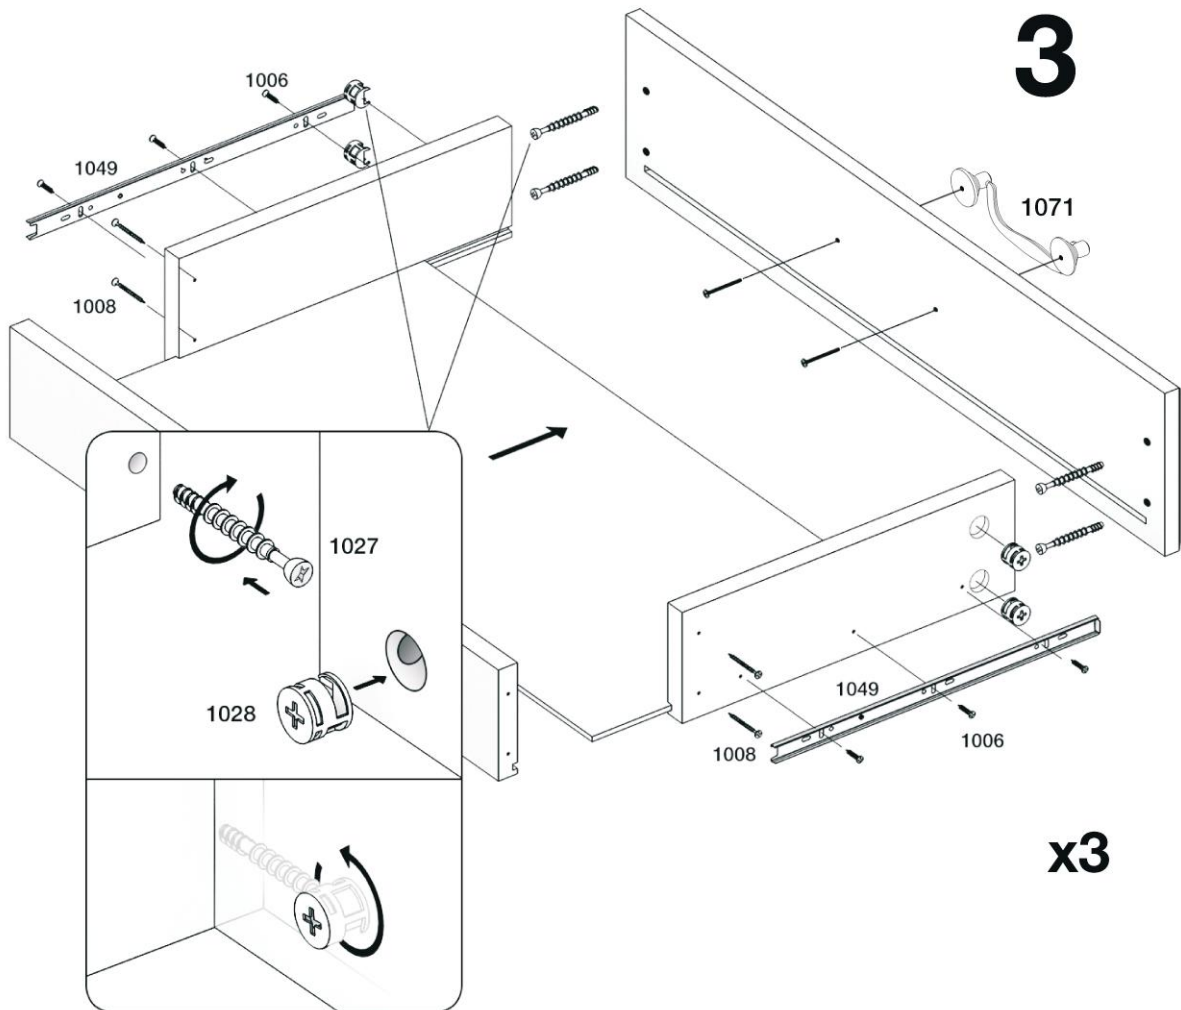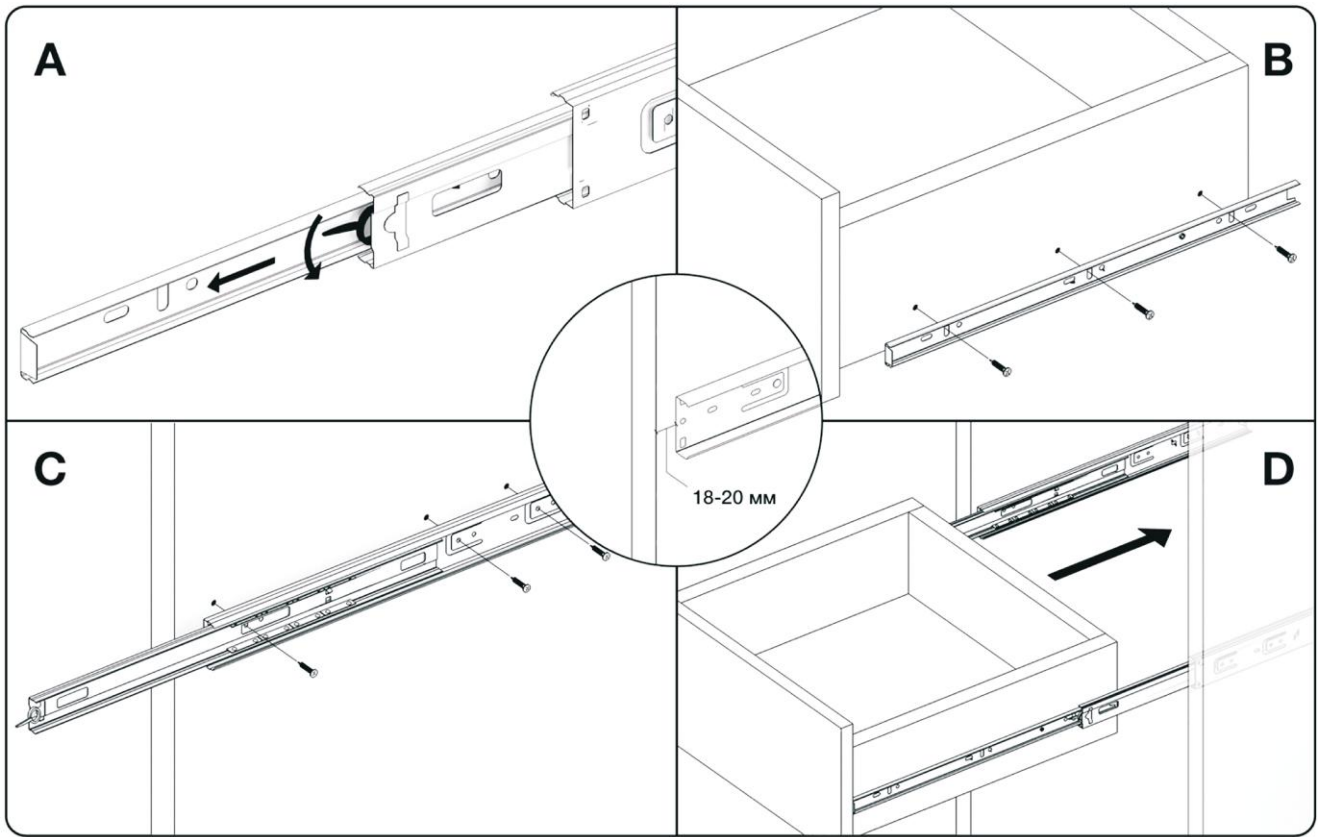  

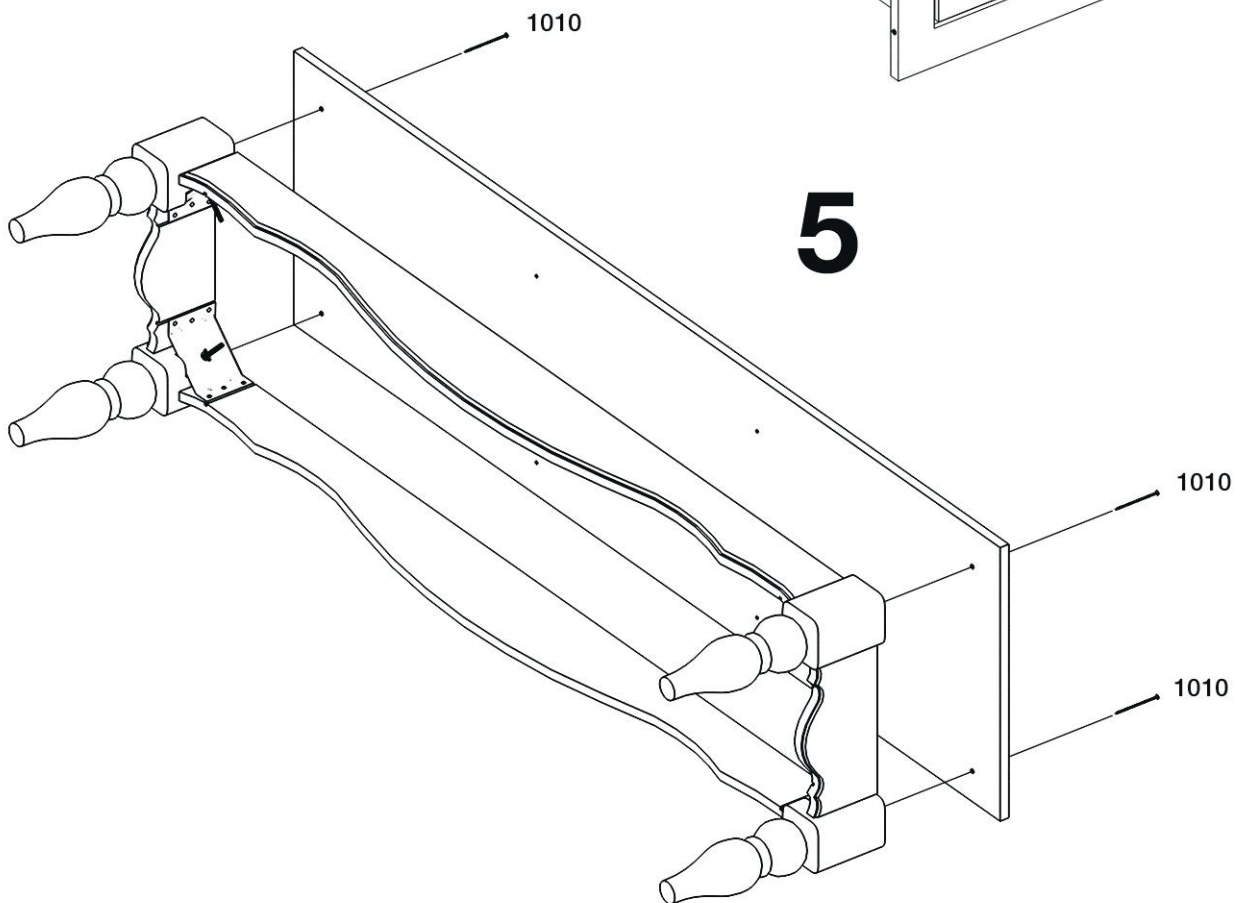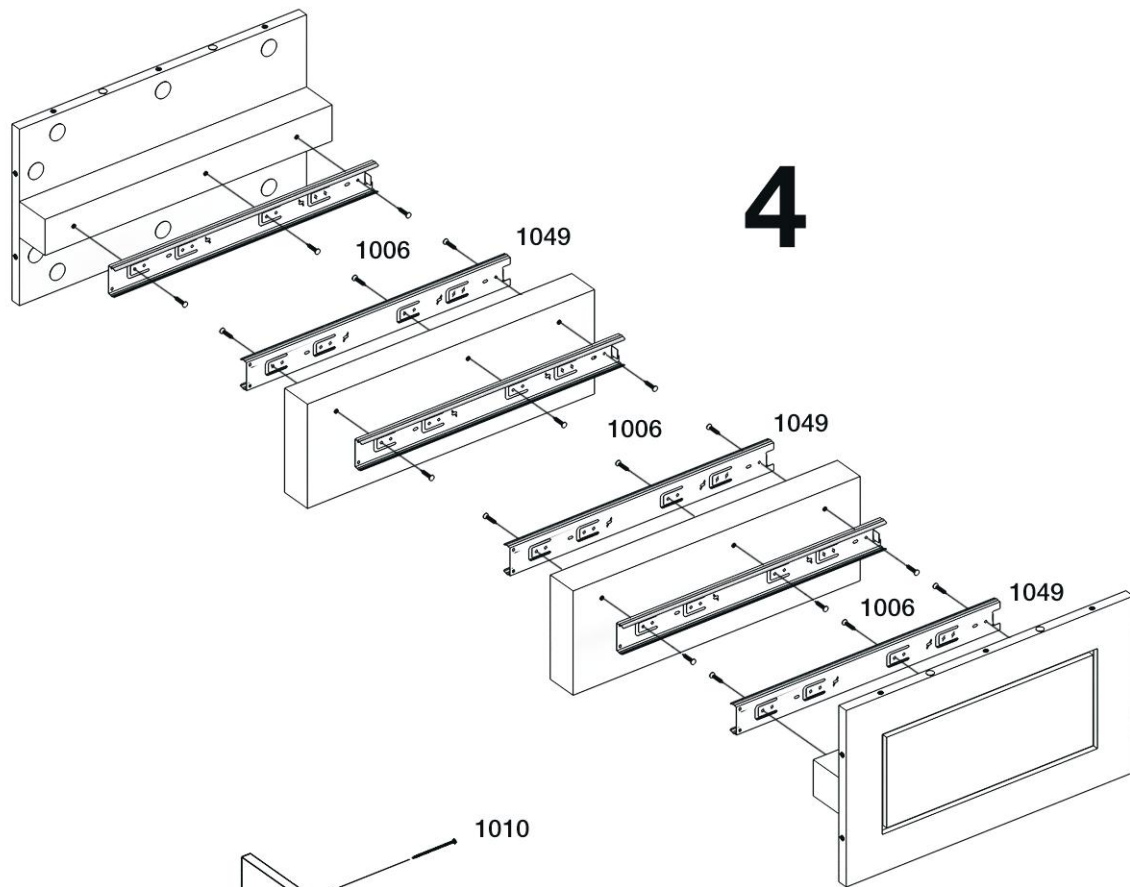  

6

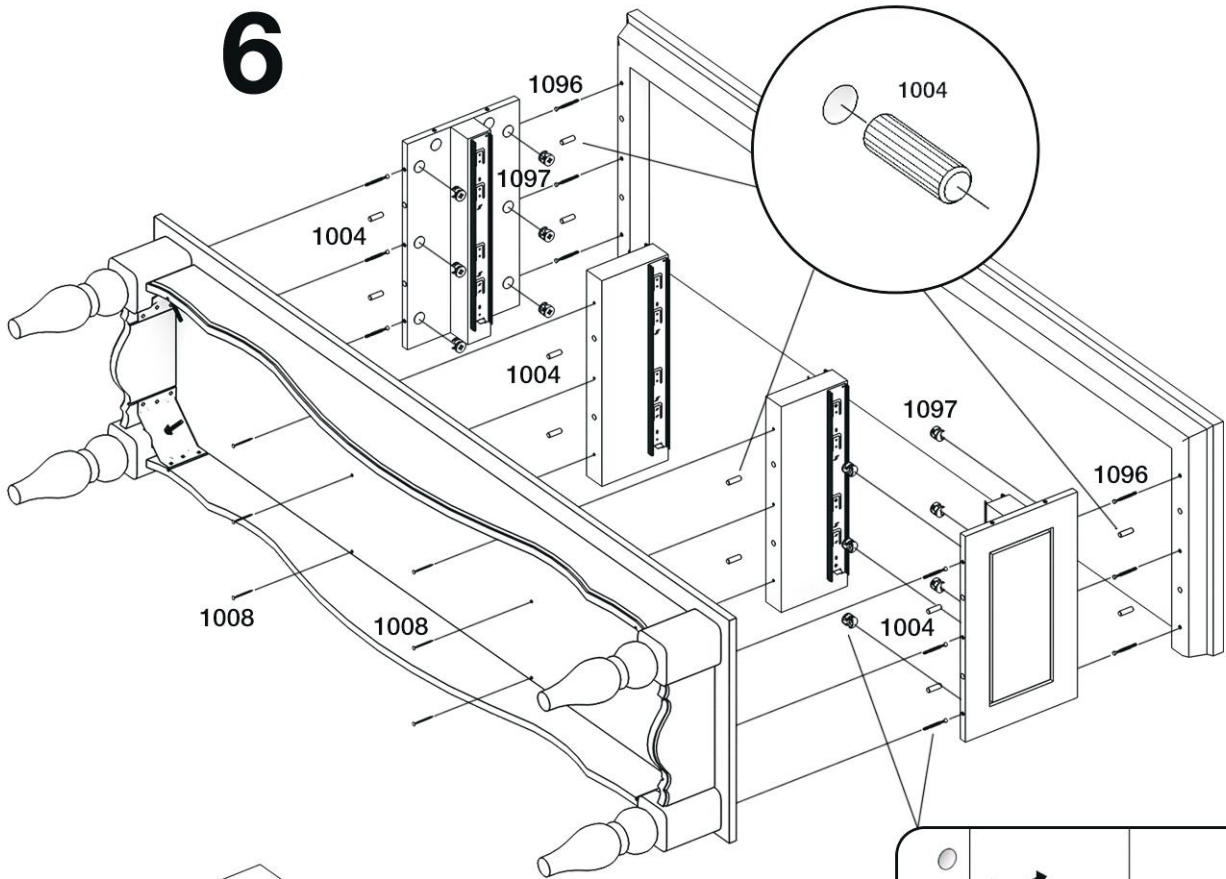 

7

