 



2-17



2-20, 2-21, 2-22, 2-23, 2-24



Низ / Bottom / Alapuoli


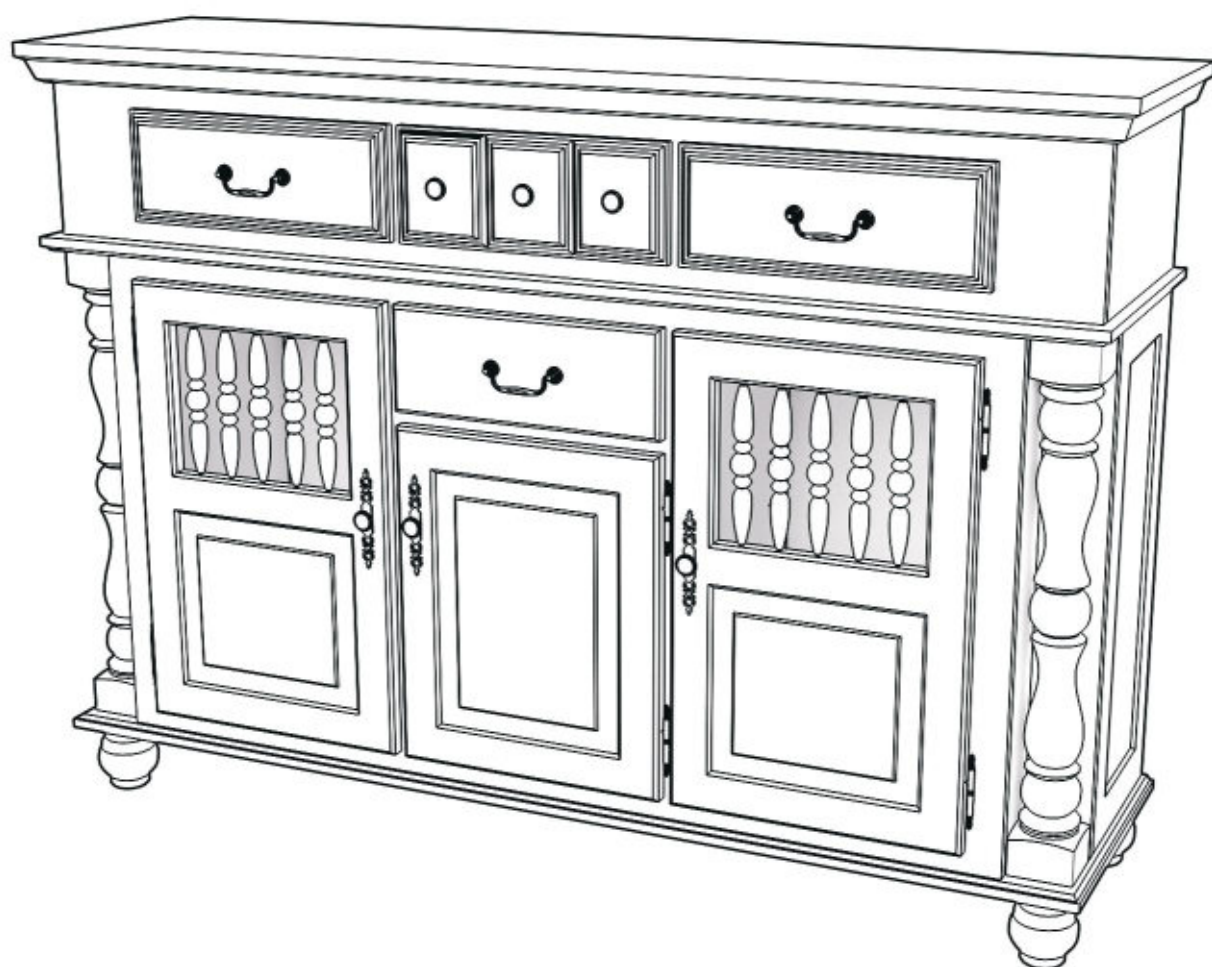


       - RU** Инструкция по сборке
- EN** Assembly instruction
- FI** Koontaohje

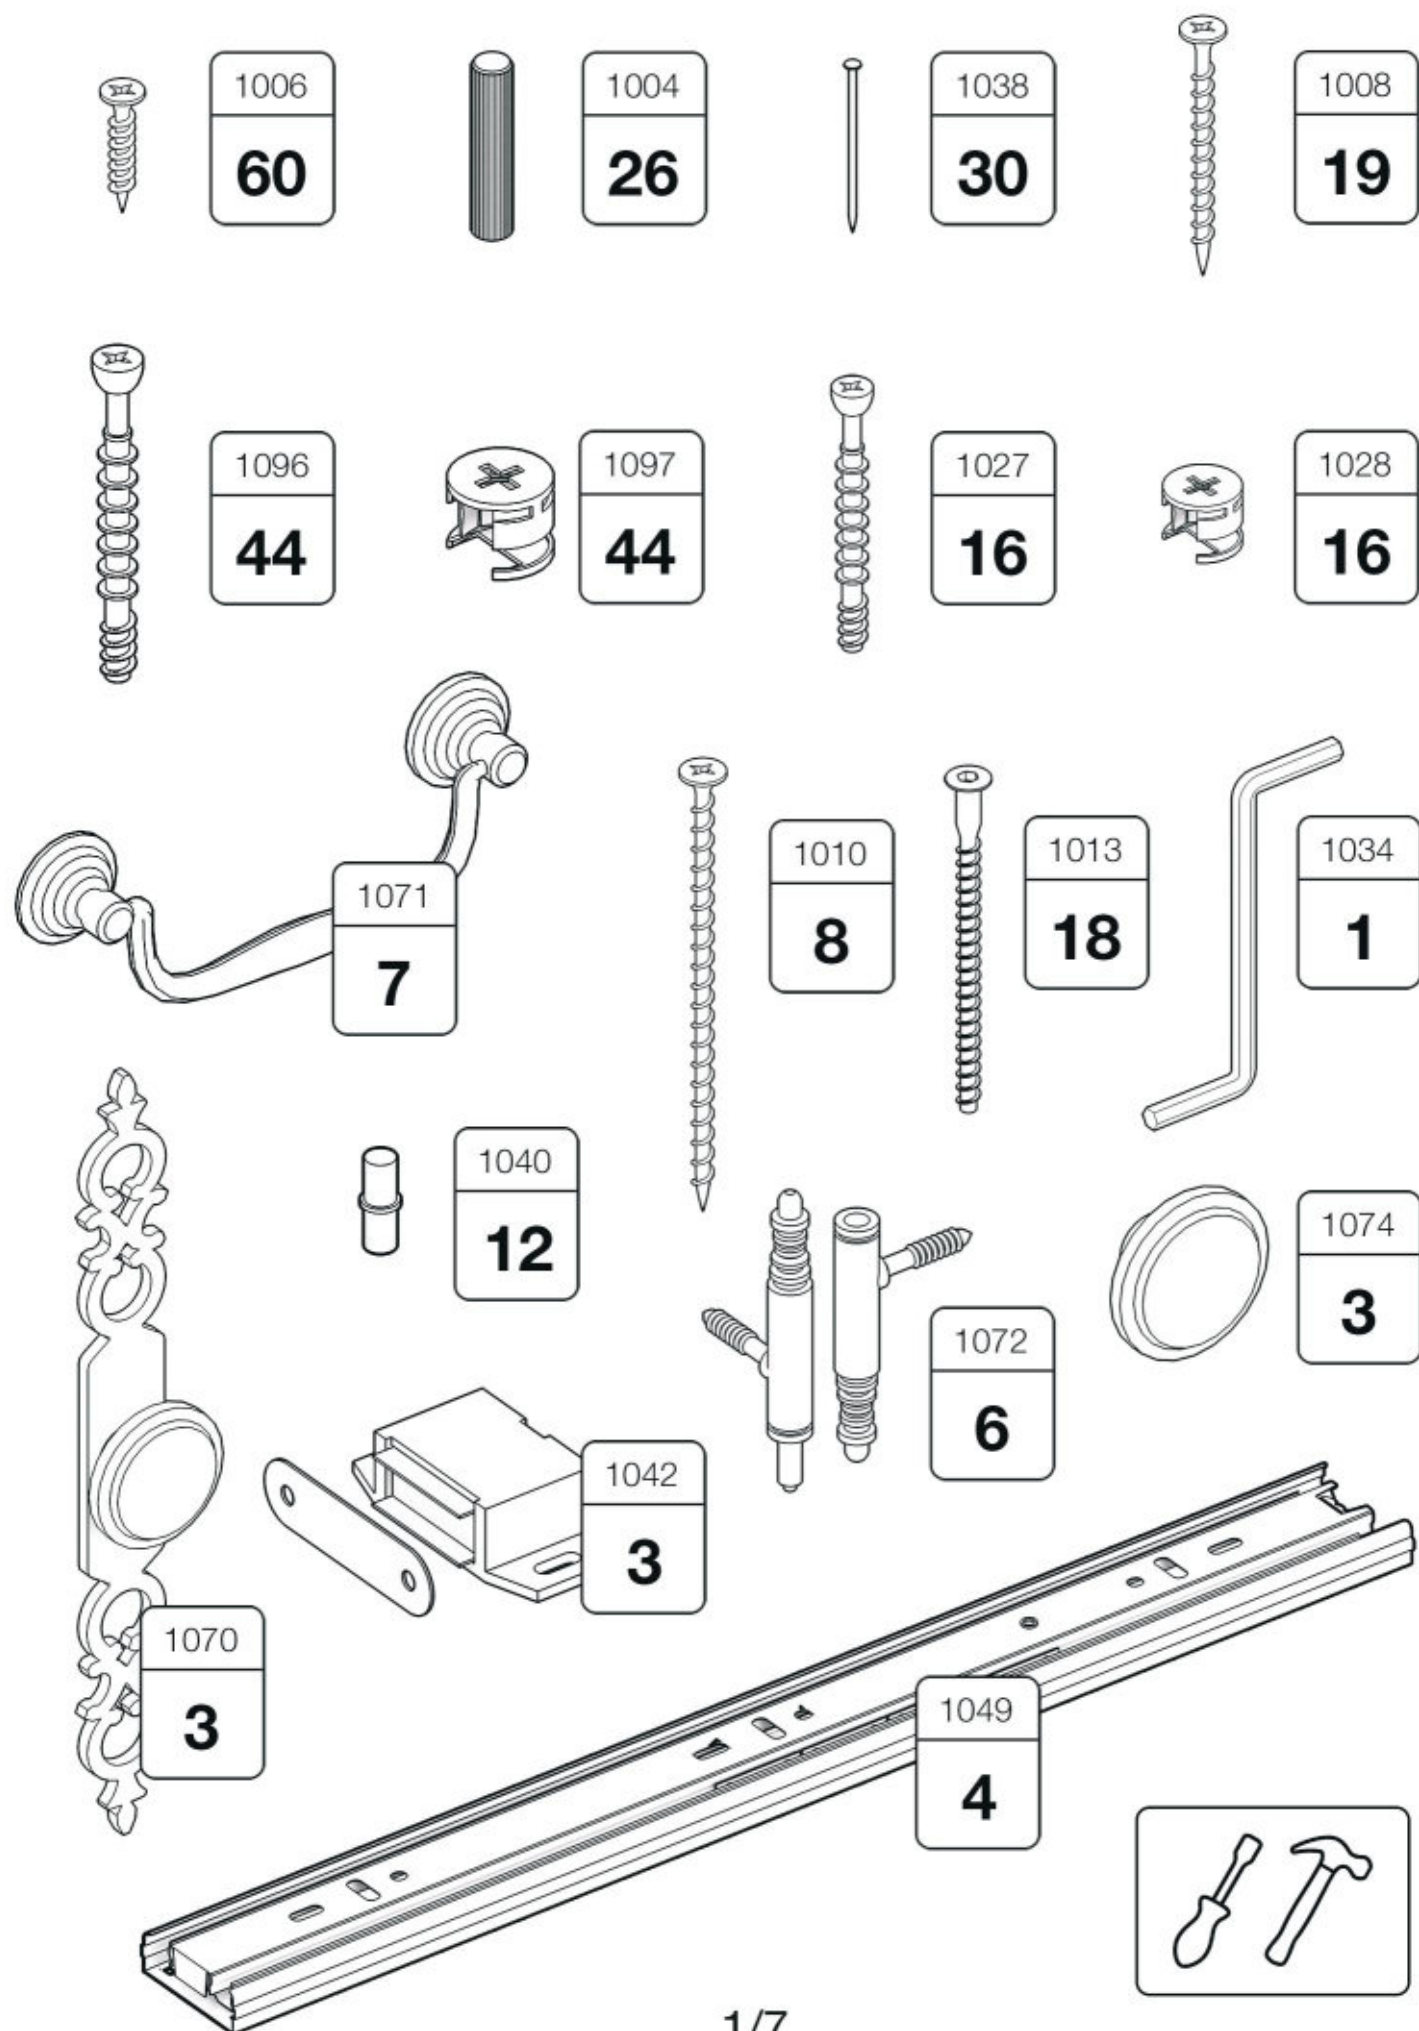


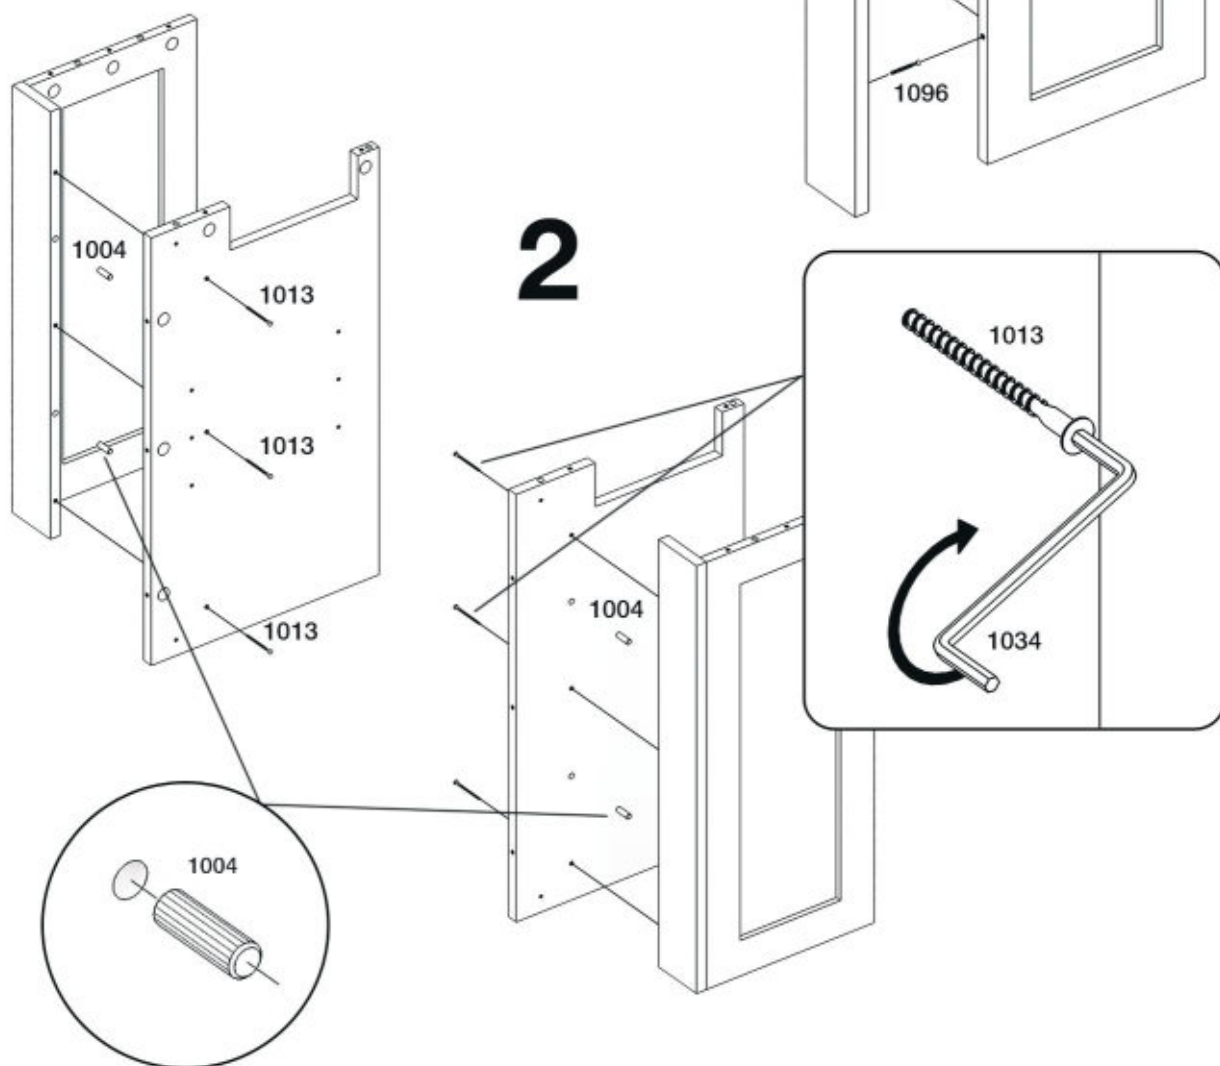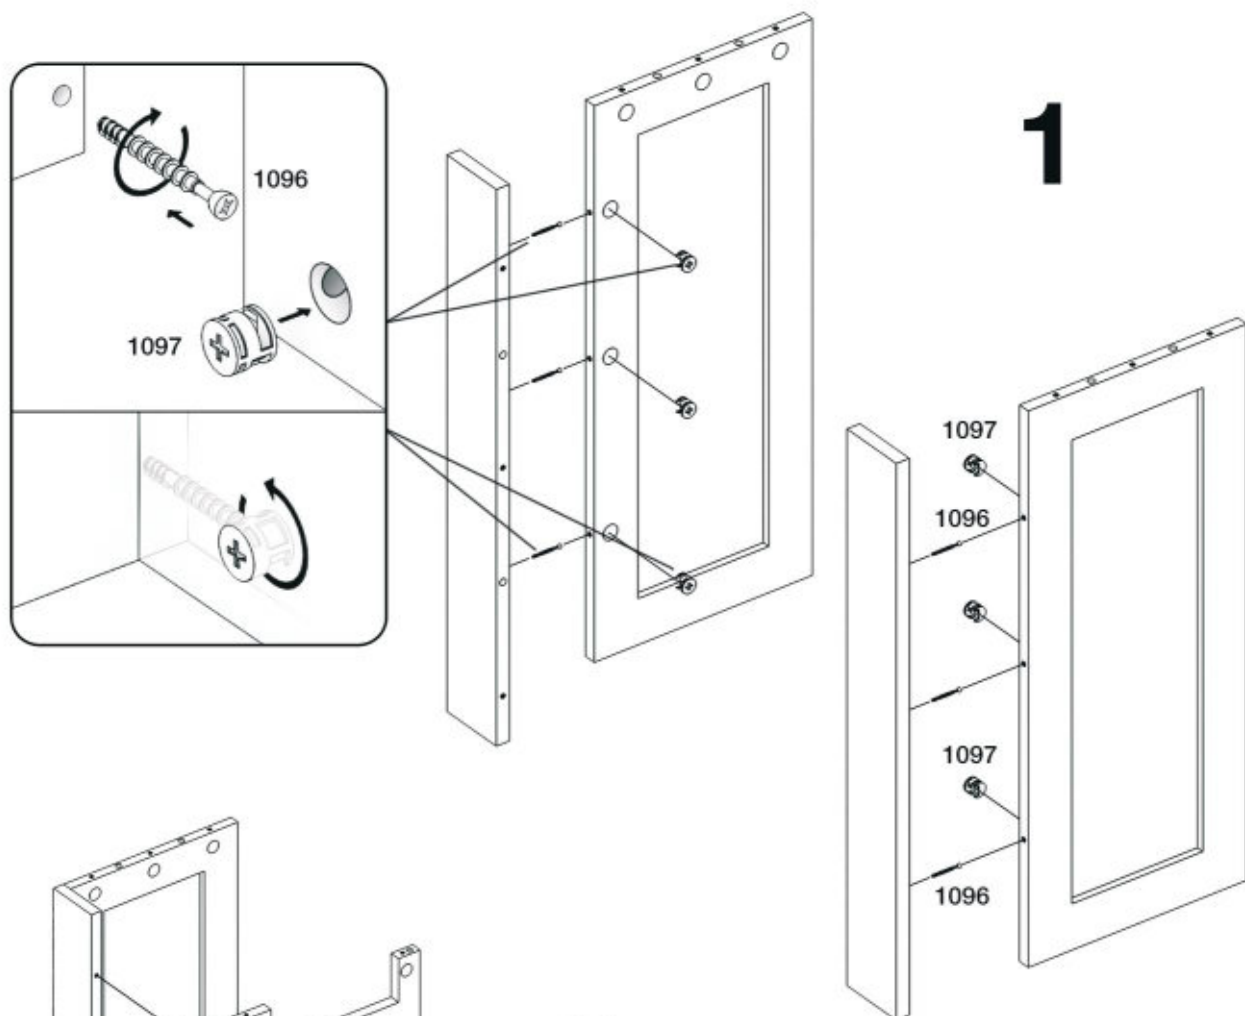

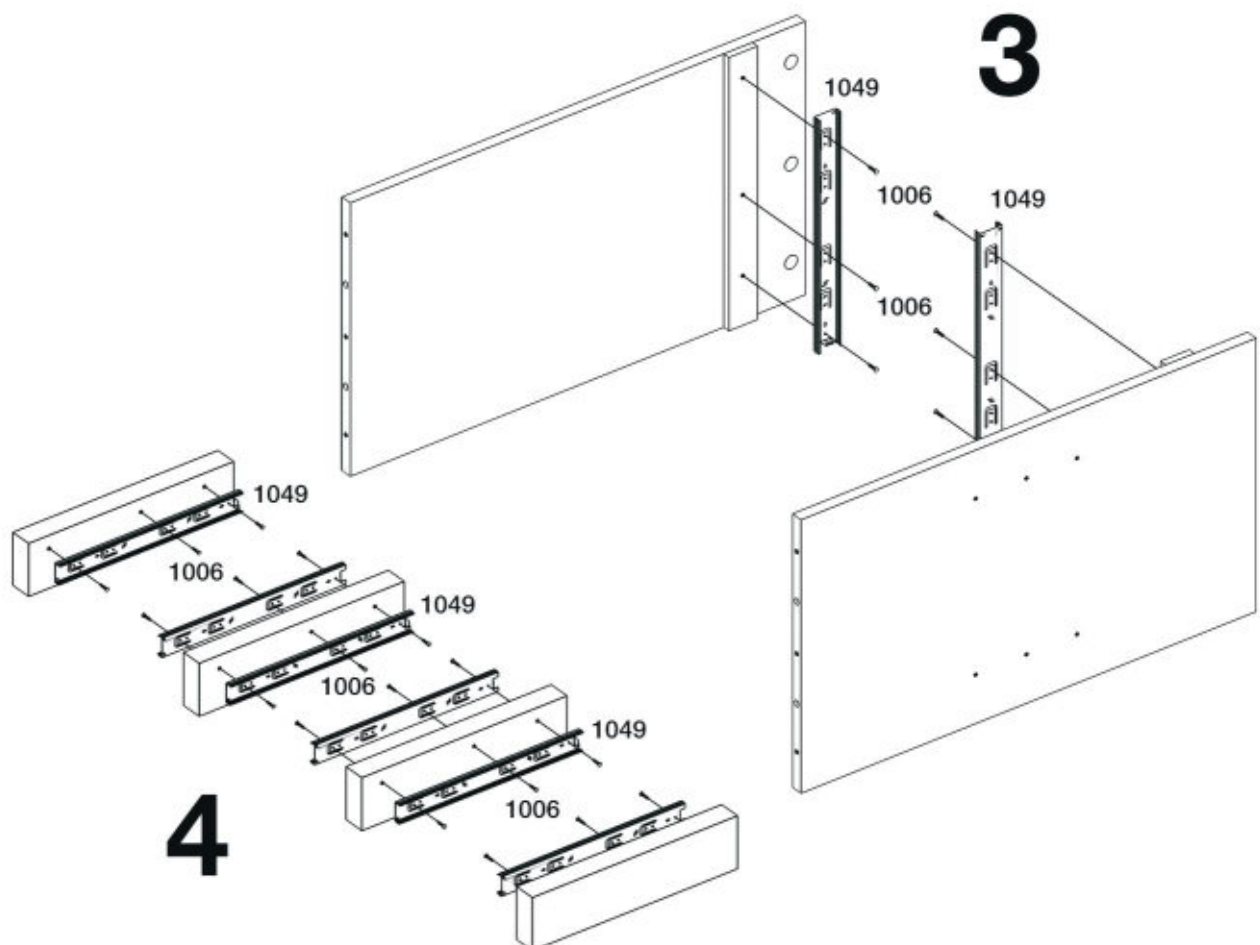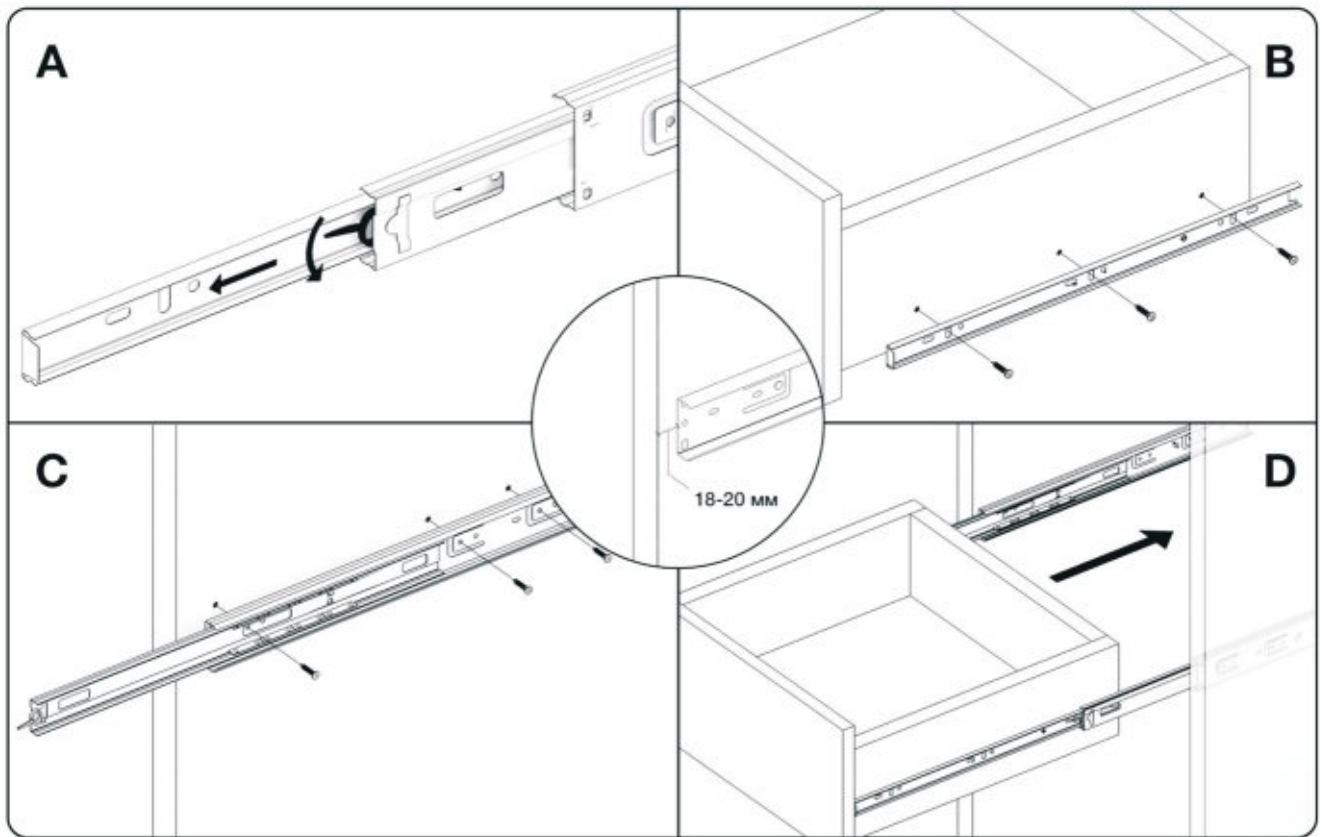


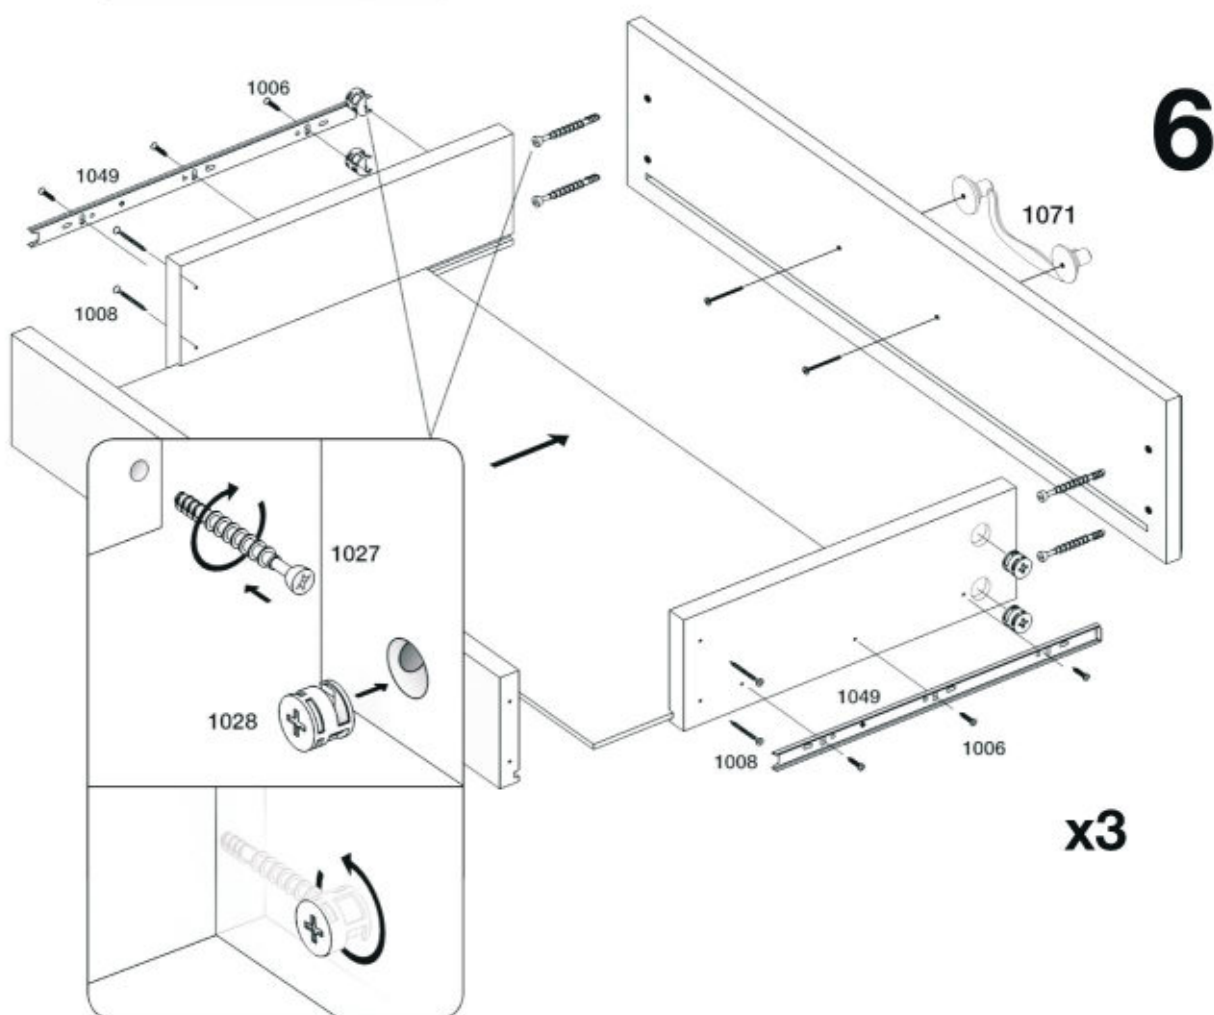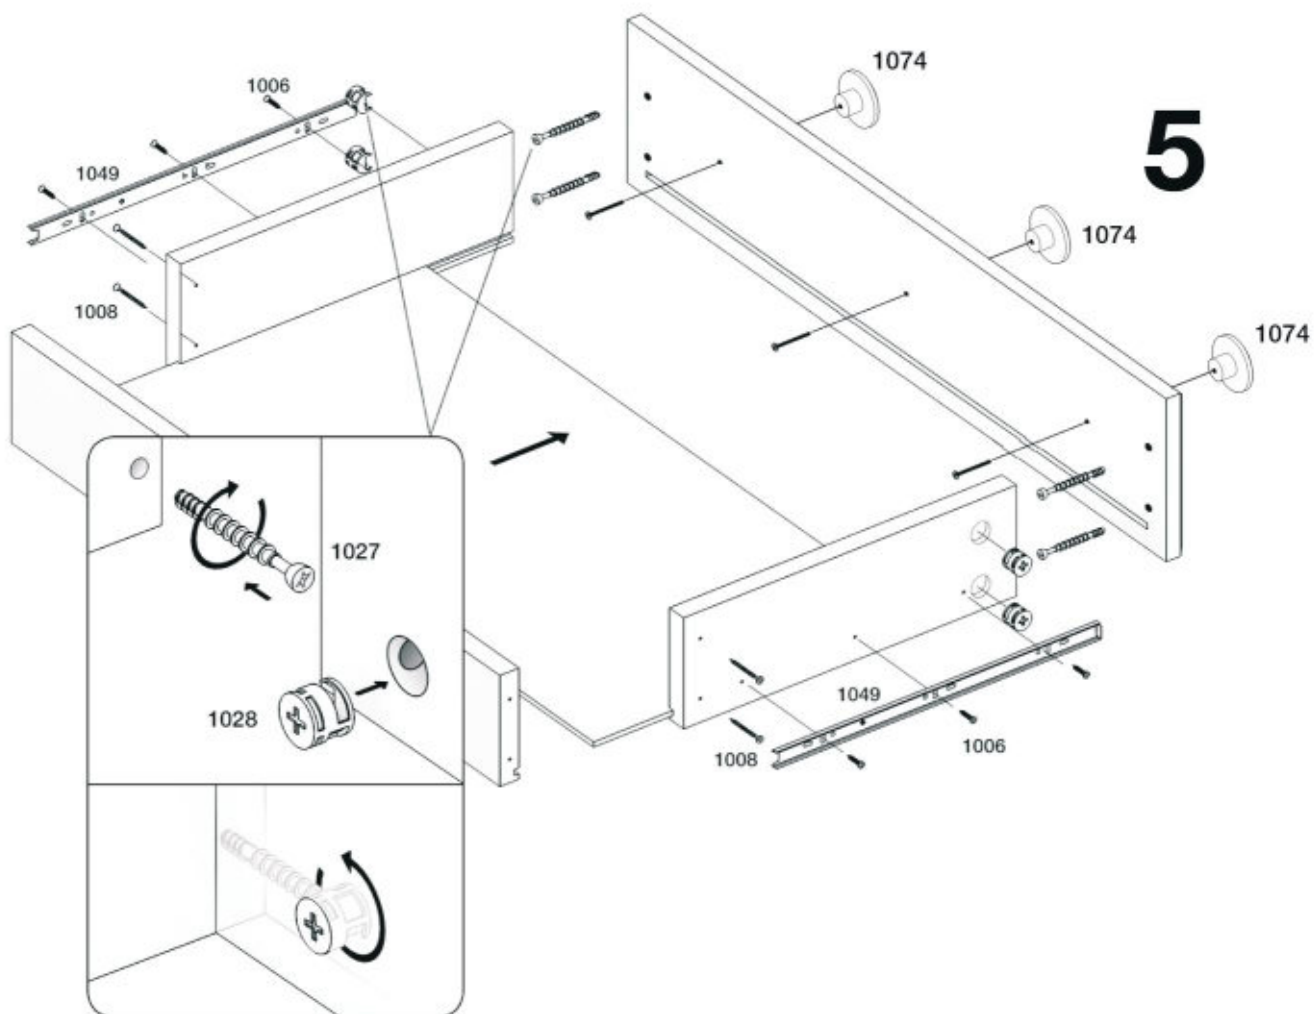


7

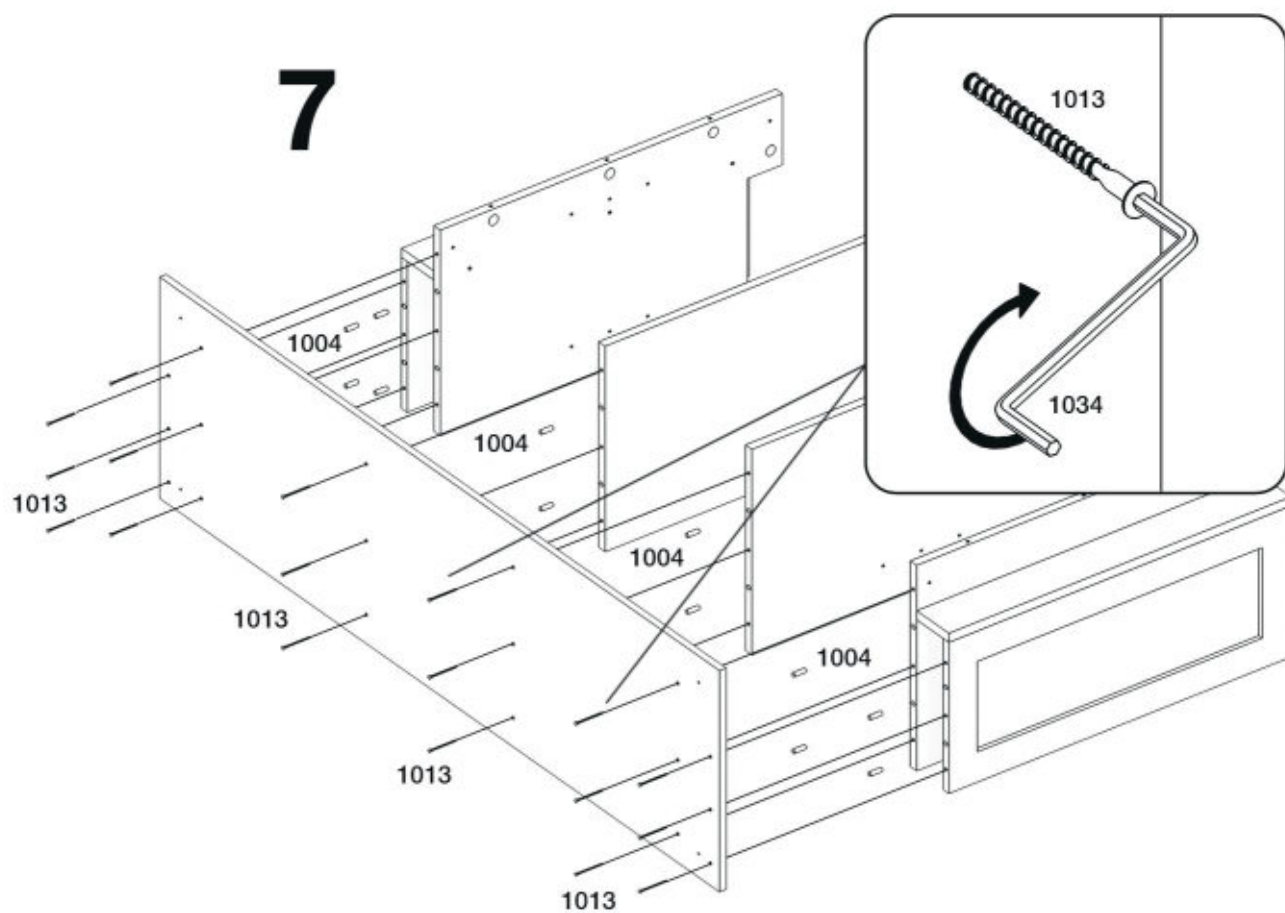 

8

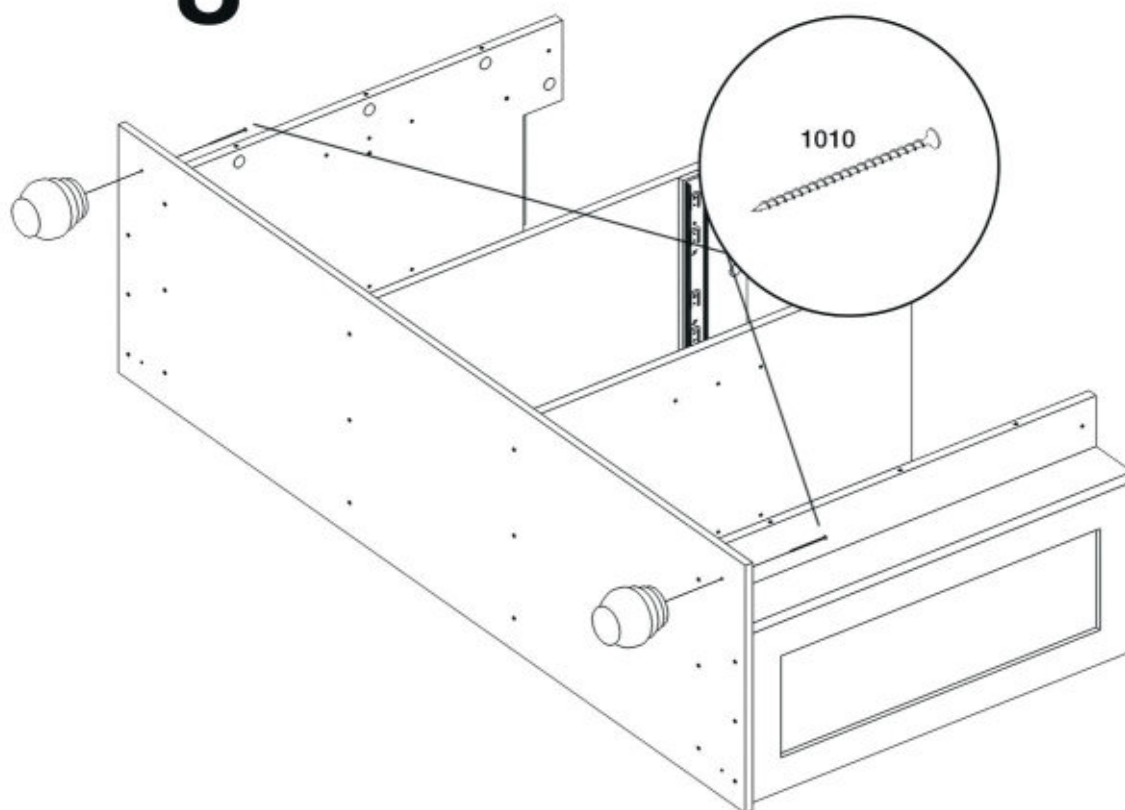 


9

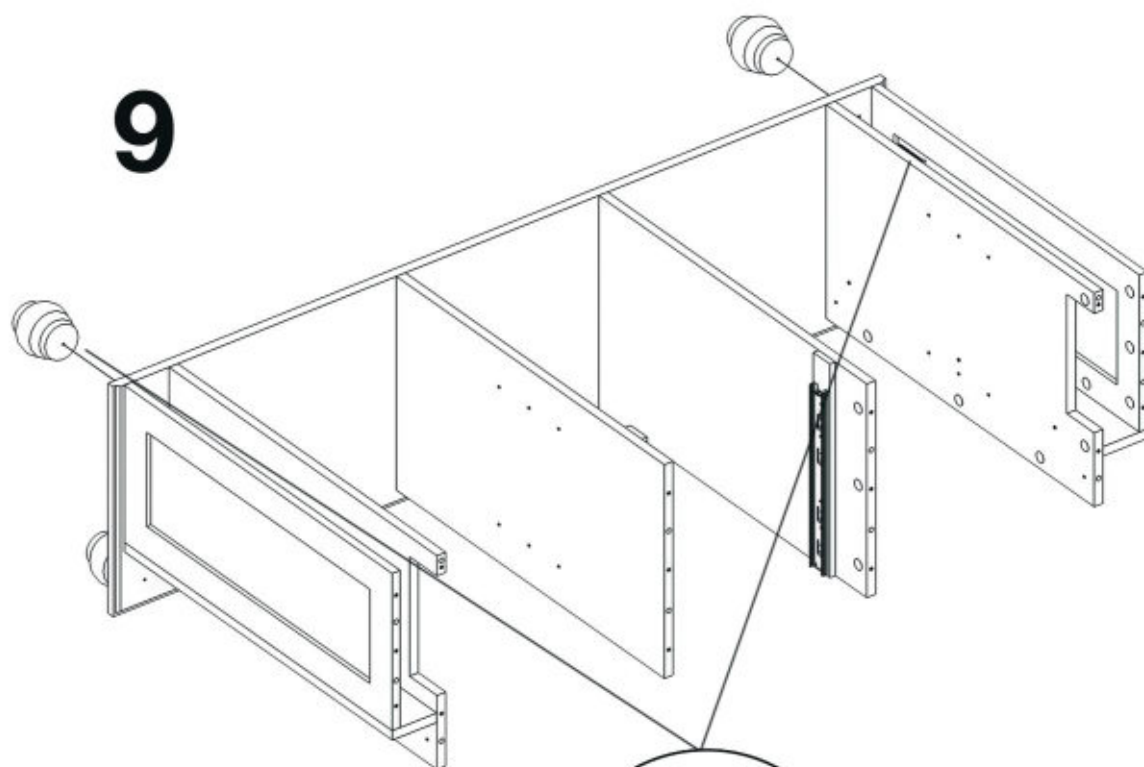 

1010




 
10

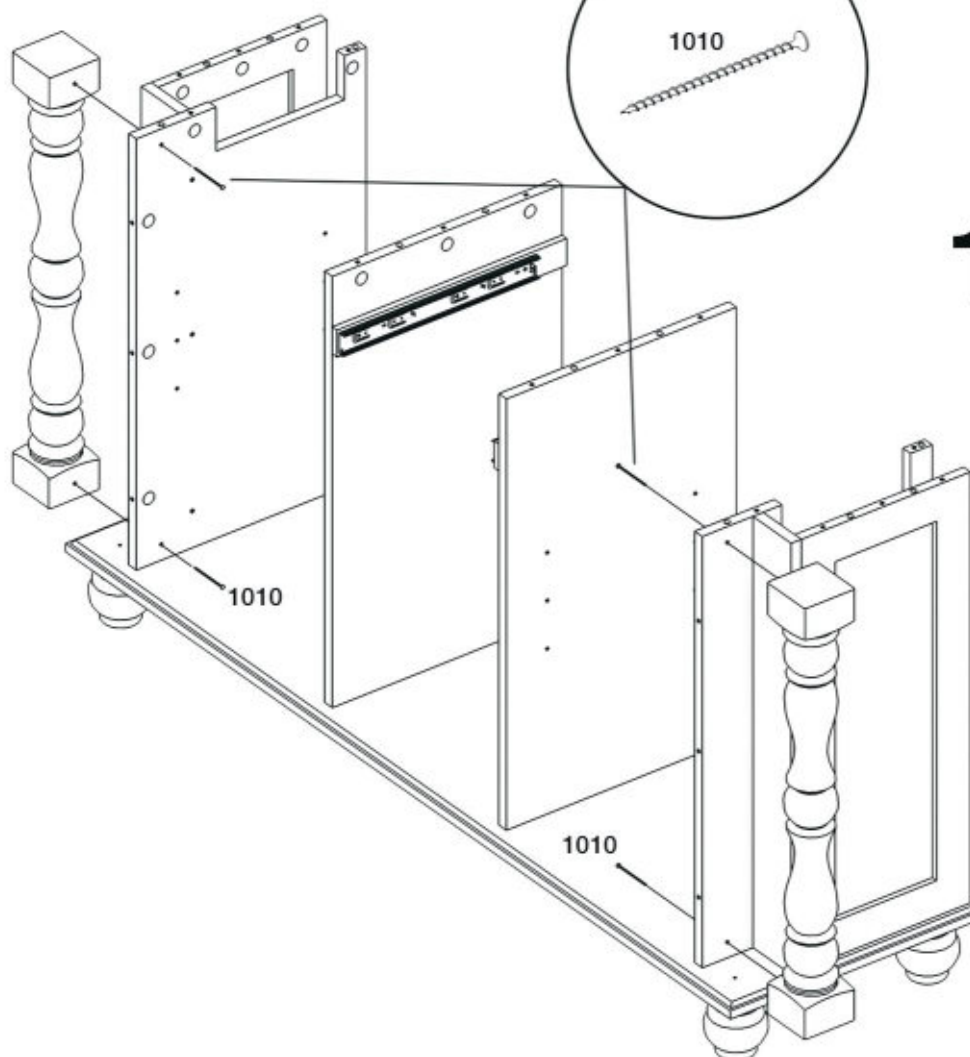


1010



1010

  11

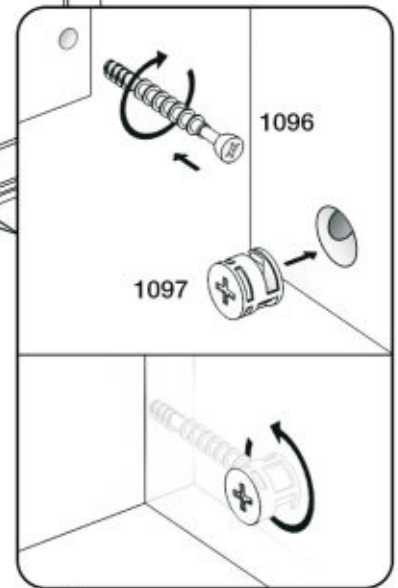
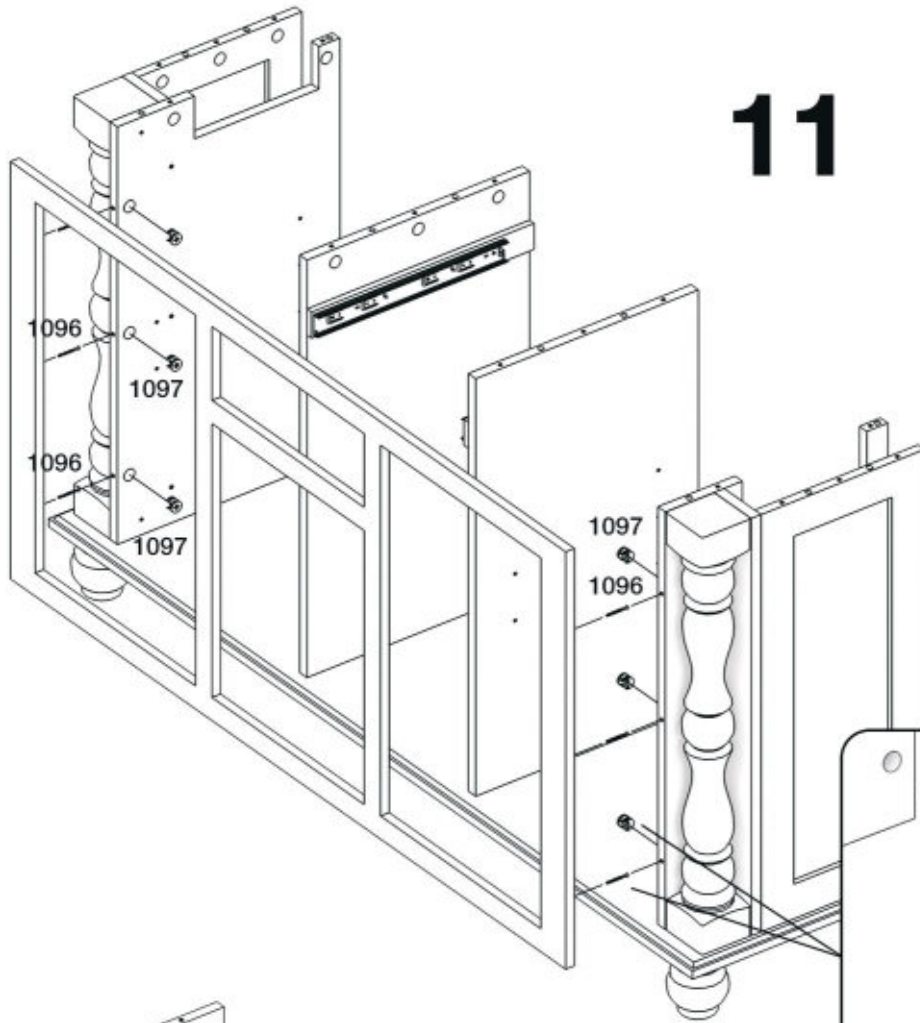


12


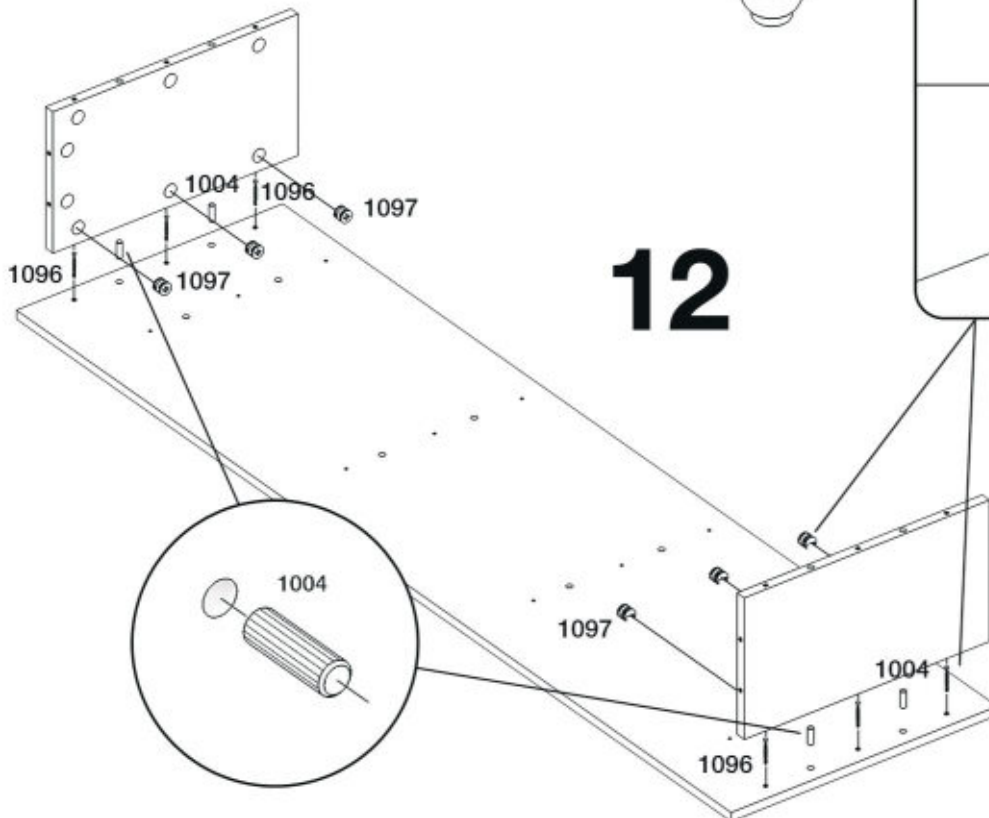 


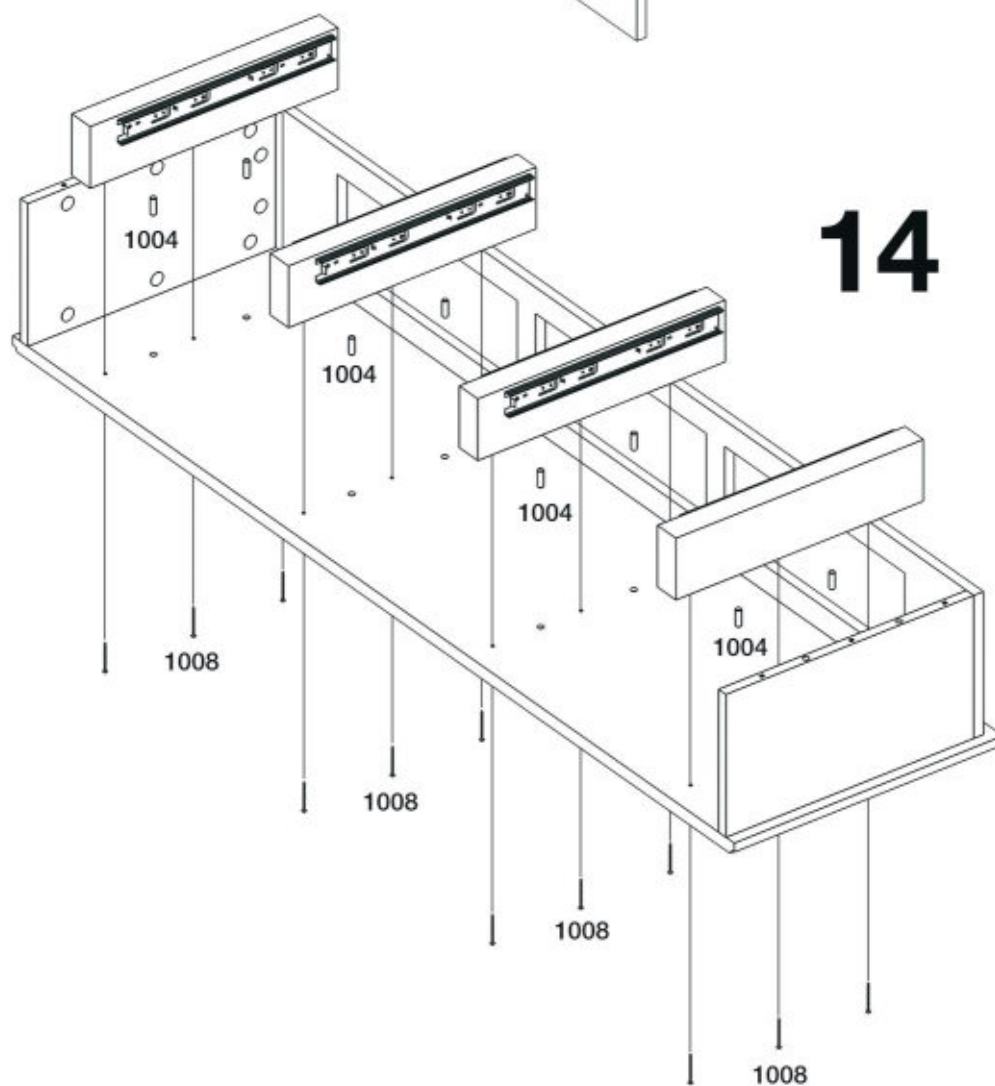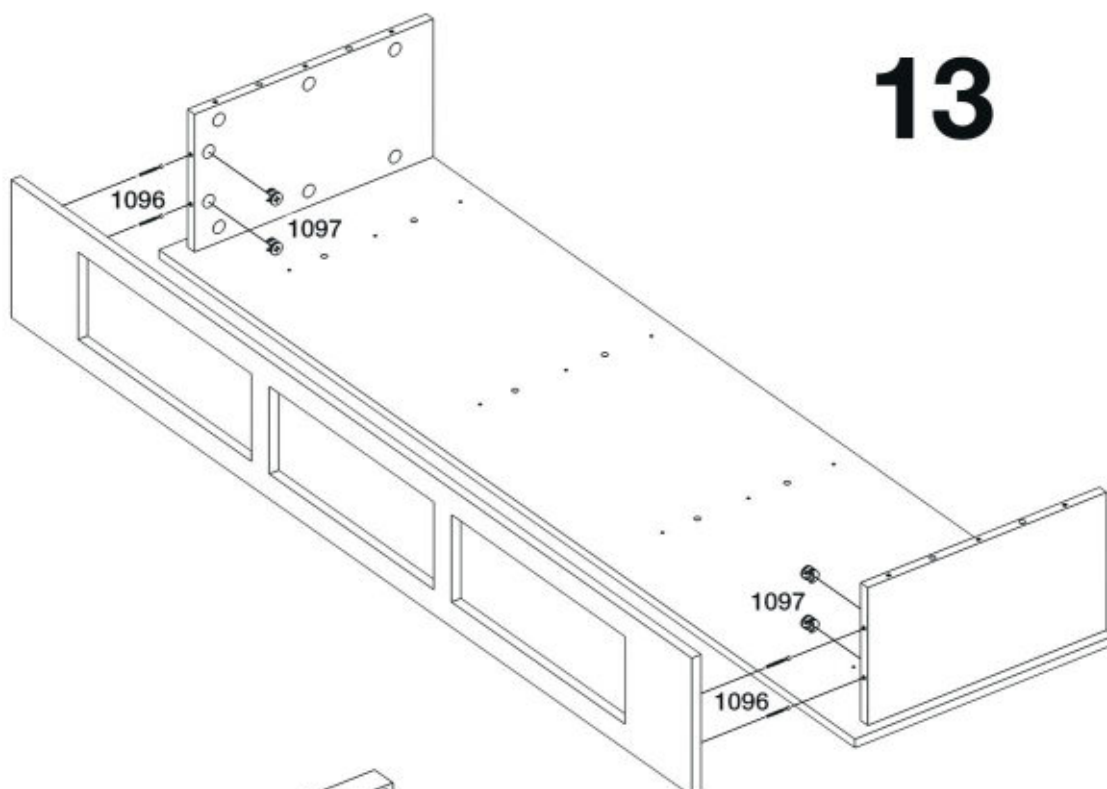  

15

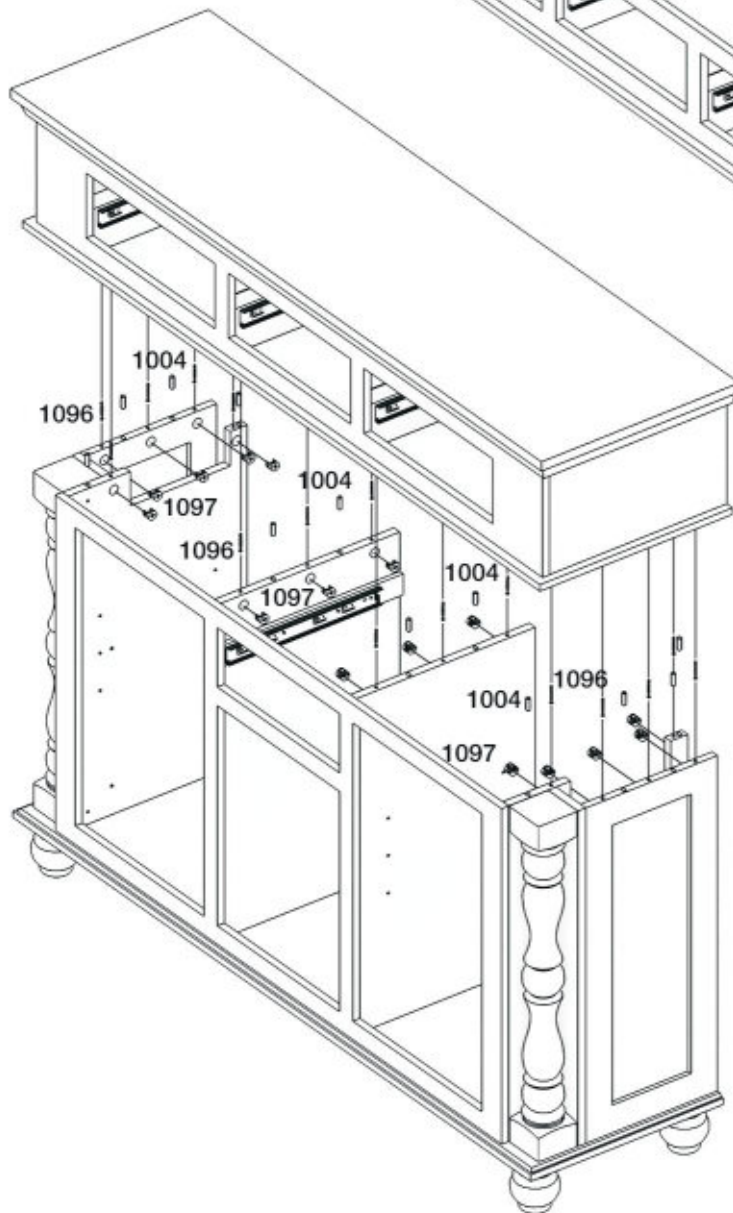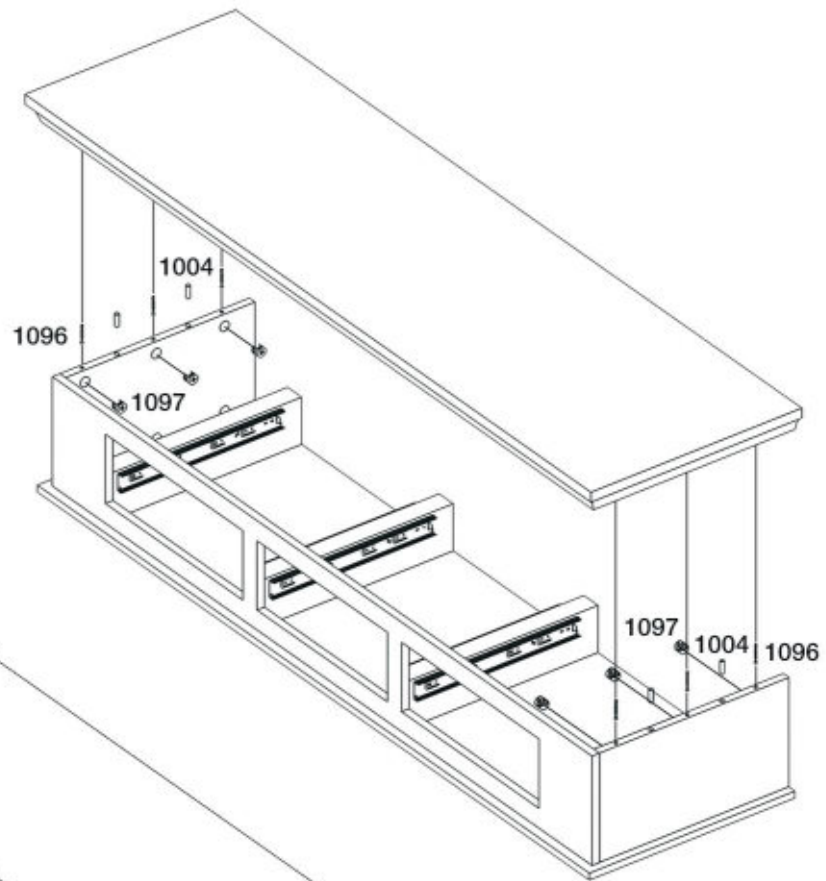  

16

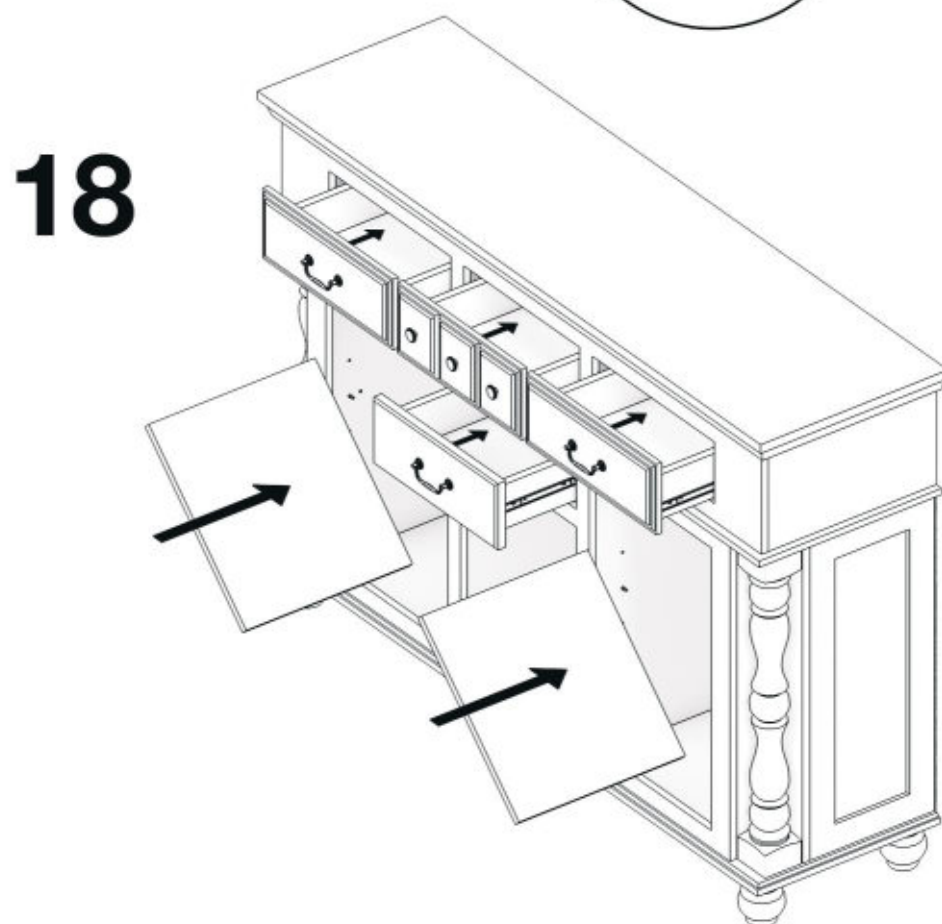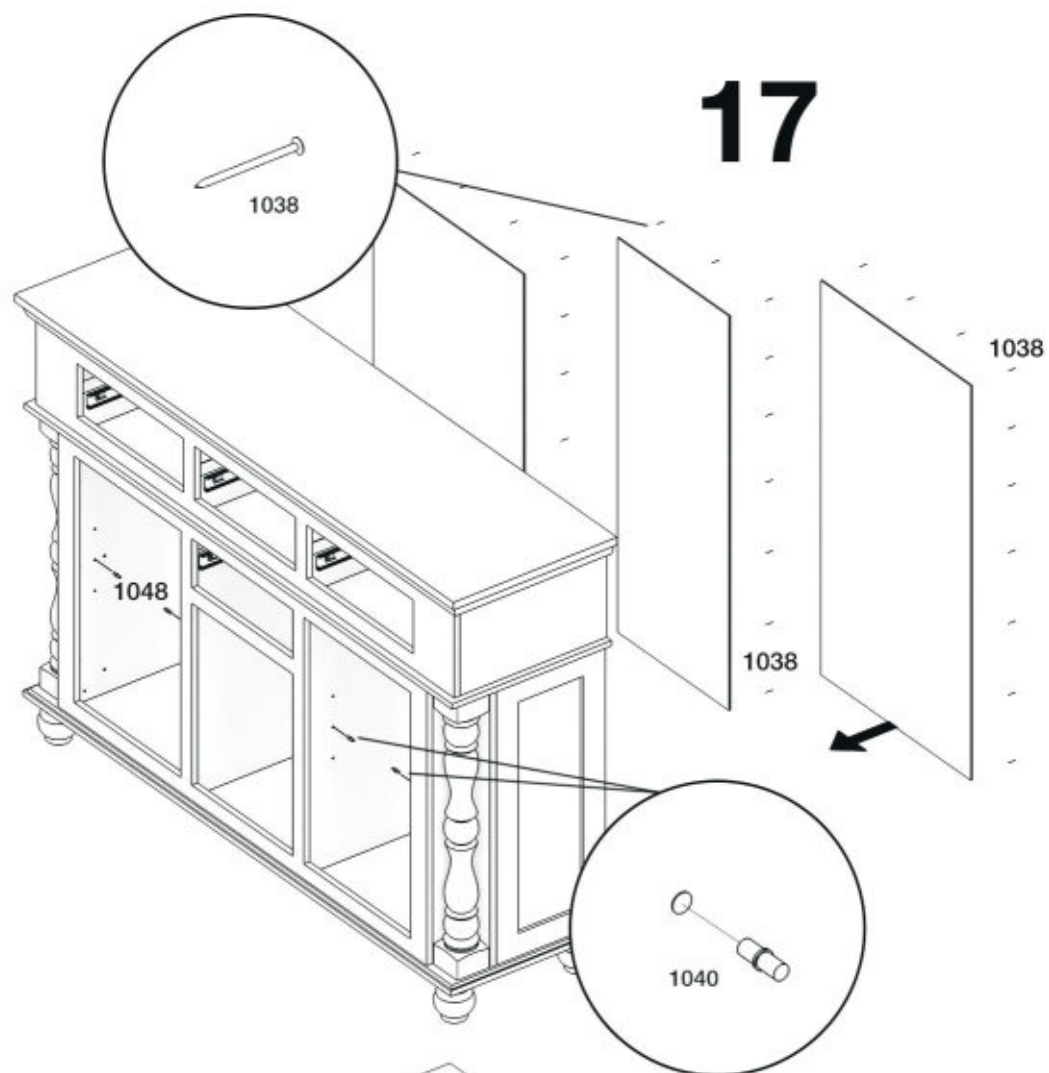  

19

