

2-21, 2-24, 2-26

Верх / Top / Yläpuoli



- RU** Инструкция по сборке
- EN** Assembly instruction
- FI** Koontaohje




1004
8



1096
18



1097
18

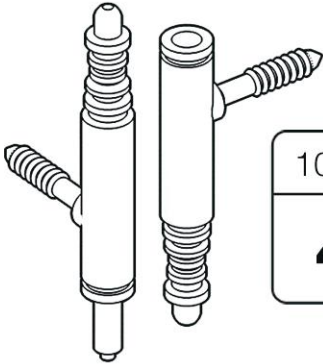


1072
4



1038
20



1006
24

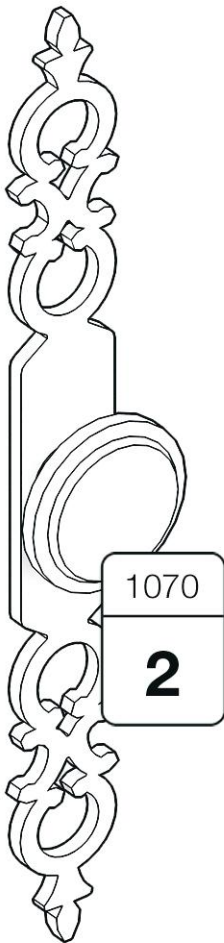


1070
2




1036
2




1100
8

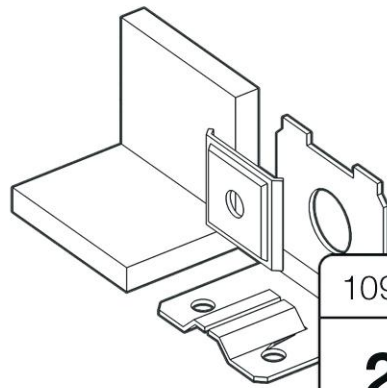


1099
2

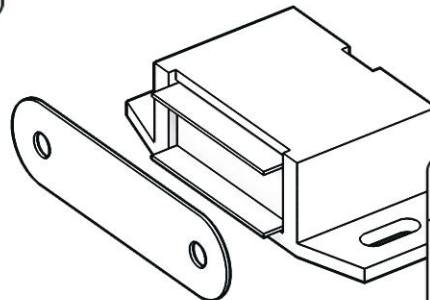



1042
2

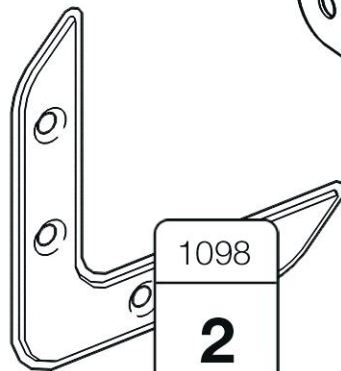


1098
2

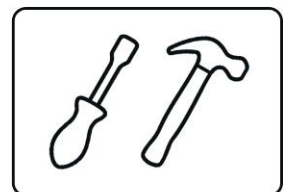

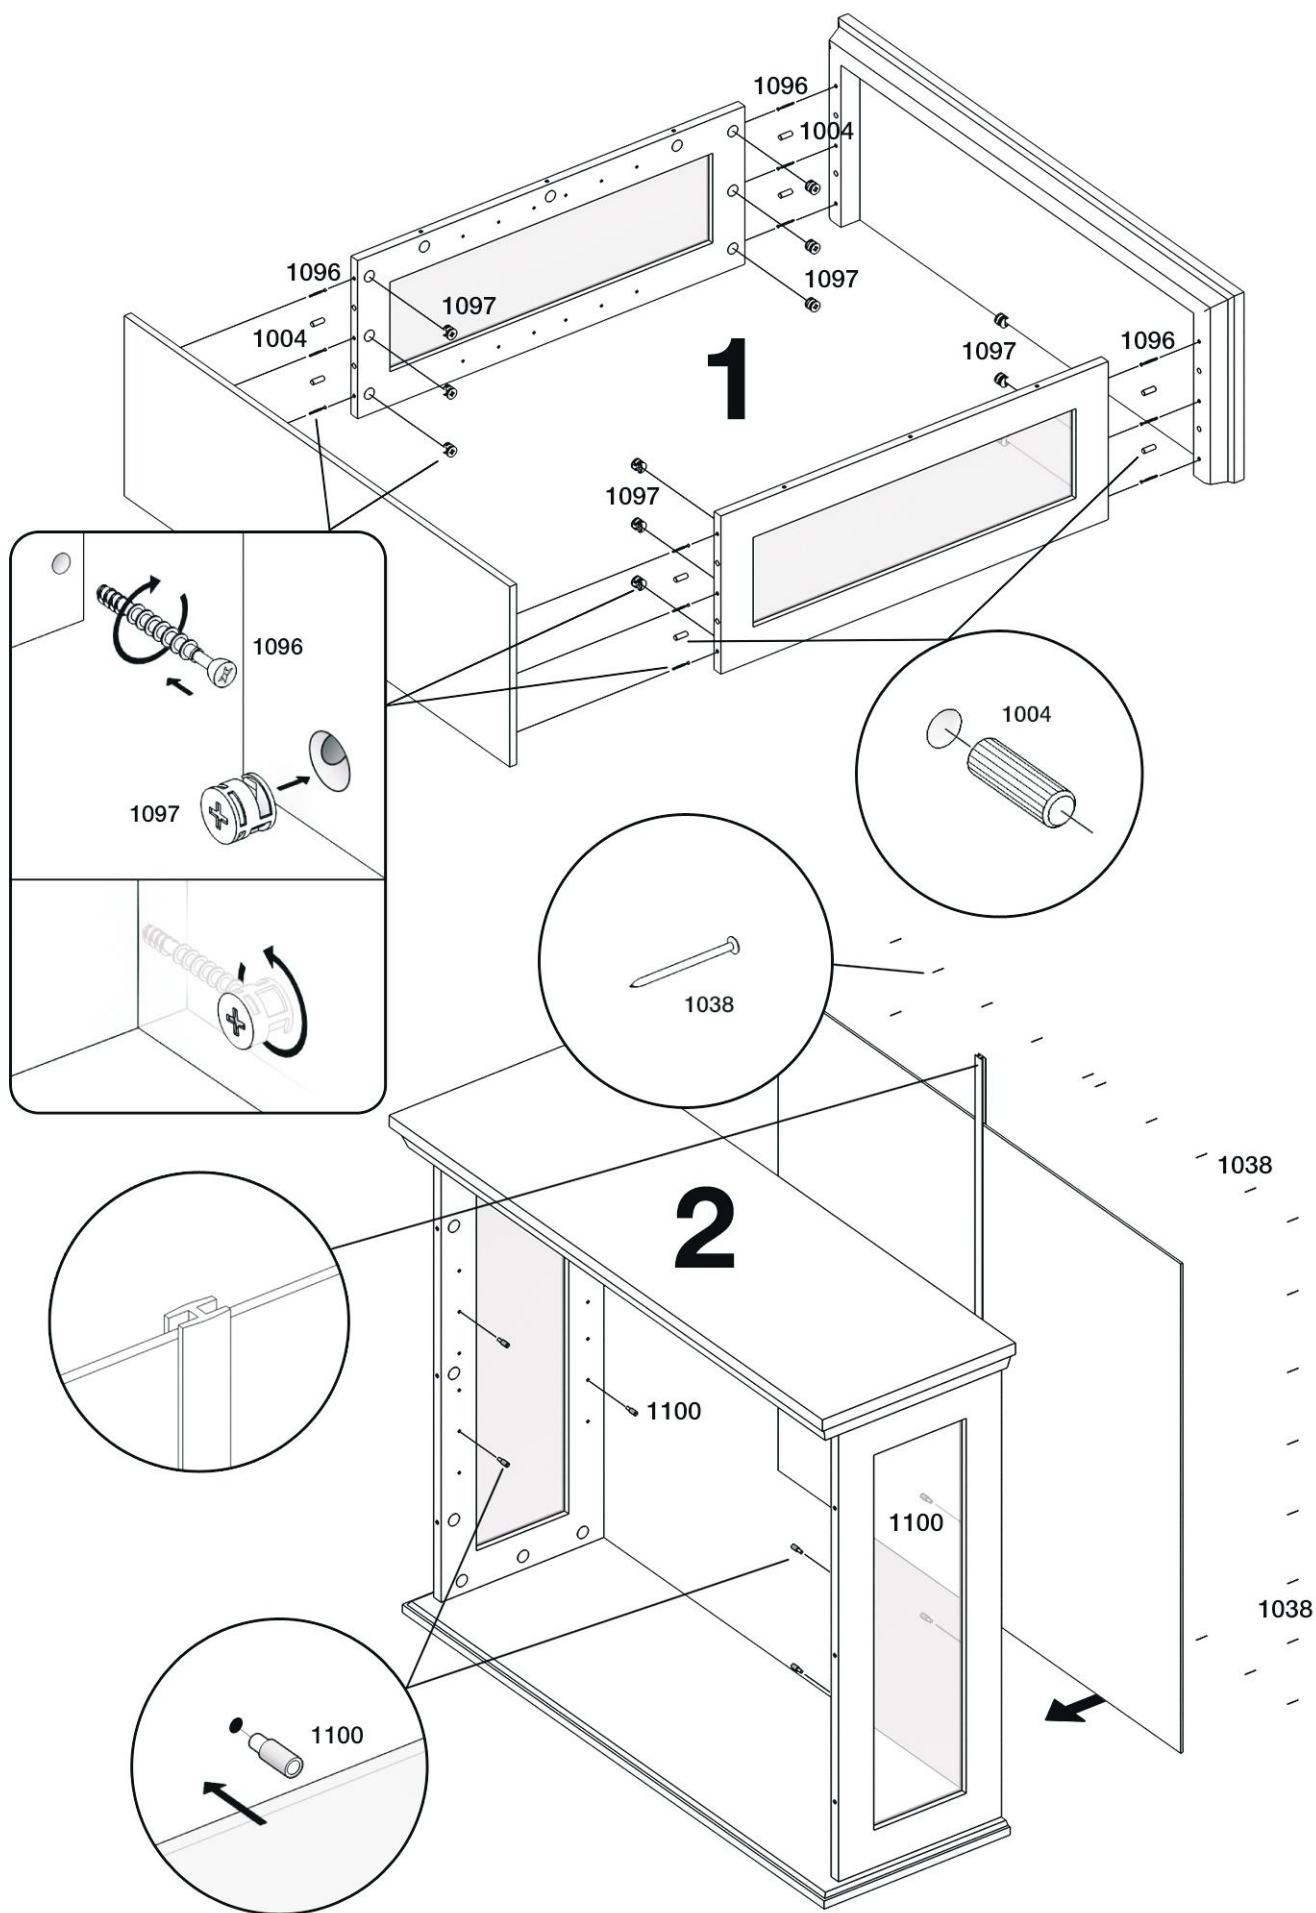

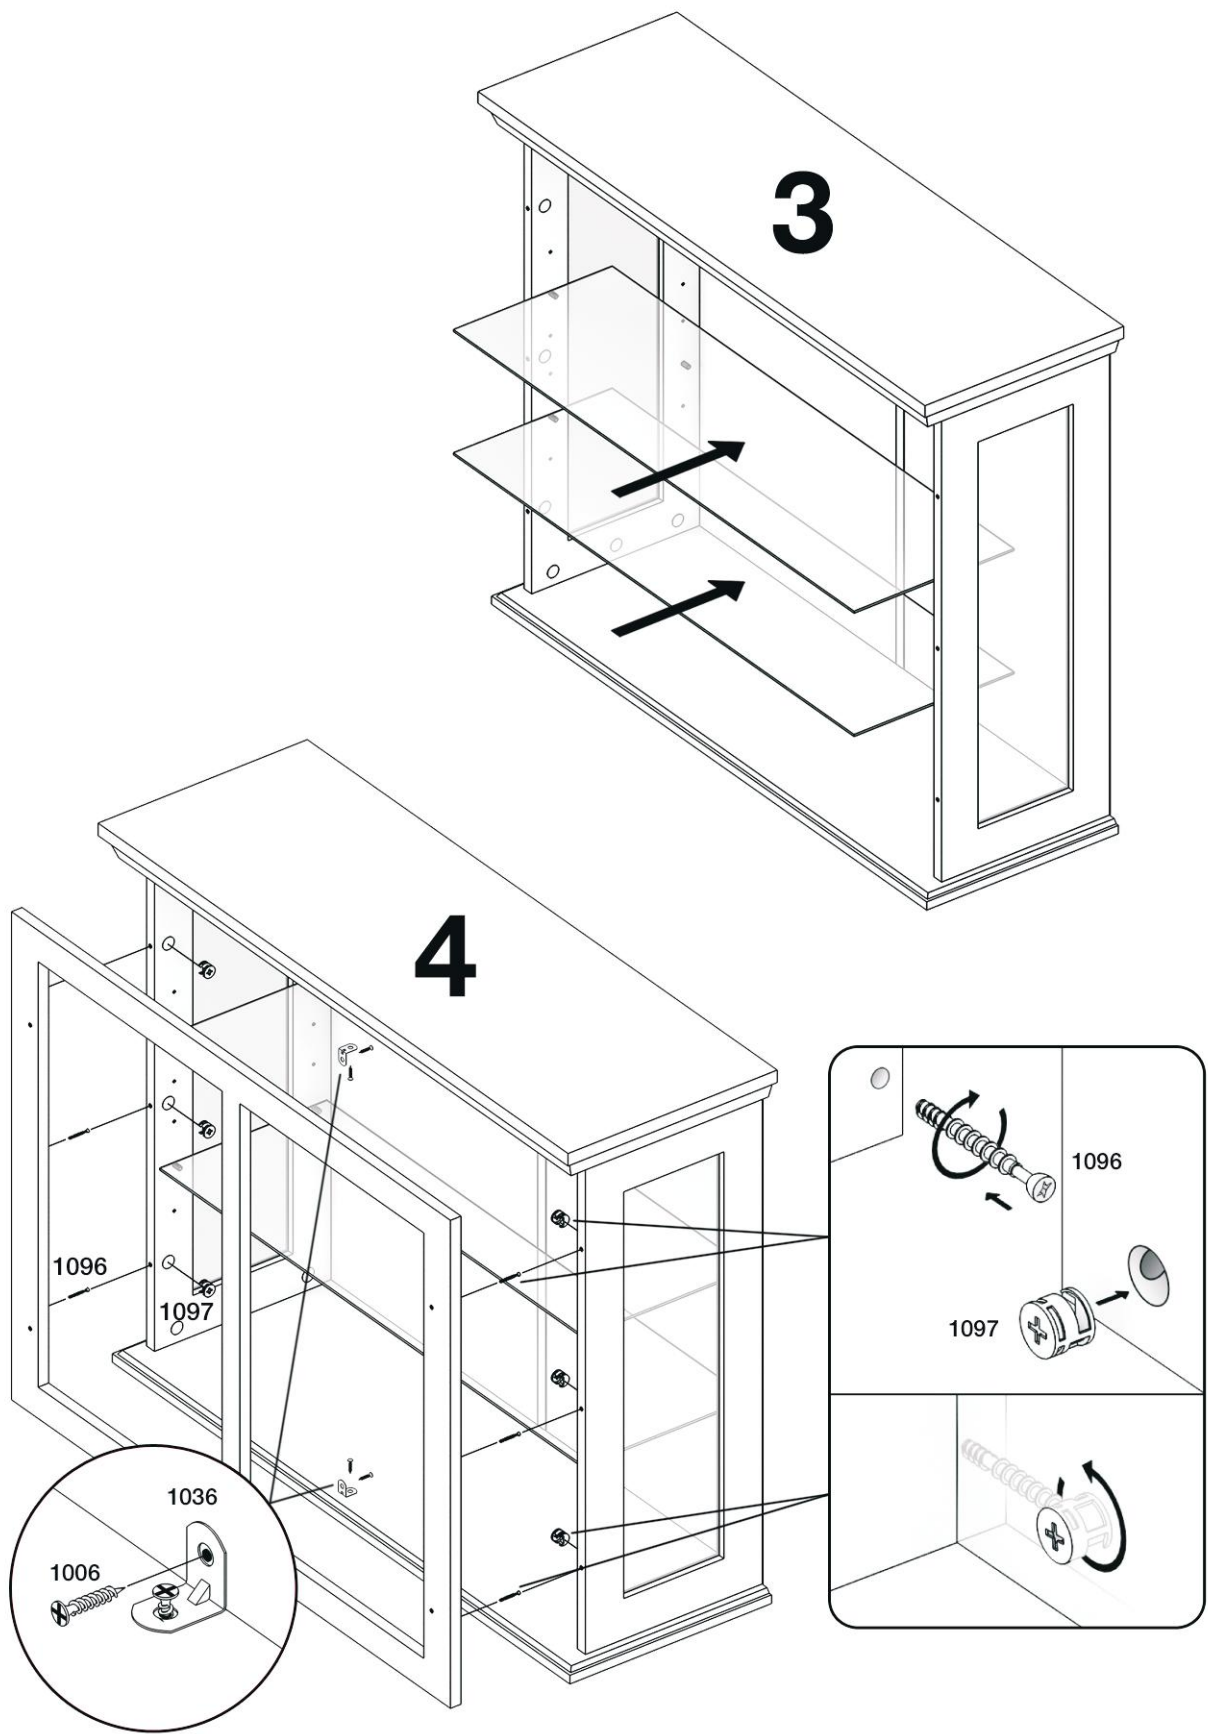

5

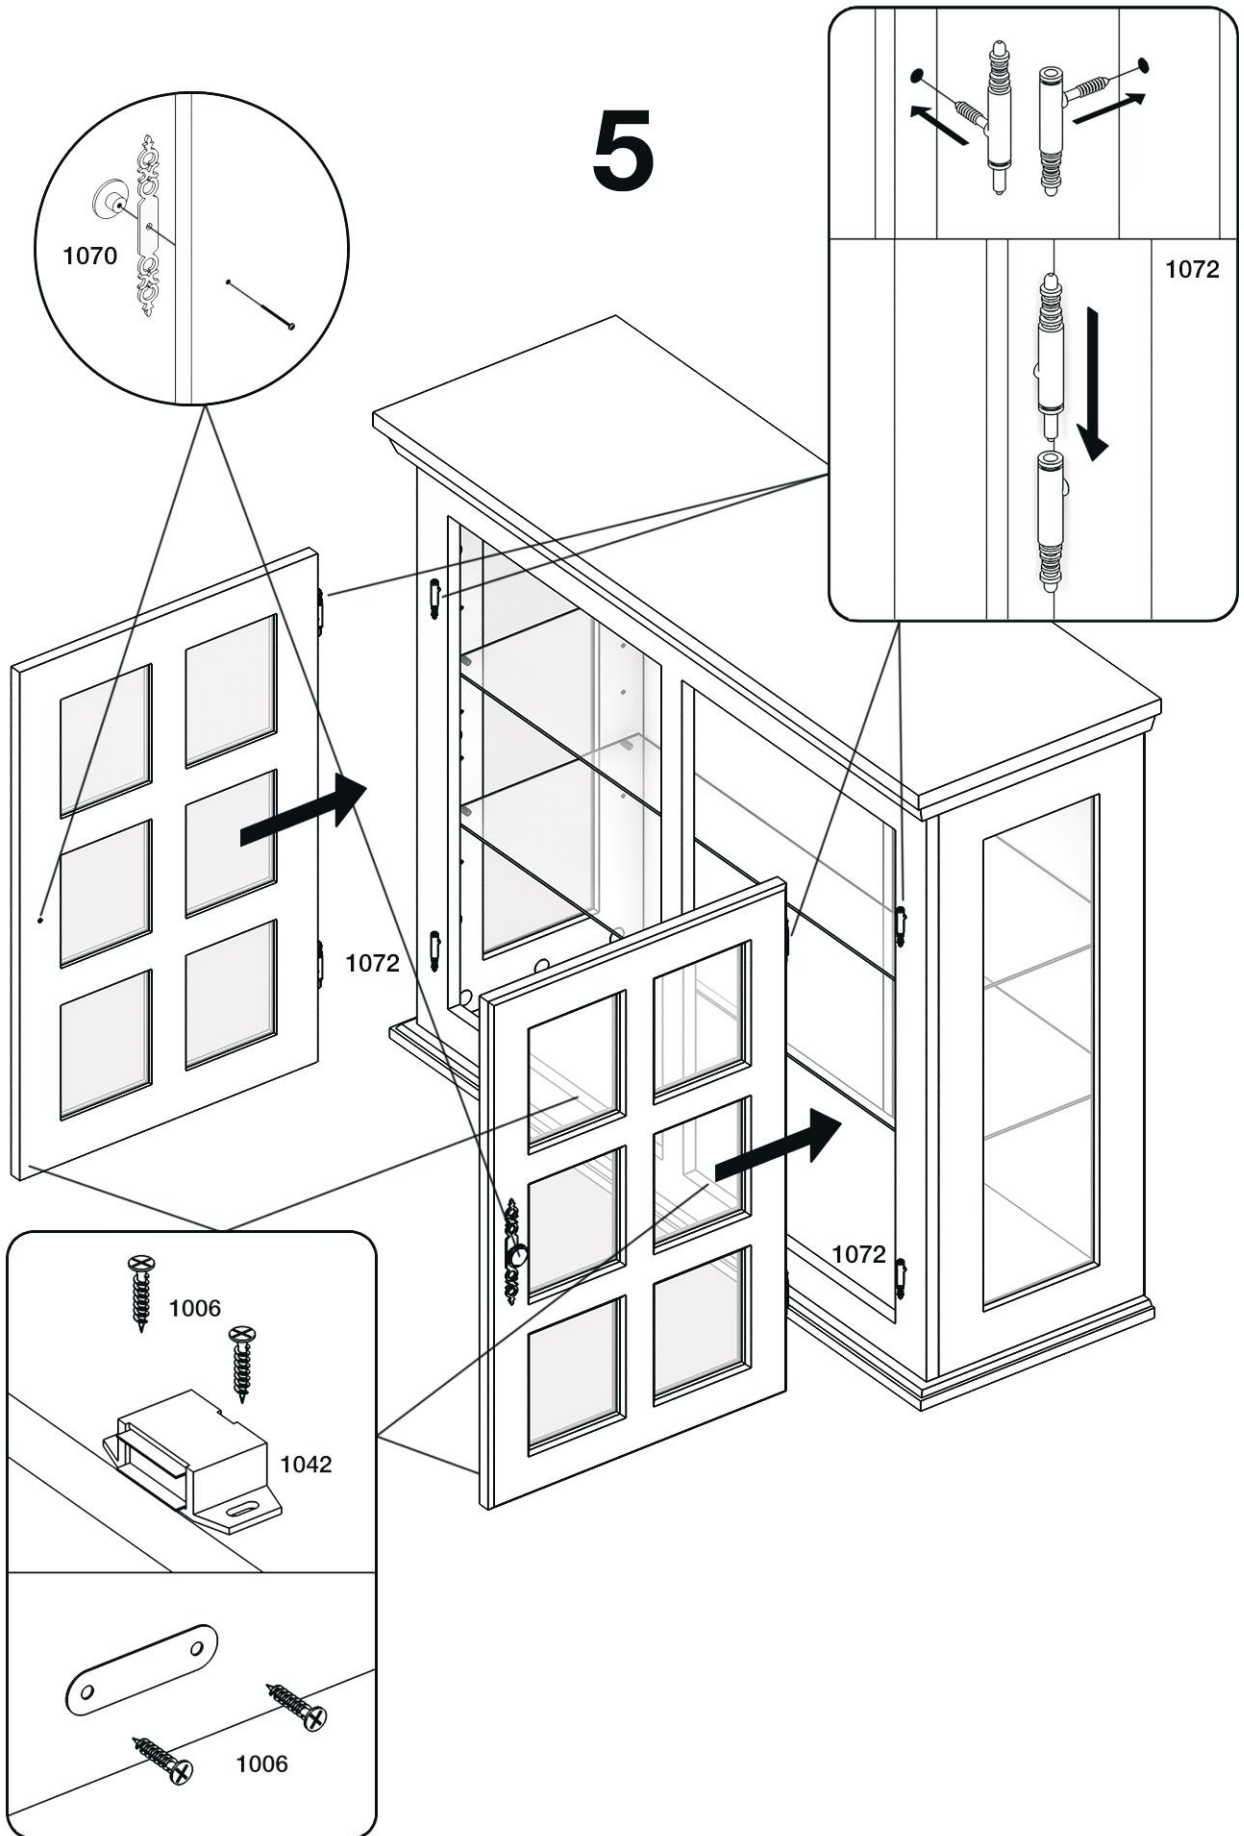

6

