

1-8

2-9, 2-10, 2-12

Низ / Bottom / Alapuoli



RU Инструкция по сборке
EN Assembly instruction
FI Koontaohje



1006
48



1038
40



1004
14



1096
18



1097
18



1027
16




1010
4




1008
19



1028
16


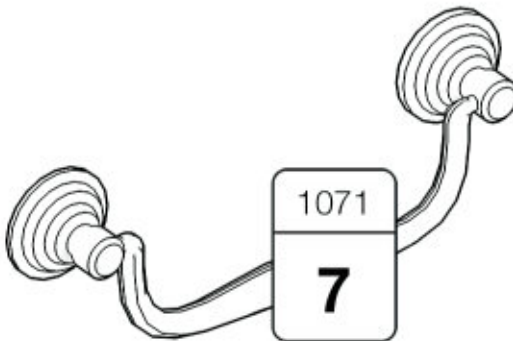



1071
7

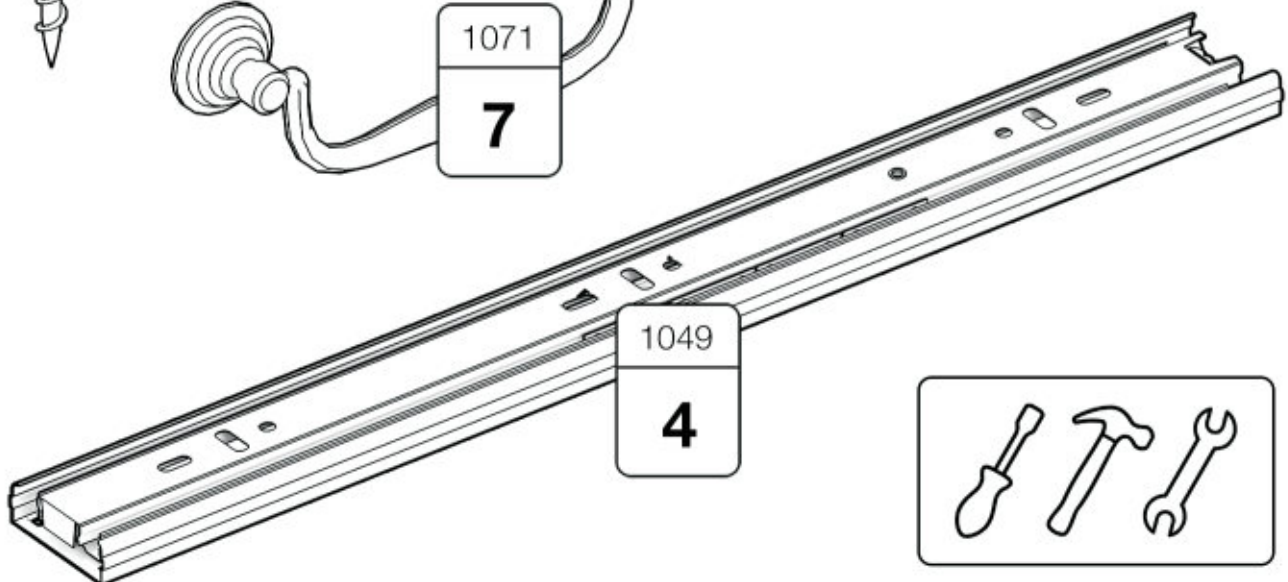


1049
4



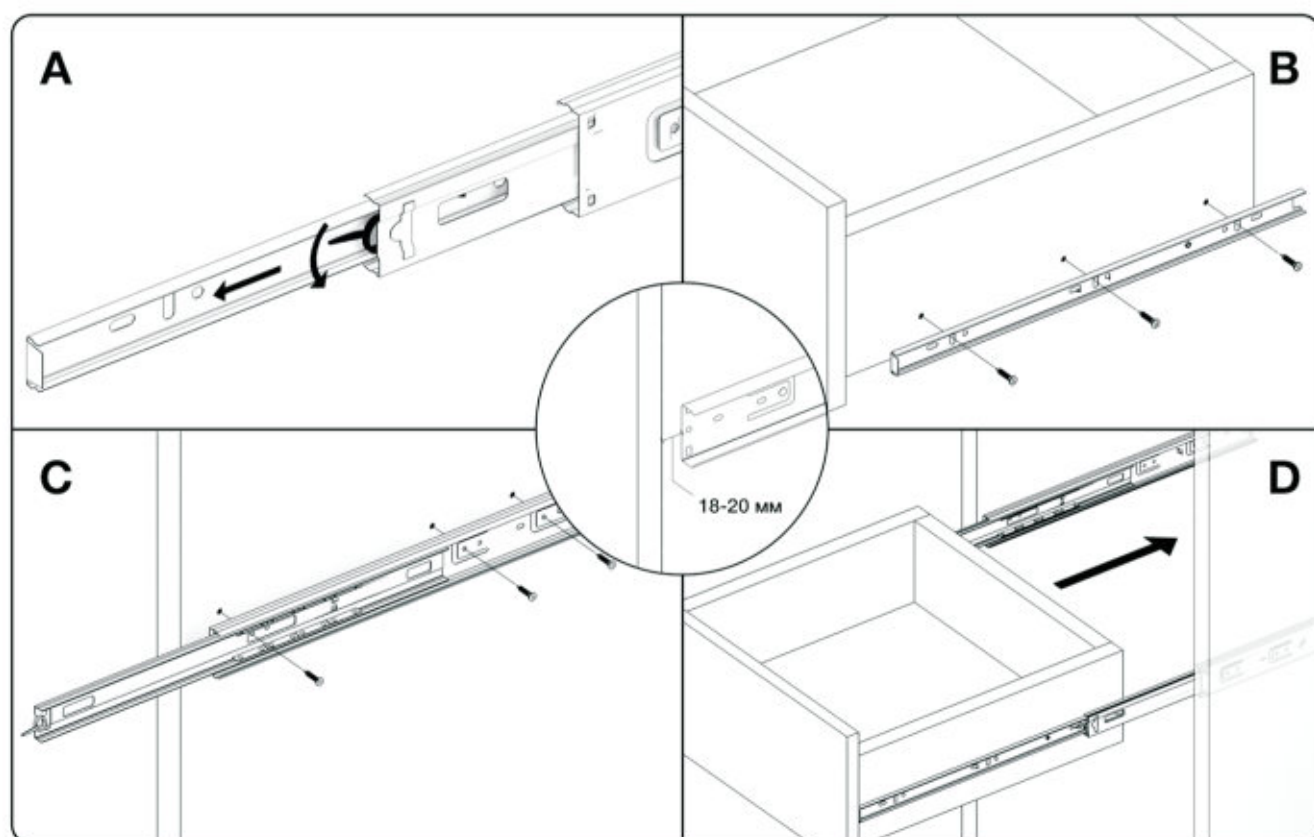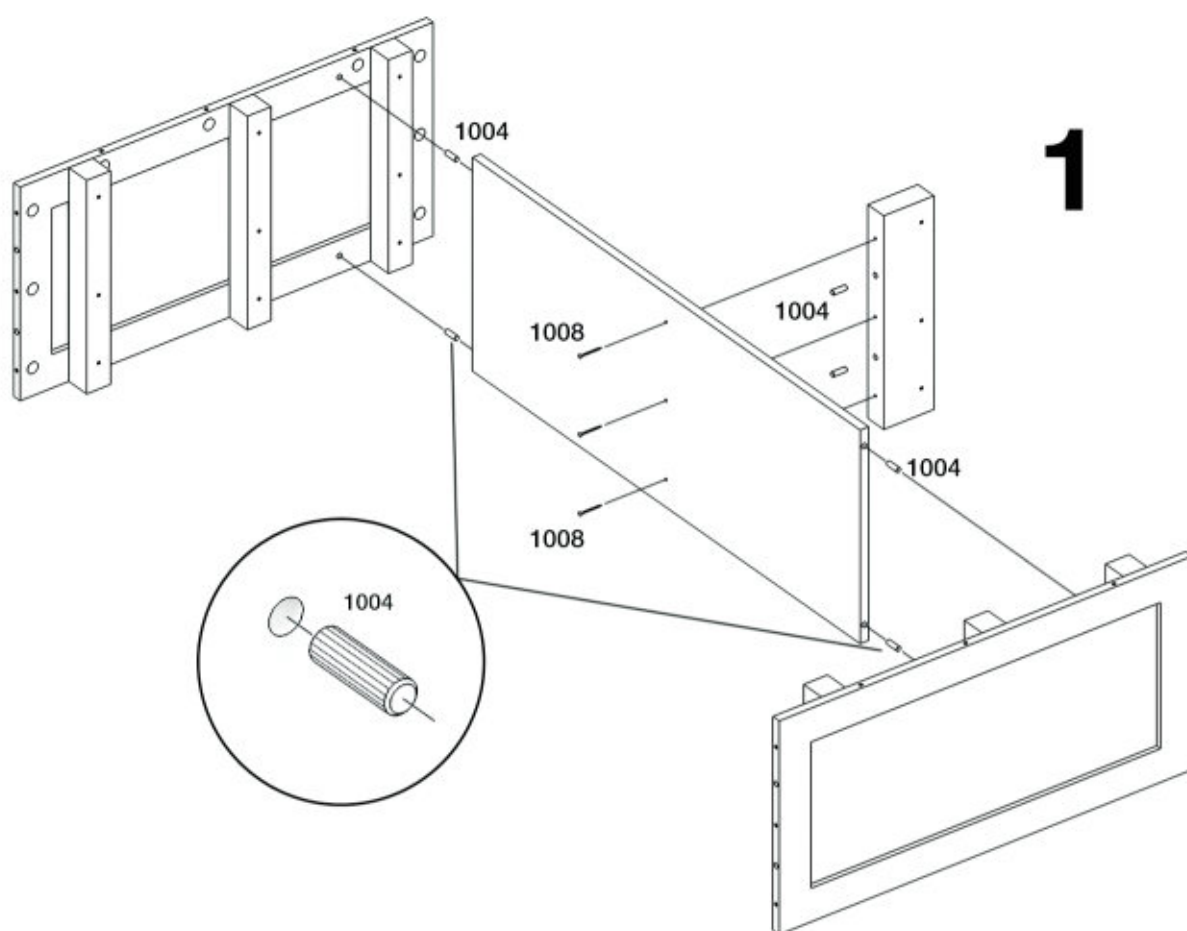

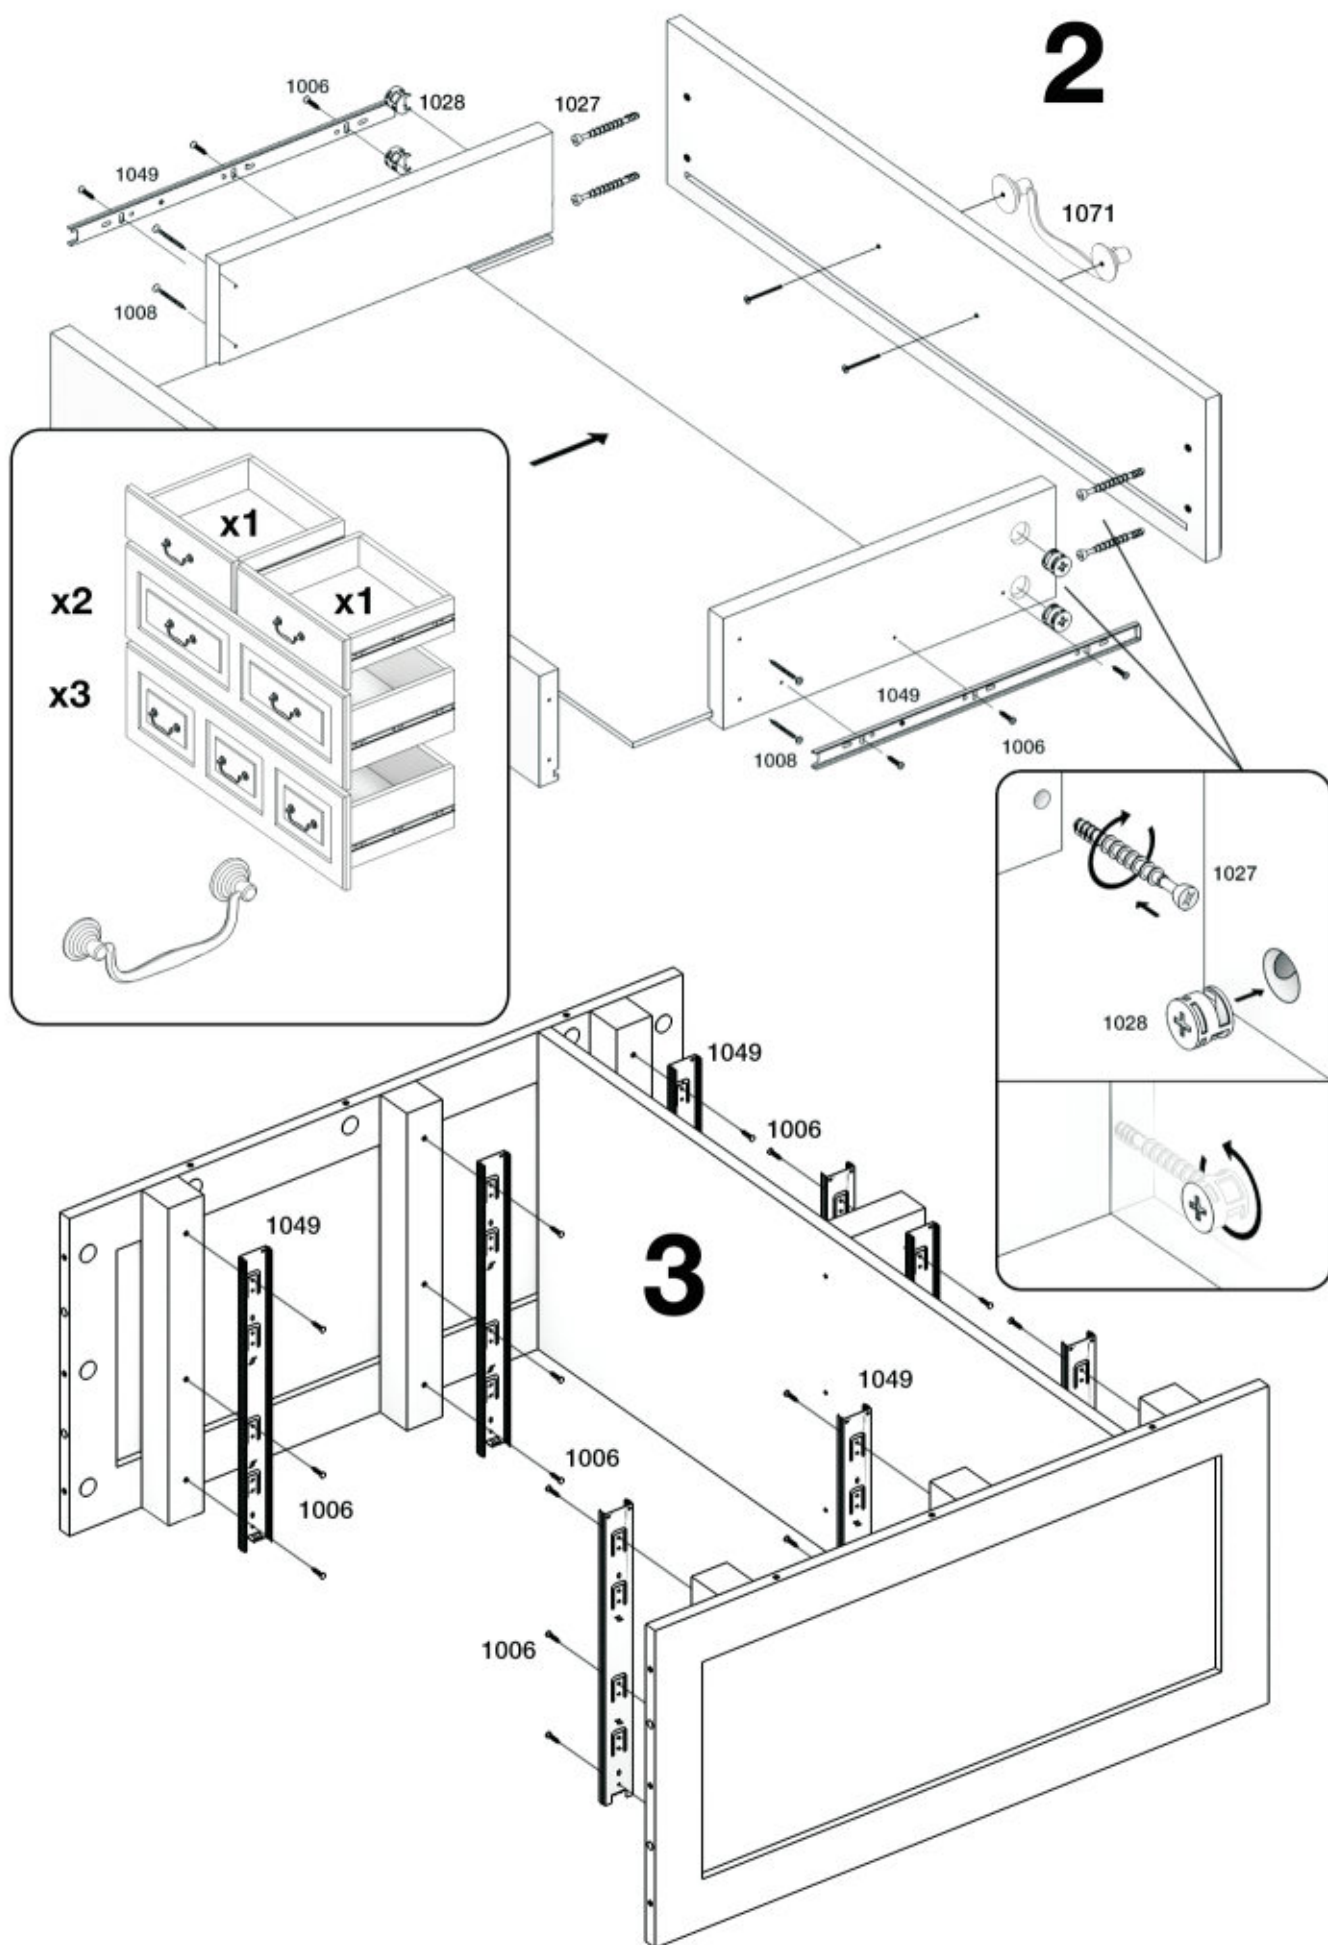

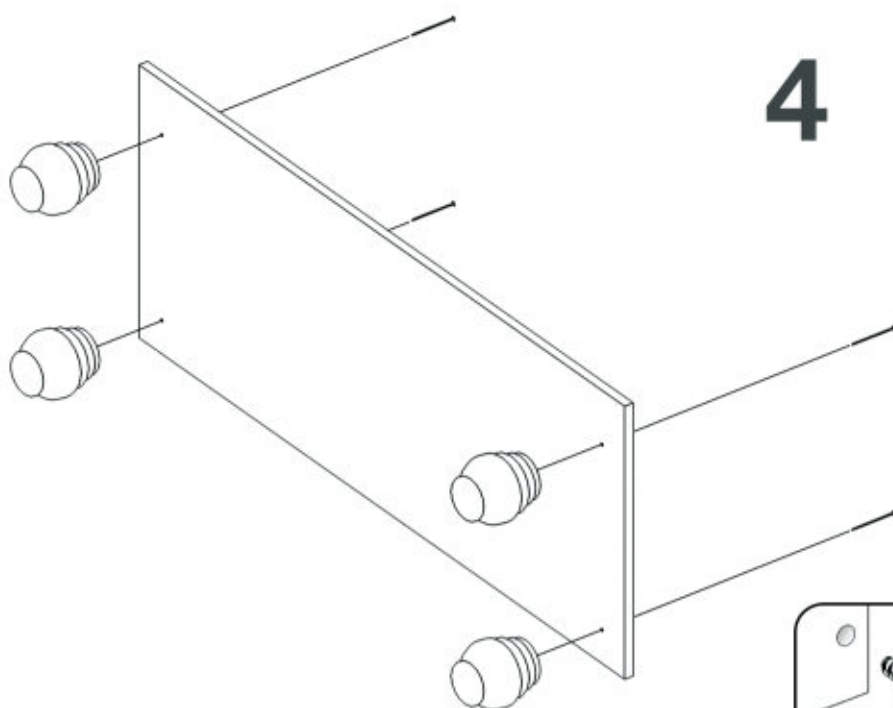

4

5

