


АЙНО

Комод №9



 **TIMBERICA**


- RU** Инструкция по сборке
- EN** Assembly instruction
- FI** Koontaohje



1006
48



1008
16



1004
20




1096
28



1097
30




1028
16

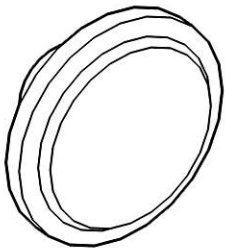


1074
8





1038
16


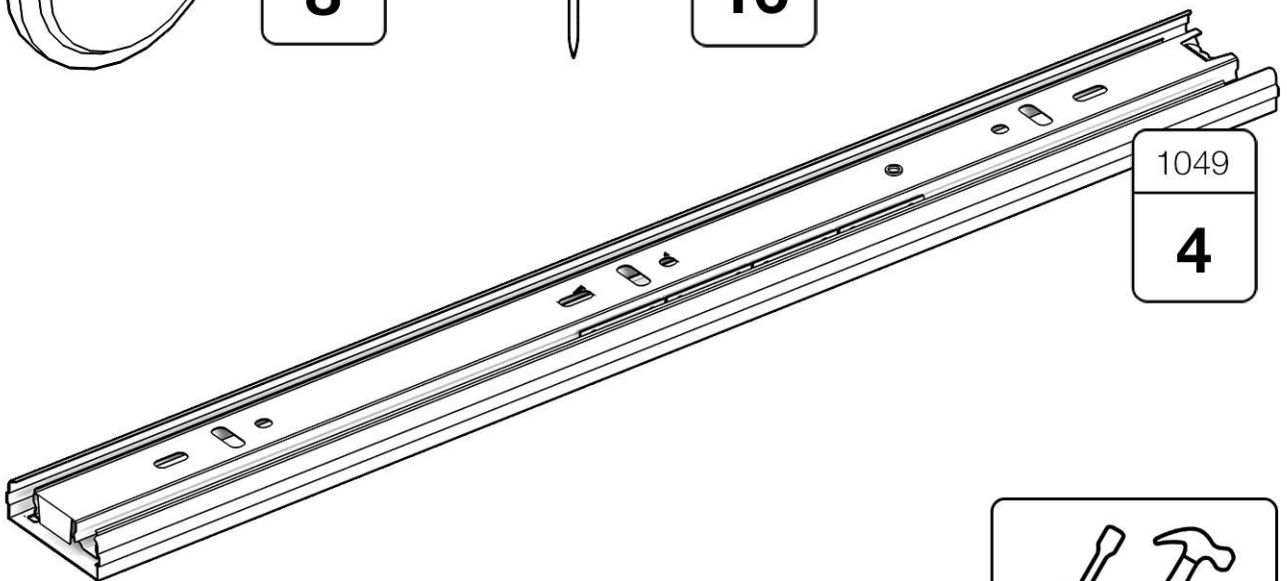


1049
4

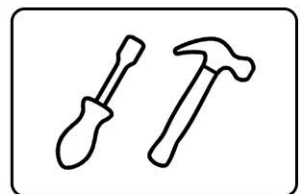


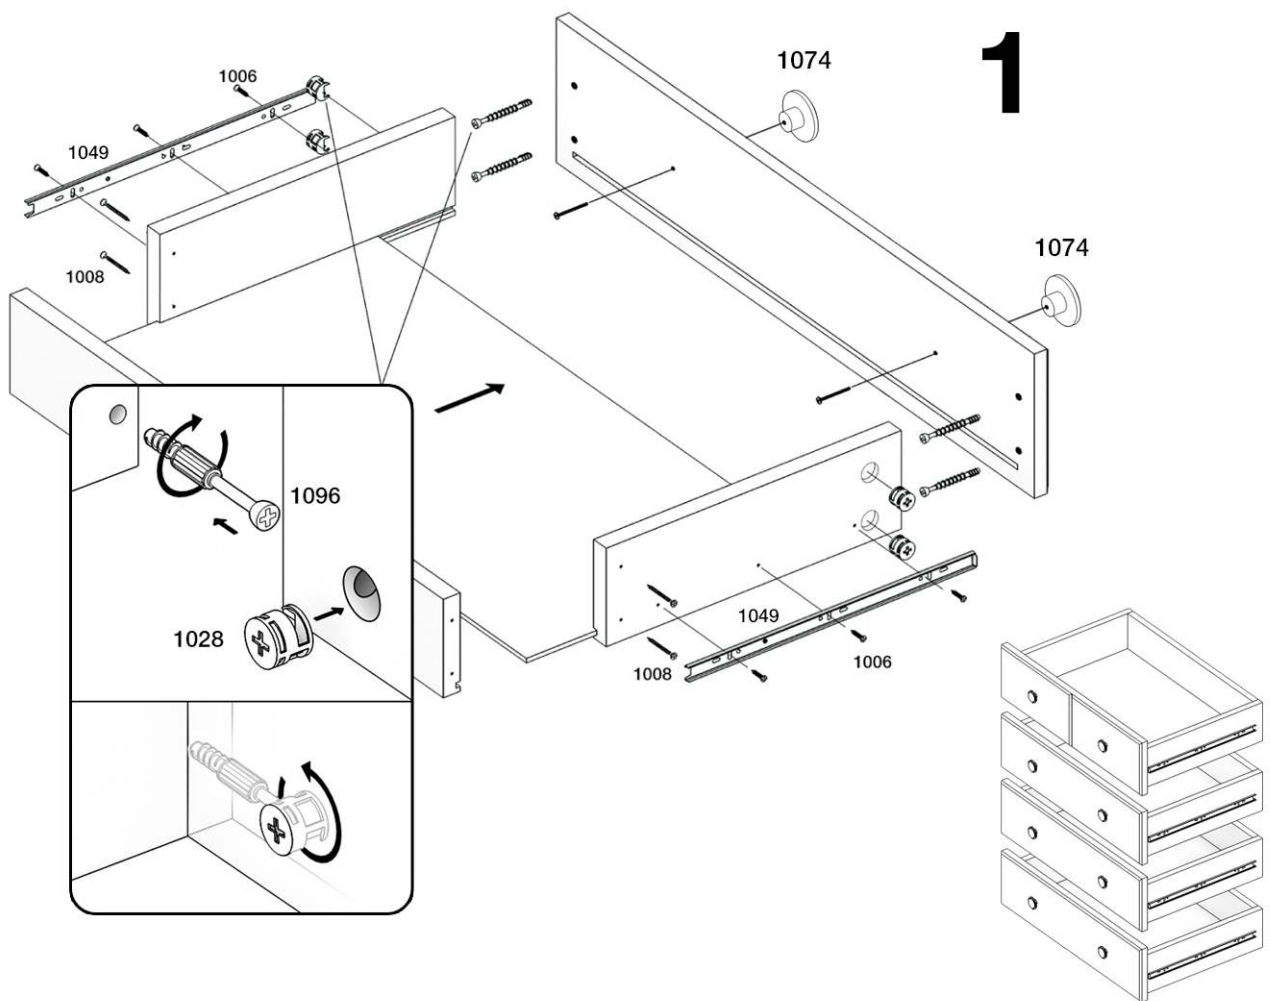
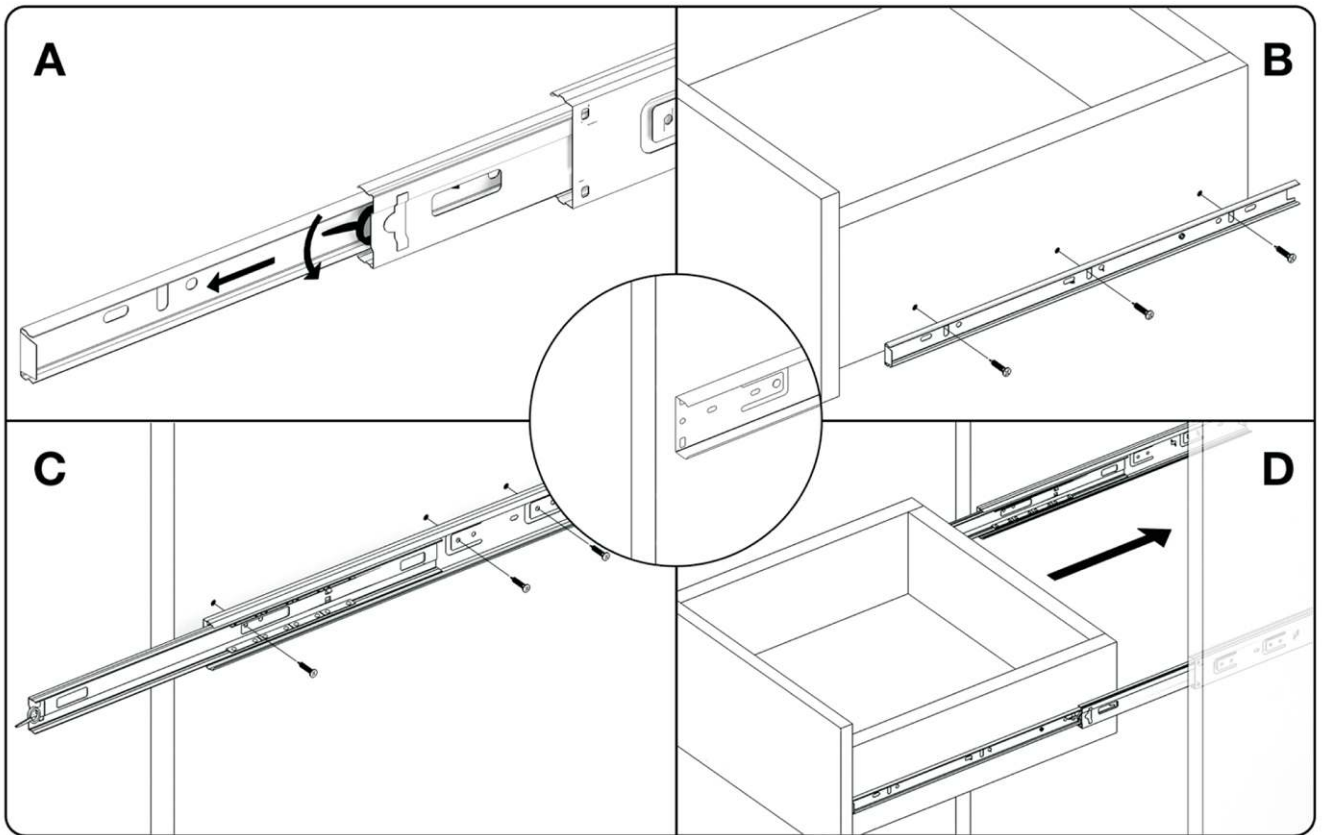





2

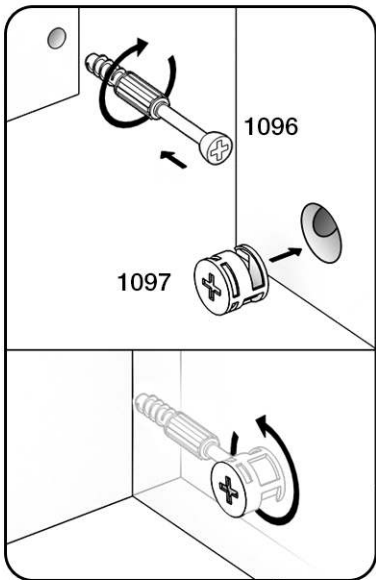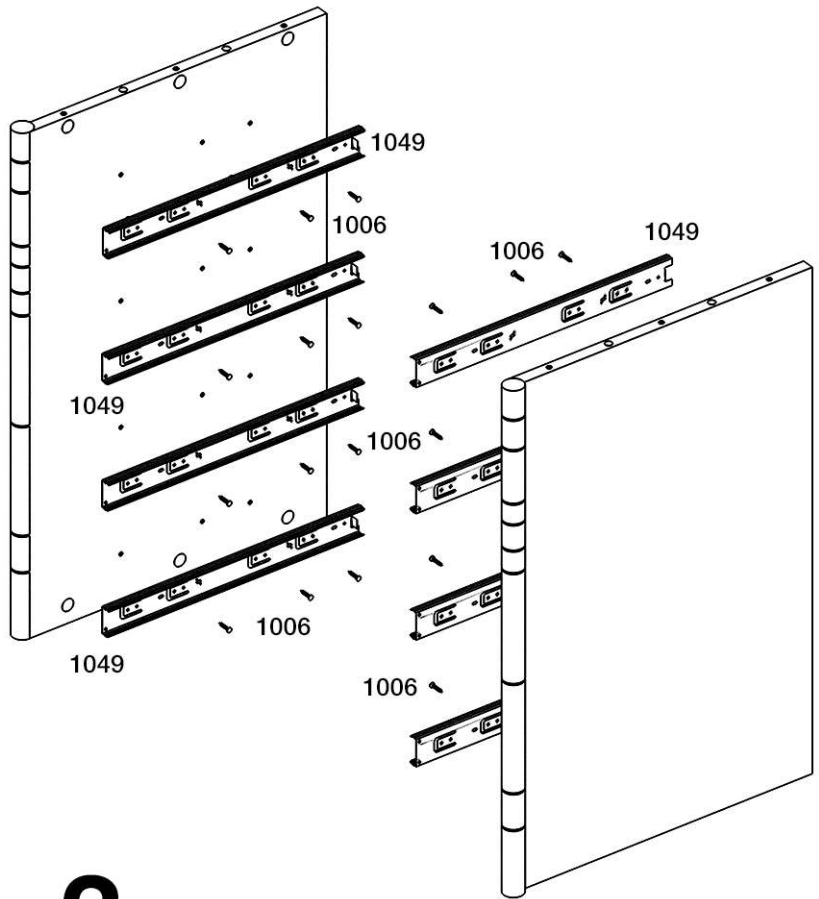

3

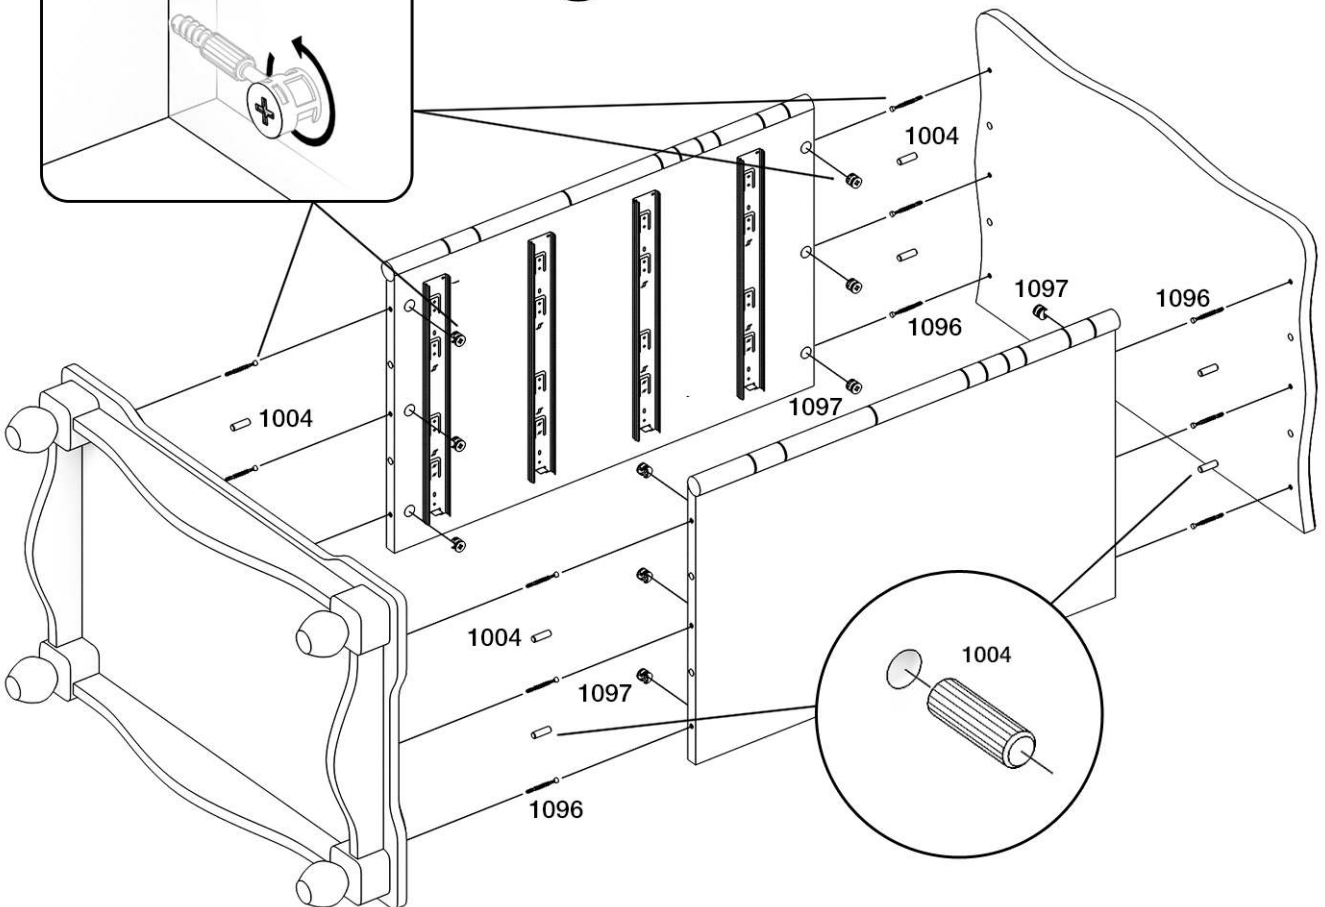

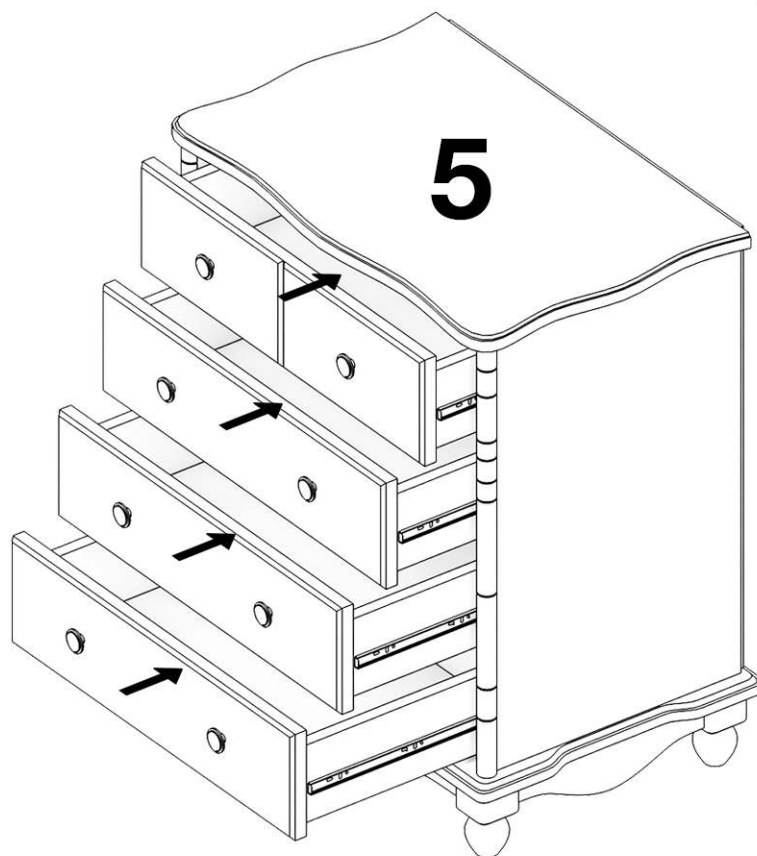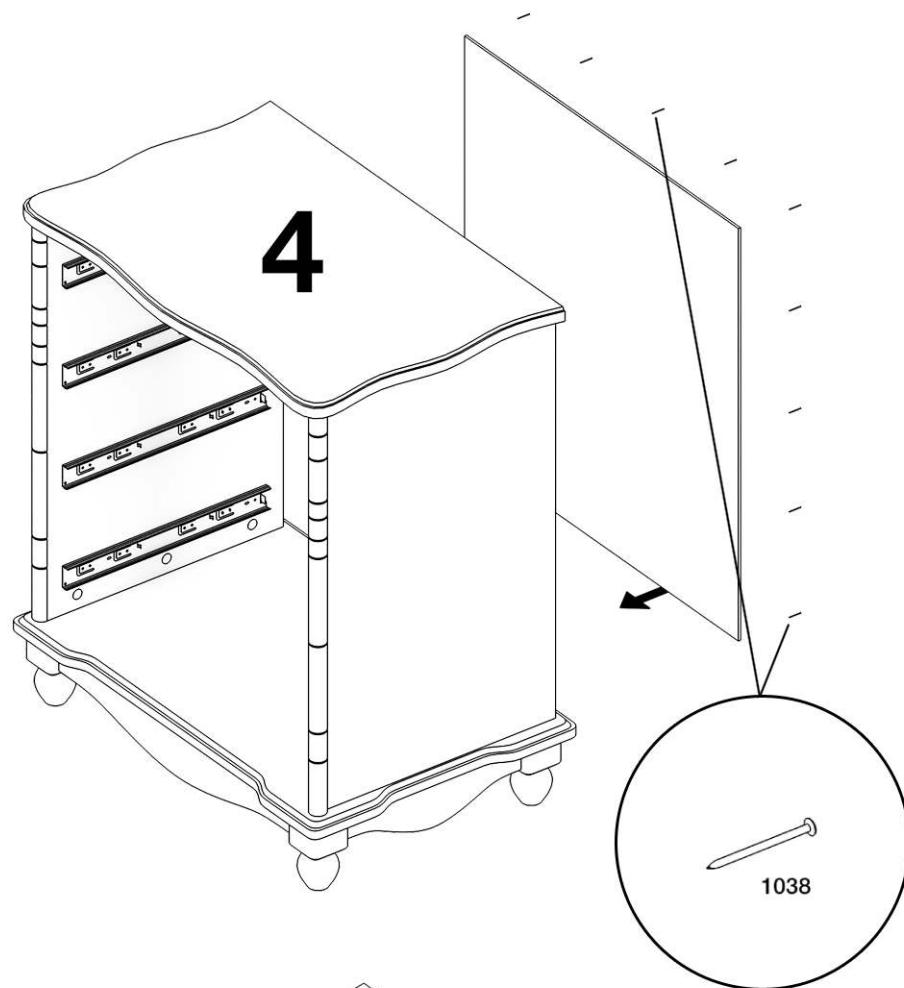

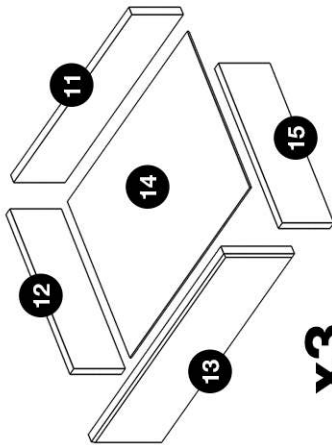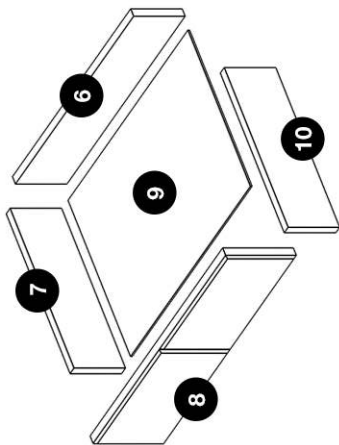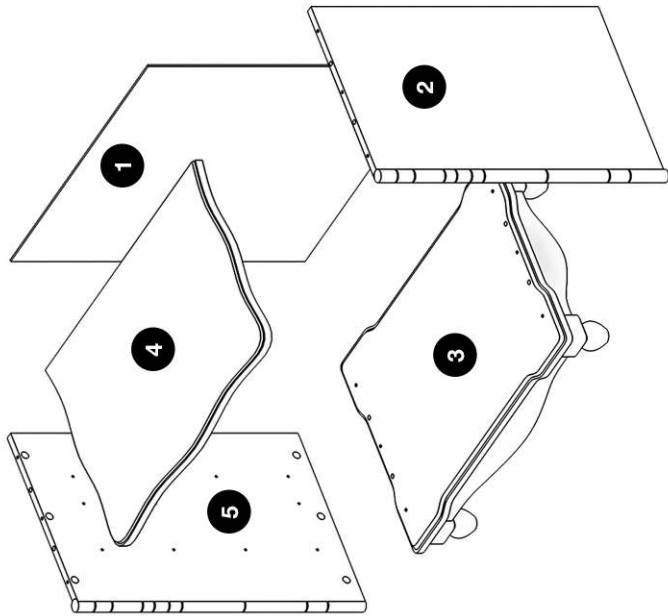

x3