





Д. 7112-8

Шкаф 3 двери "МАЛИБУ"

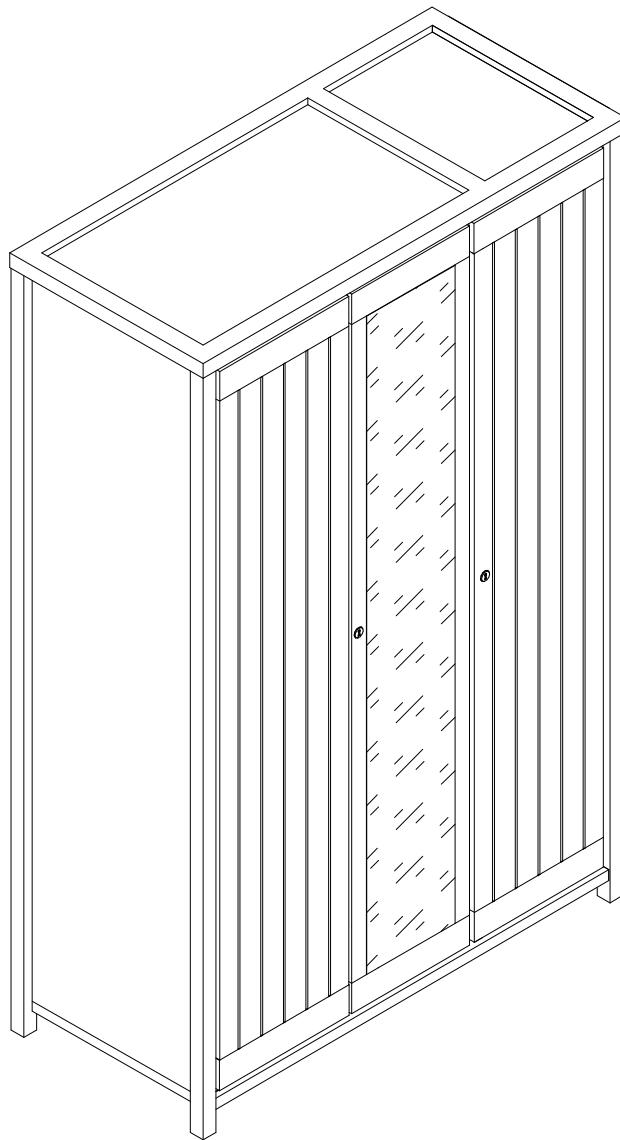





**EAC**


EAЭС № BY/112 11.01. TP025 024 02213

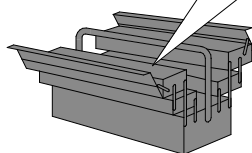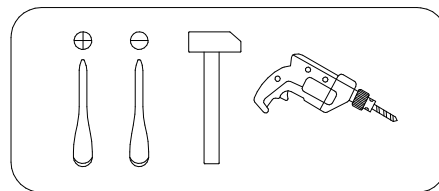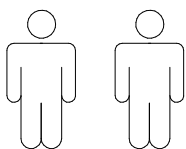



0  
10  
20  
30  
40  
50  
60  
70  
80  
90  
100  
110  
120  
130  
140  
150  
160  
170  
180  
190  
200

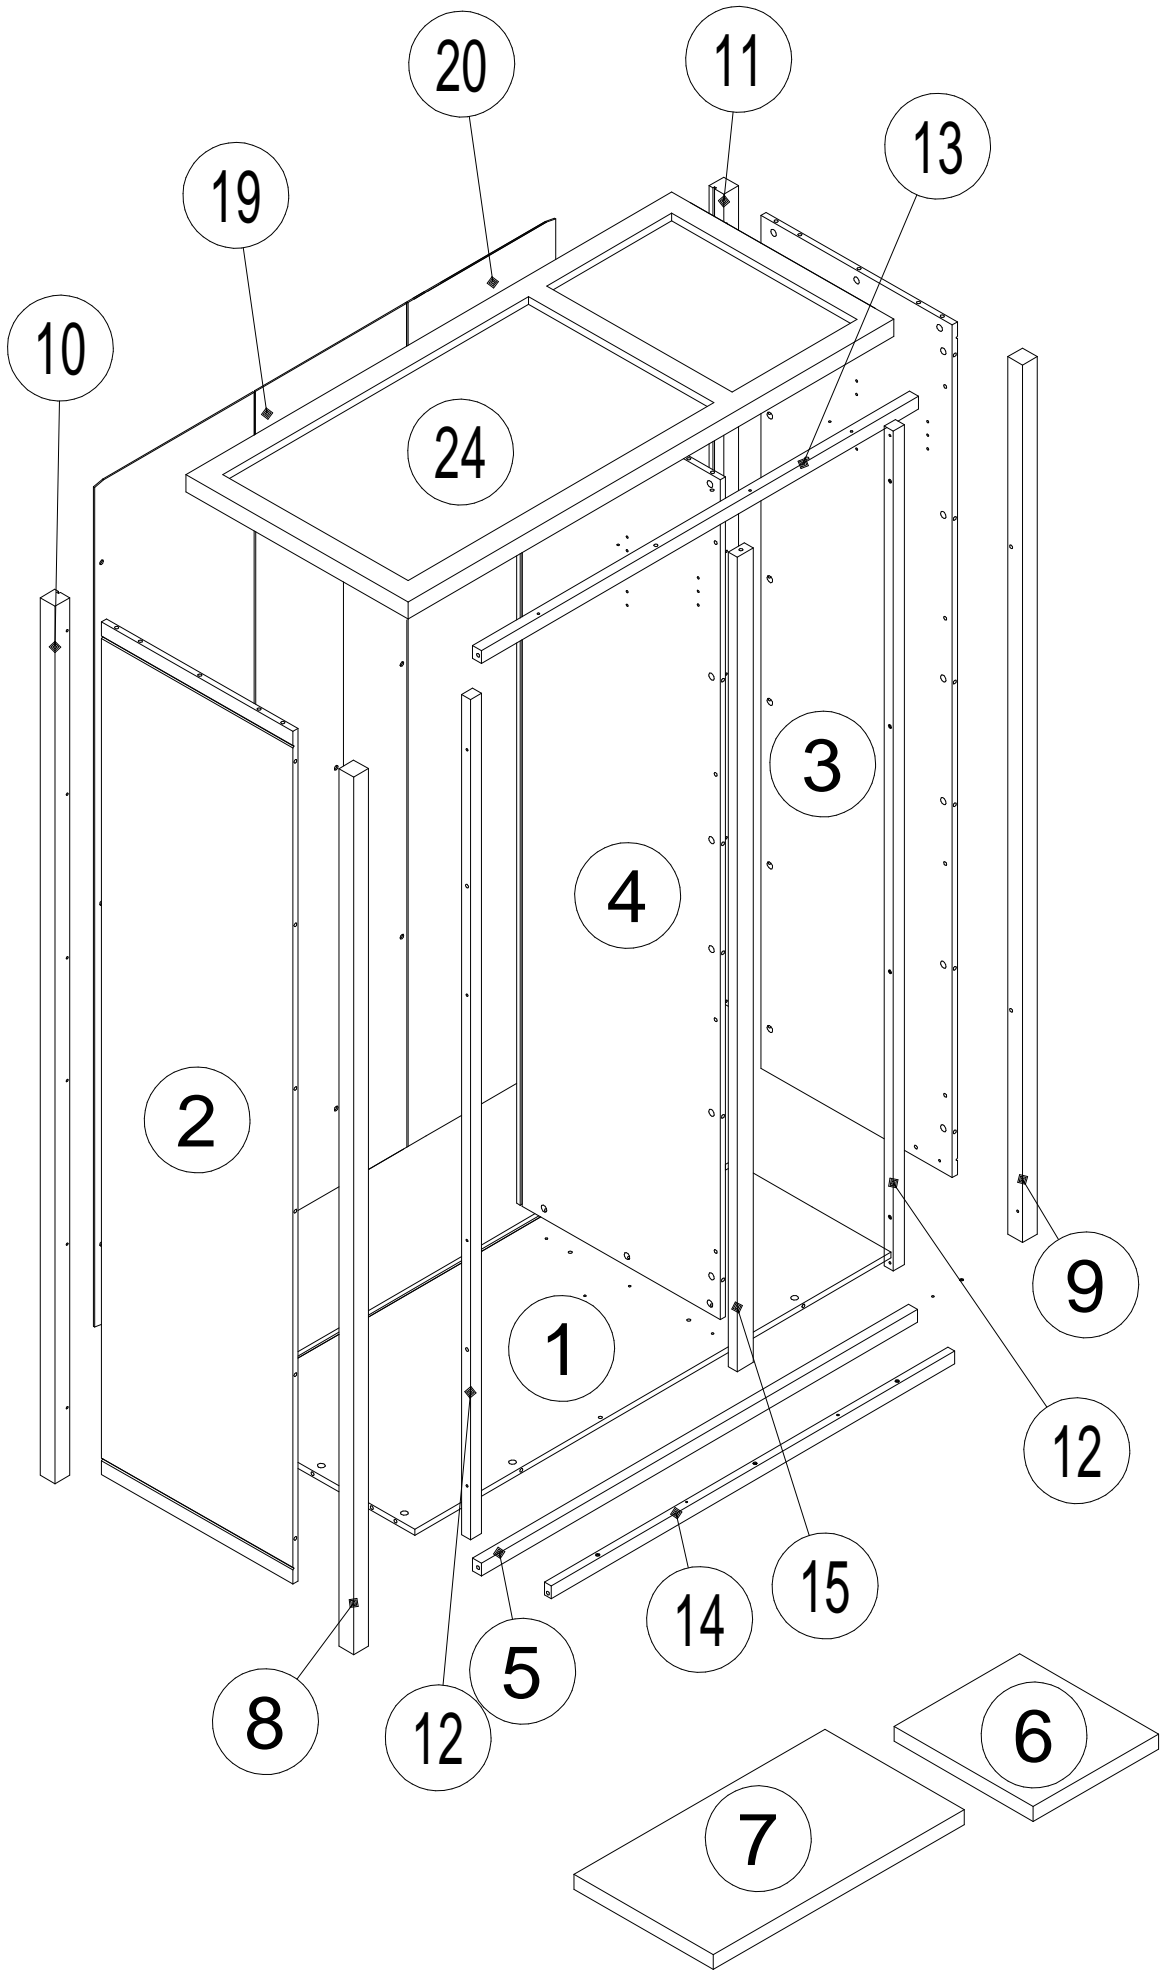

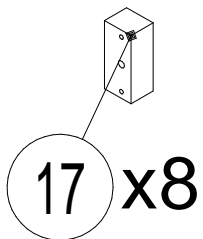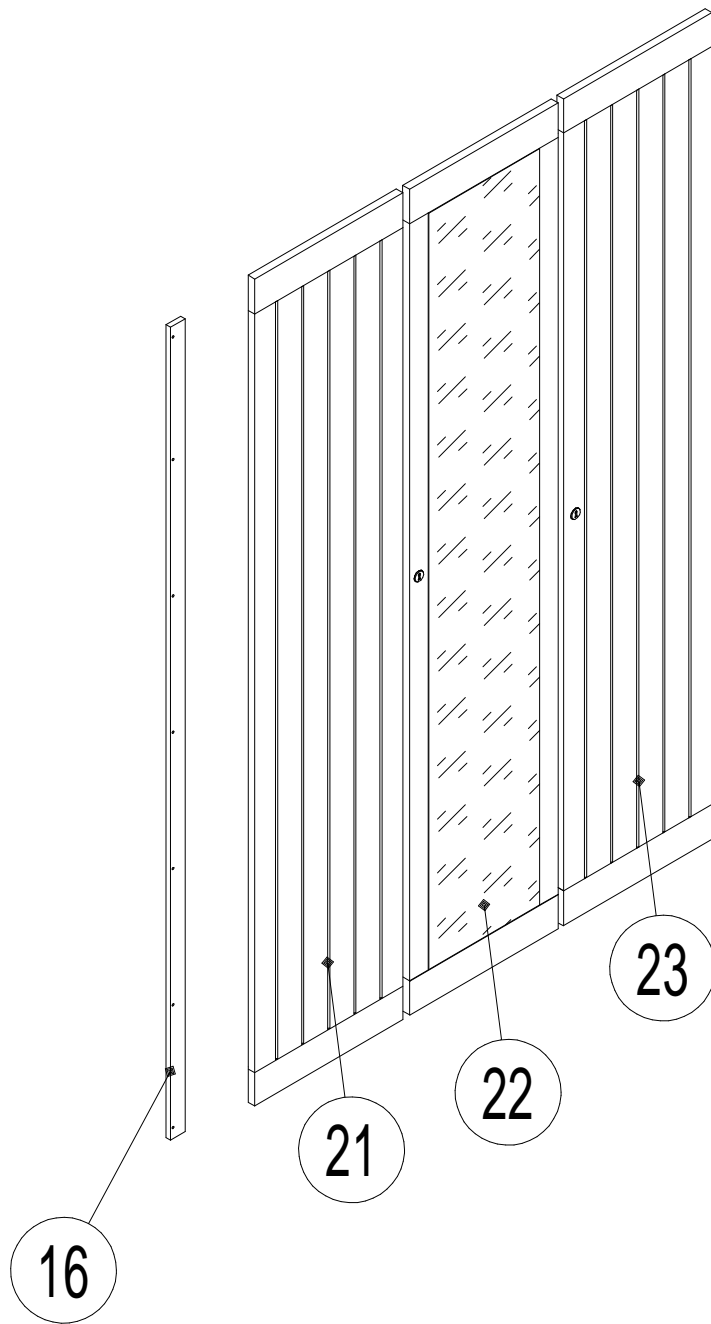


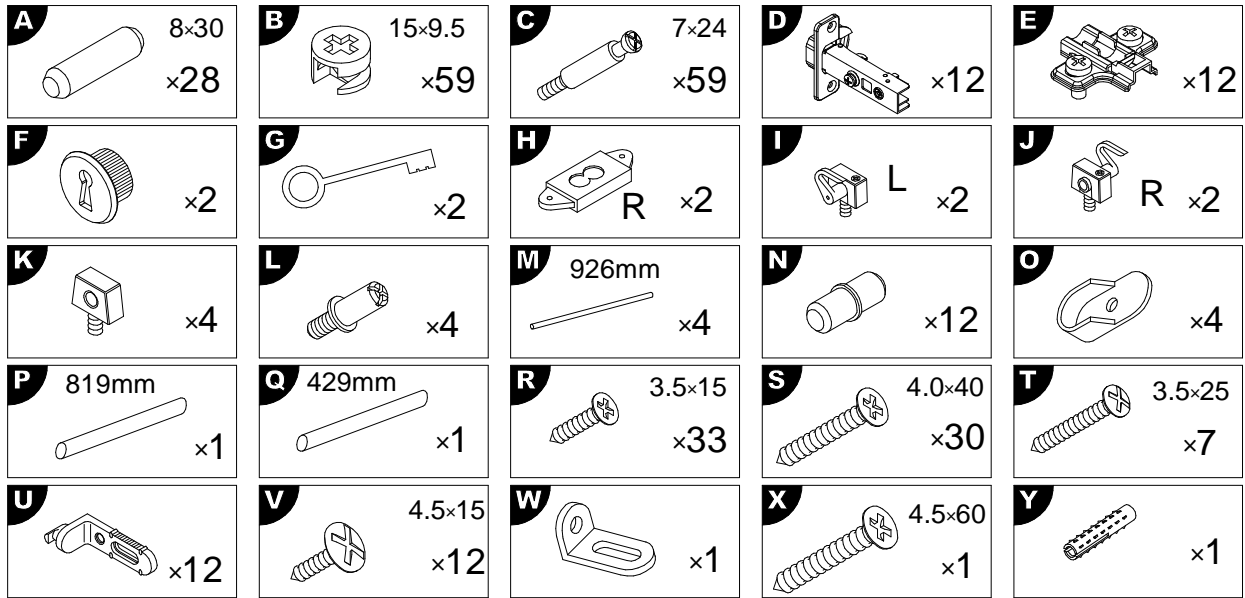

N	Size/MaB (mm)	Qty	✓	N	Size/MaB (mm)	Qty	✓
1	1276x574	1		13	1216x30	1	
2	2002x516	1		14	1216x30	1	
3	2002x516	1		15	1912x44	1	
4	1972x550	1		16	1908x40	1	
5	1976x30	1		17	80x36	8	
6	435x535	1		18	74x40	1	
7	825x530	1		19	1981x417	2	
8	2060x40	1		20	1981x445	1	
9	2060x40	1		21	1940x404	1	
10	2060x40	1		22	1940x404	1	
11	2060x40	1		23	1940x404	1	
12	1972x30	2		24	1364x600	1	

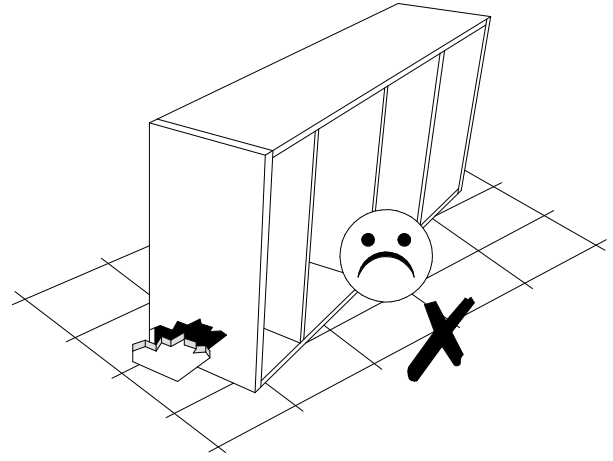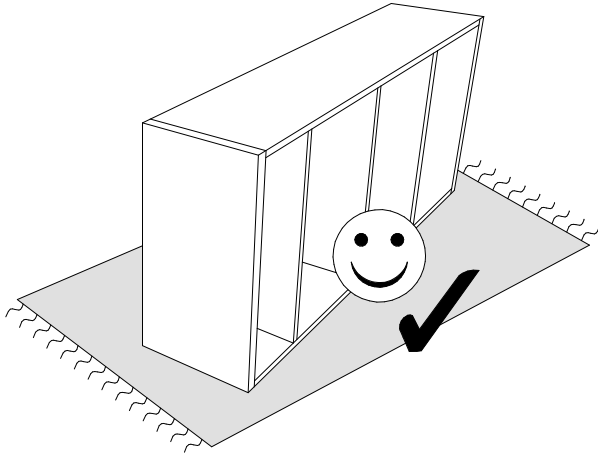

1

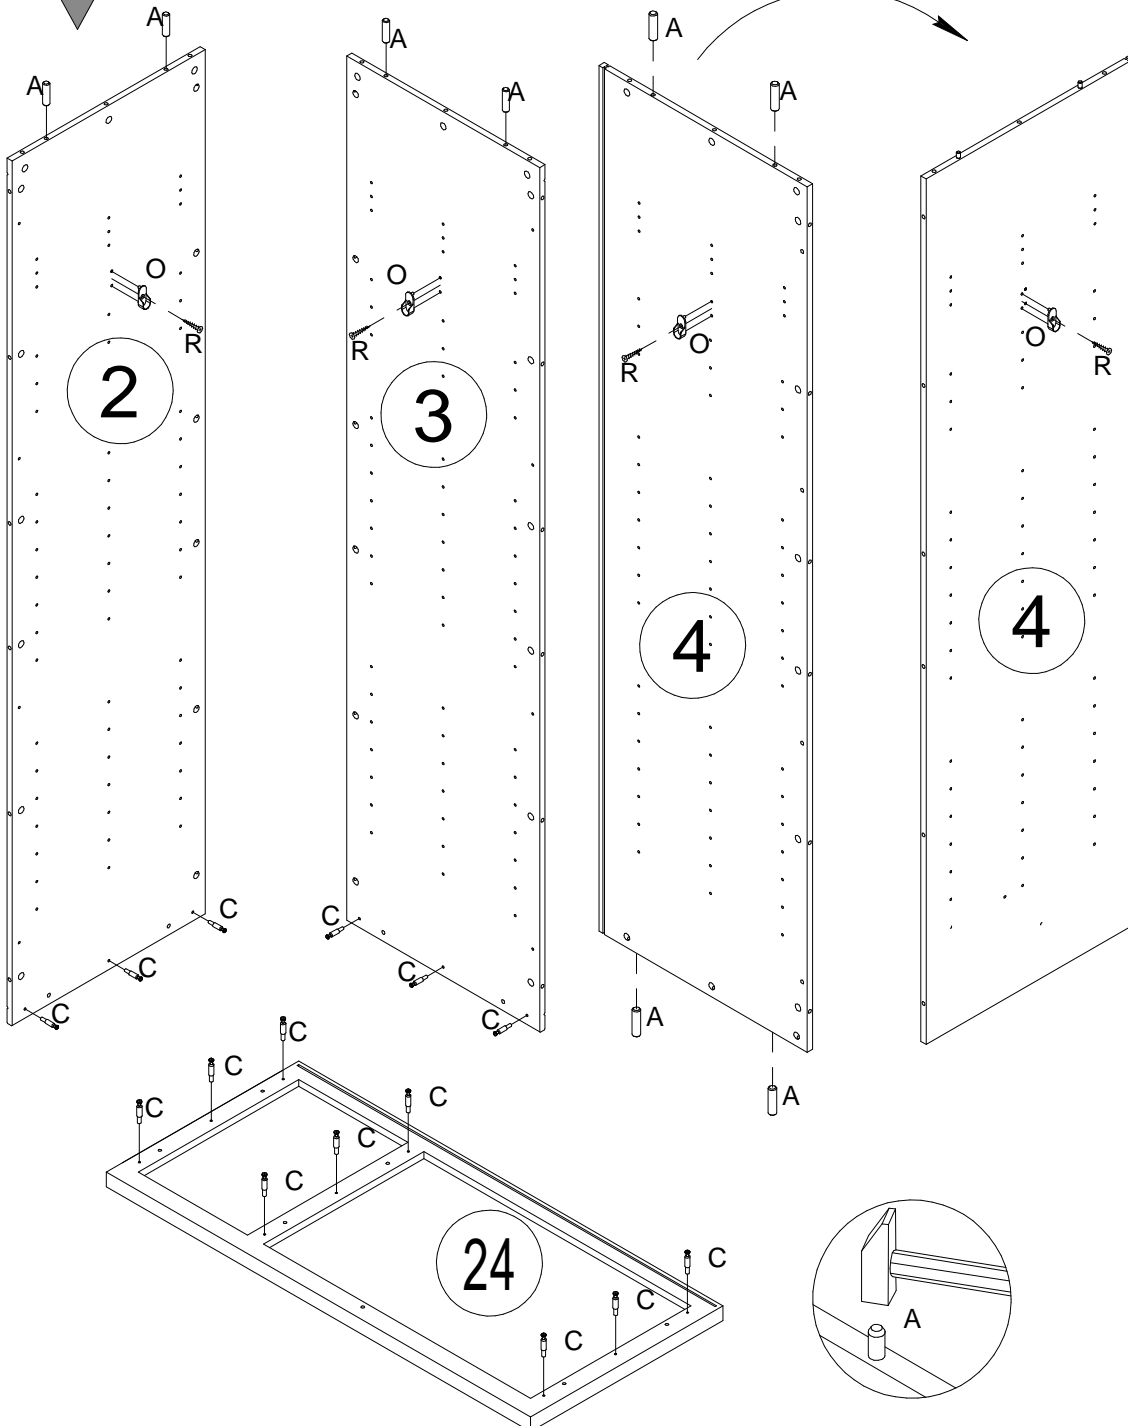



**A** 8x30  
x16






**R** 3.5x15  
x4


**O** x4


**C** 7x24  
x15


17 x8

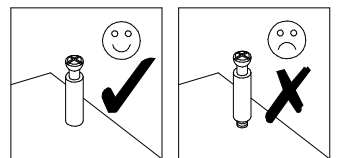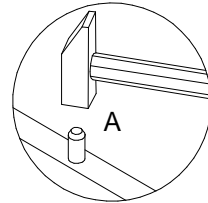


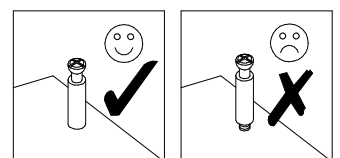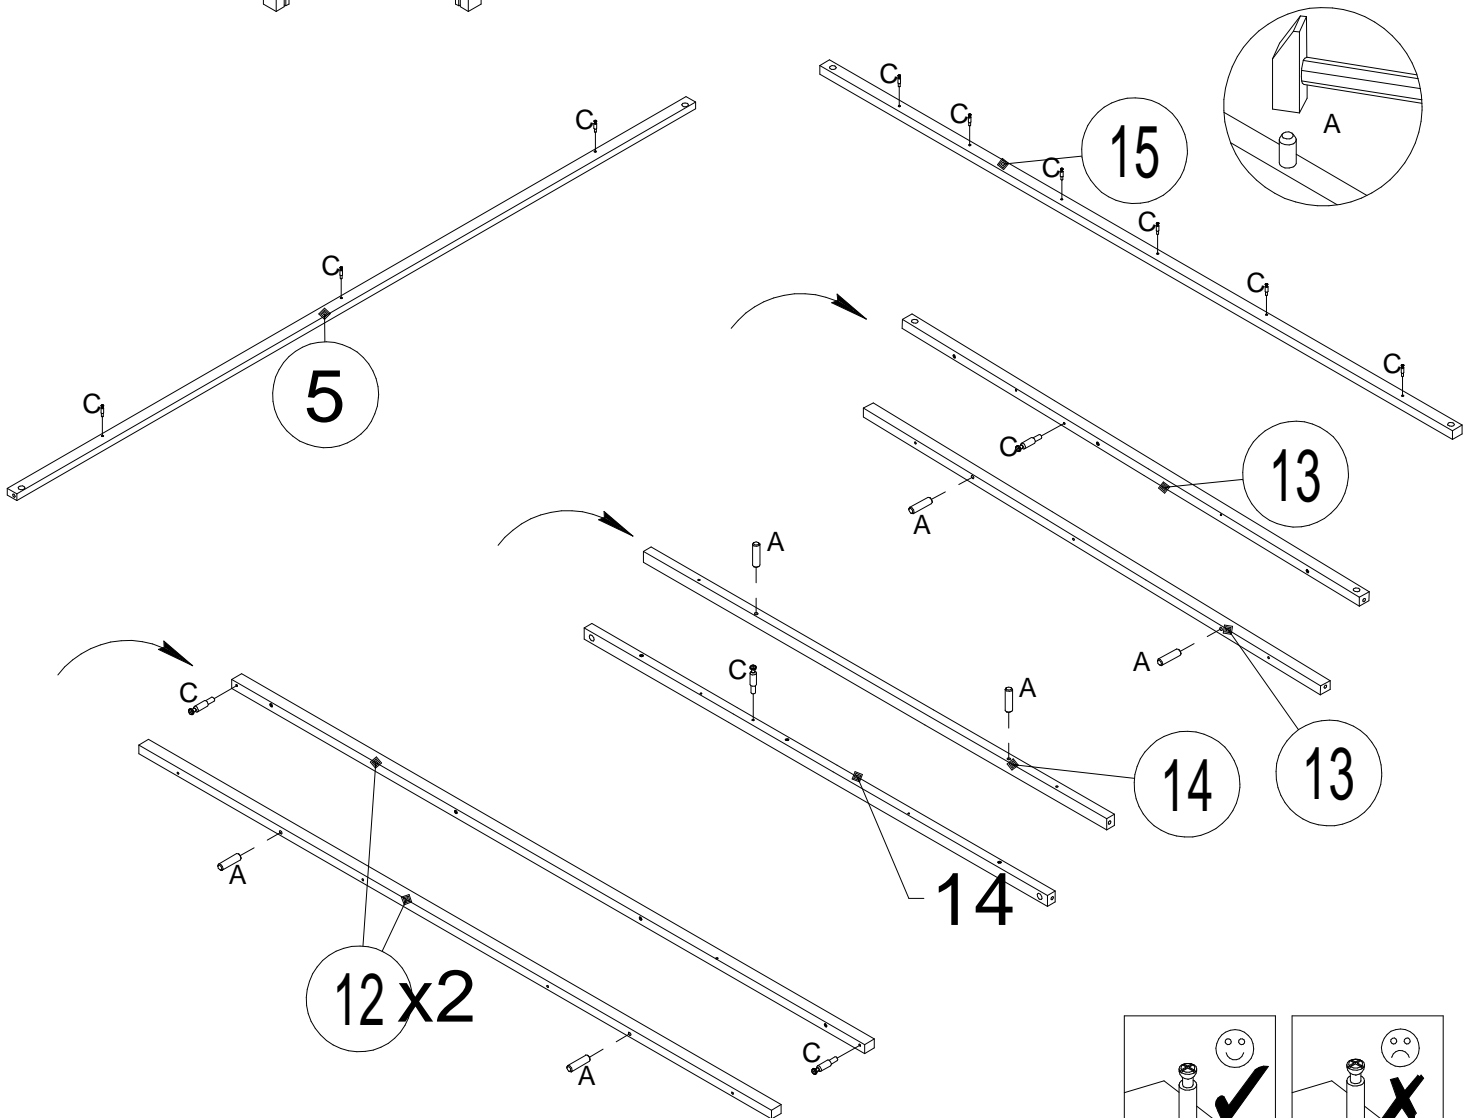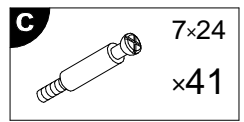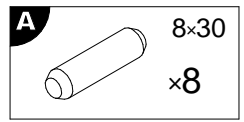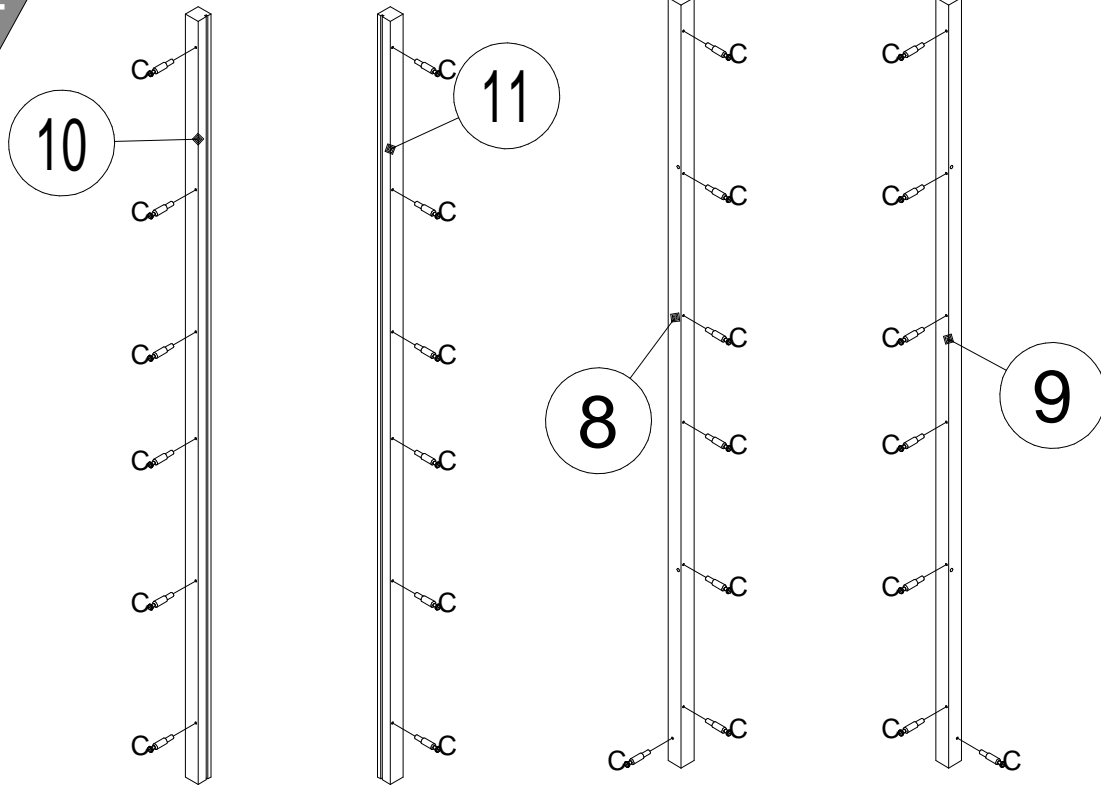

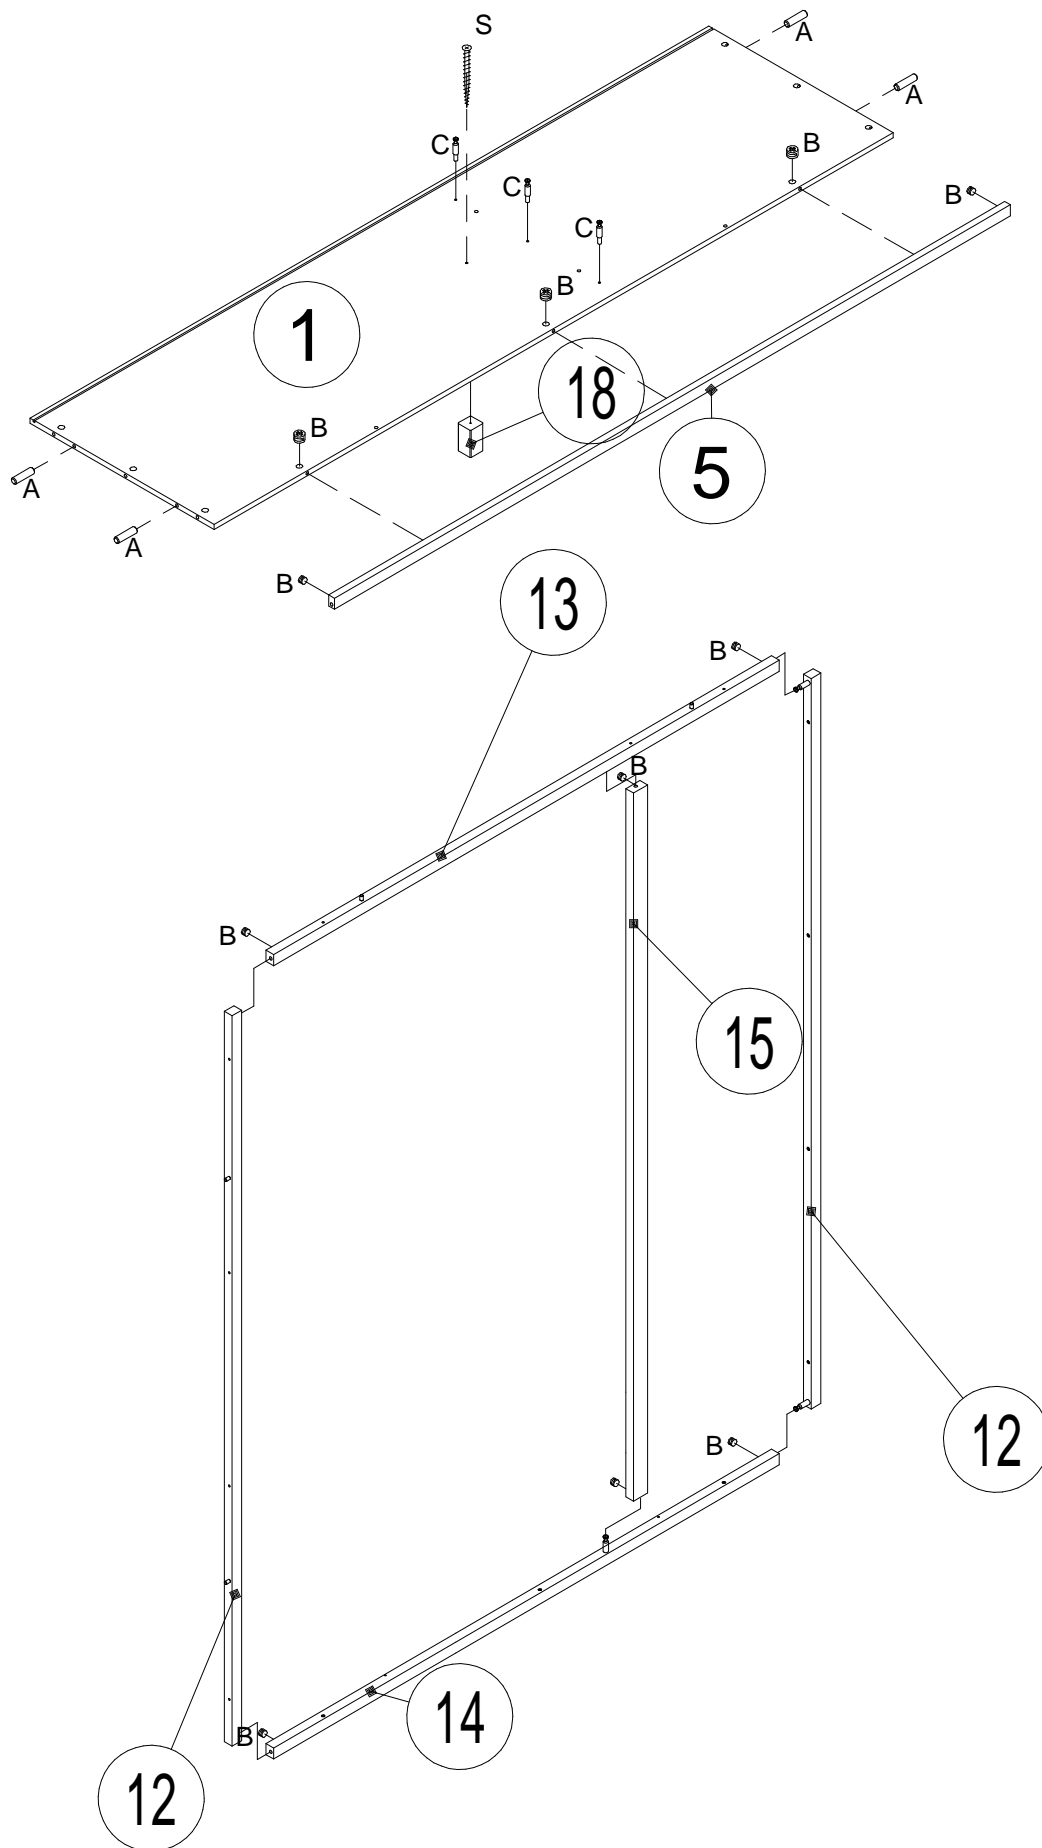
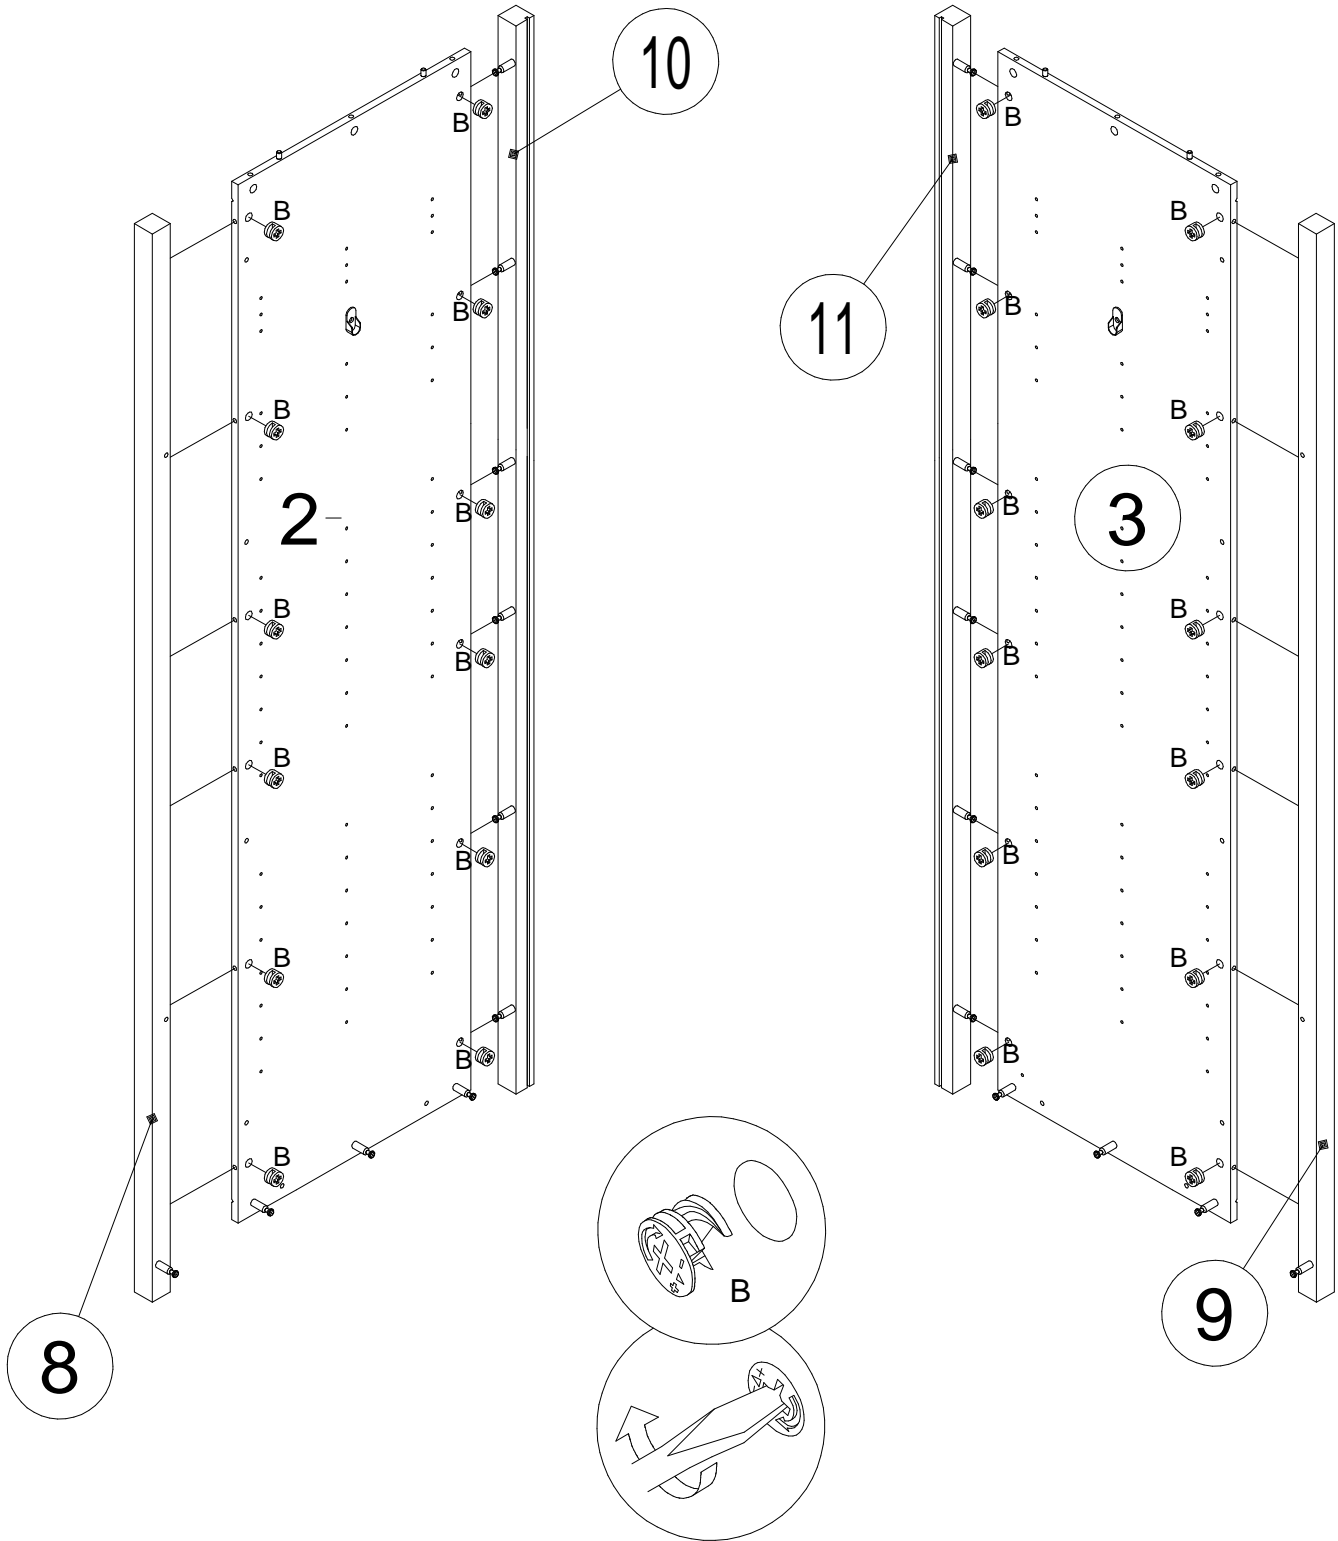


<b>A</b>	8x30
	x4





<b>B</b>	15x9.5
	x11





<b>C</b>	7x24
	x3



<b>S</b>	4.0x40
	x1









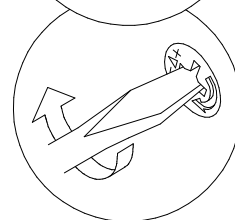
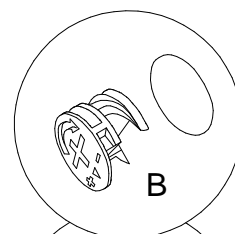

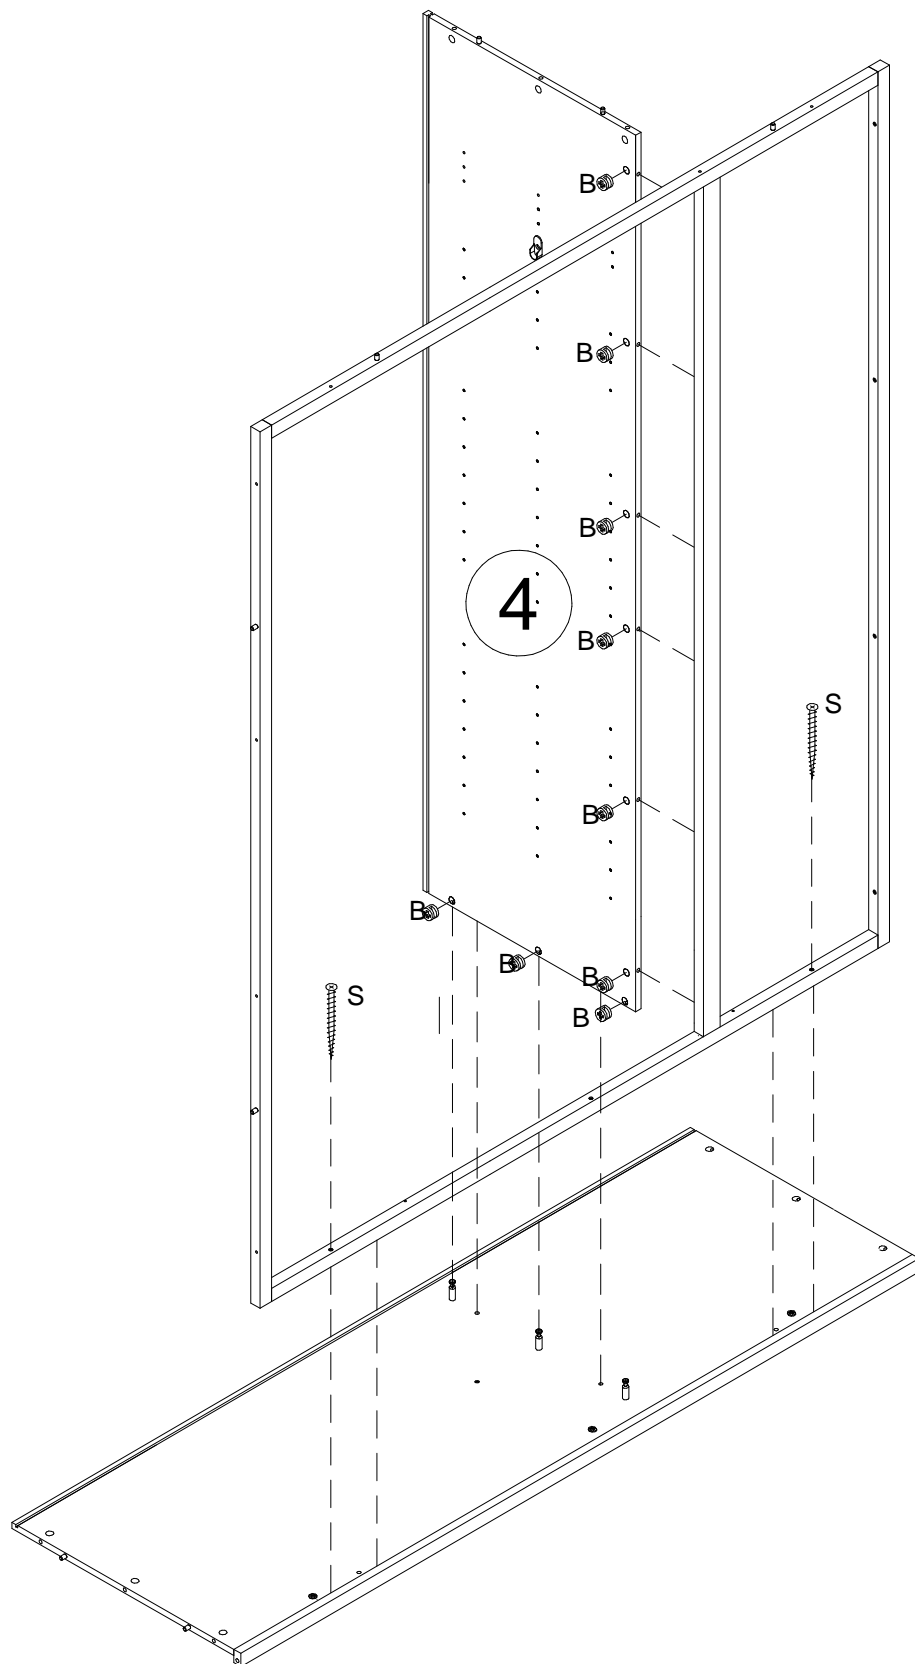


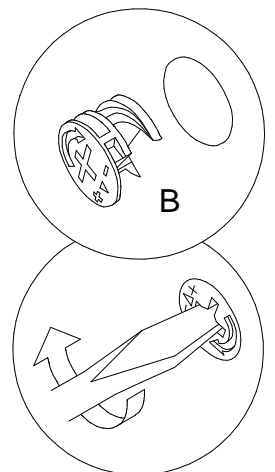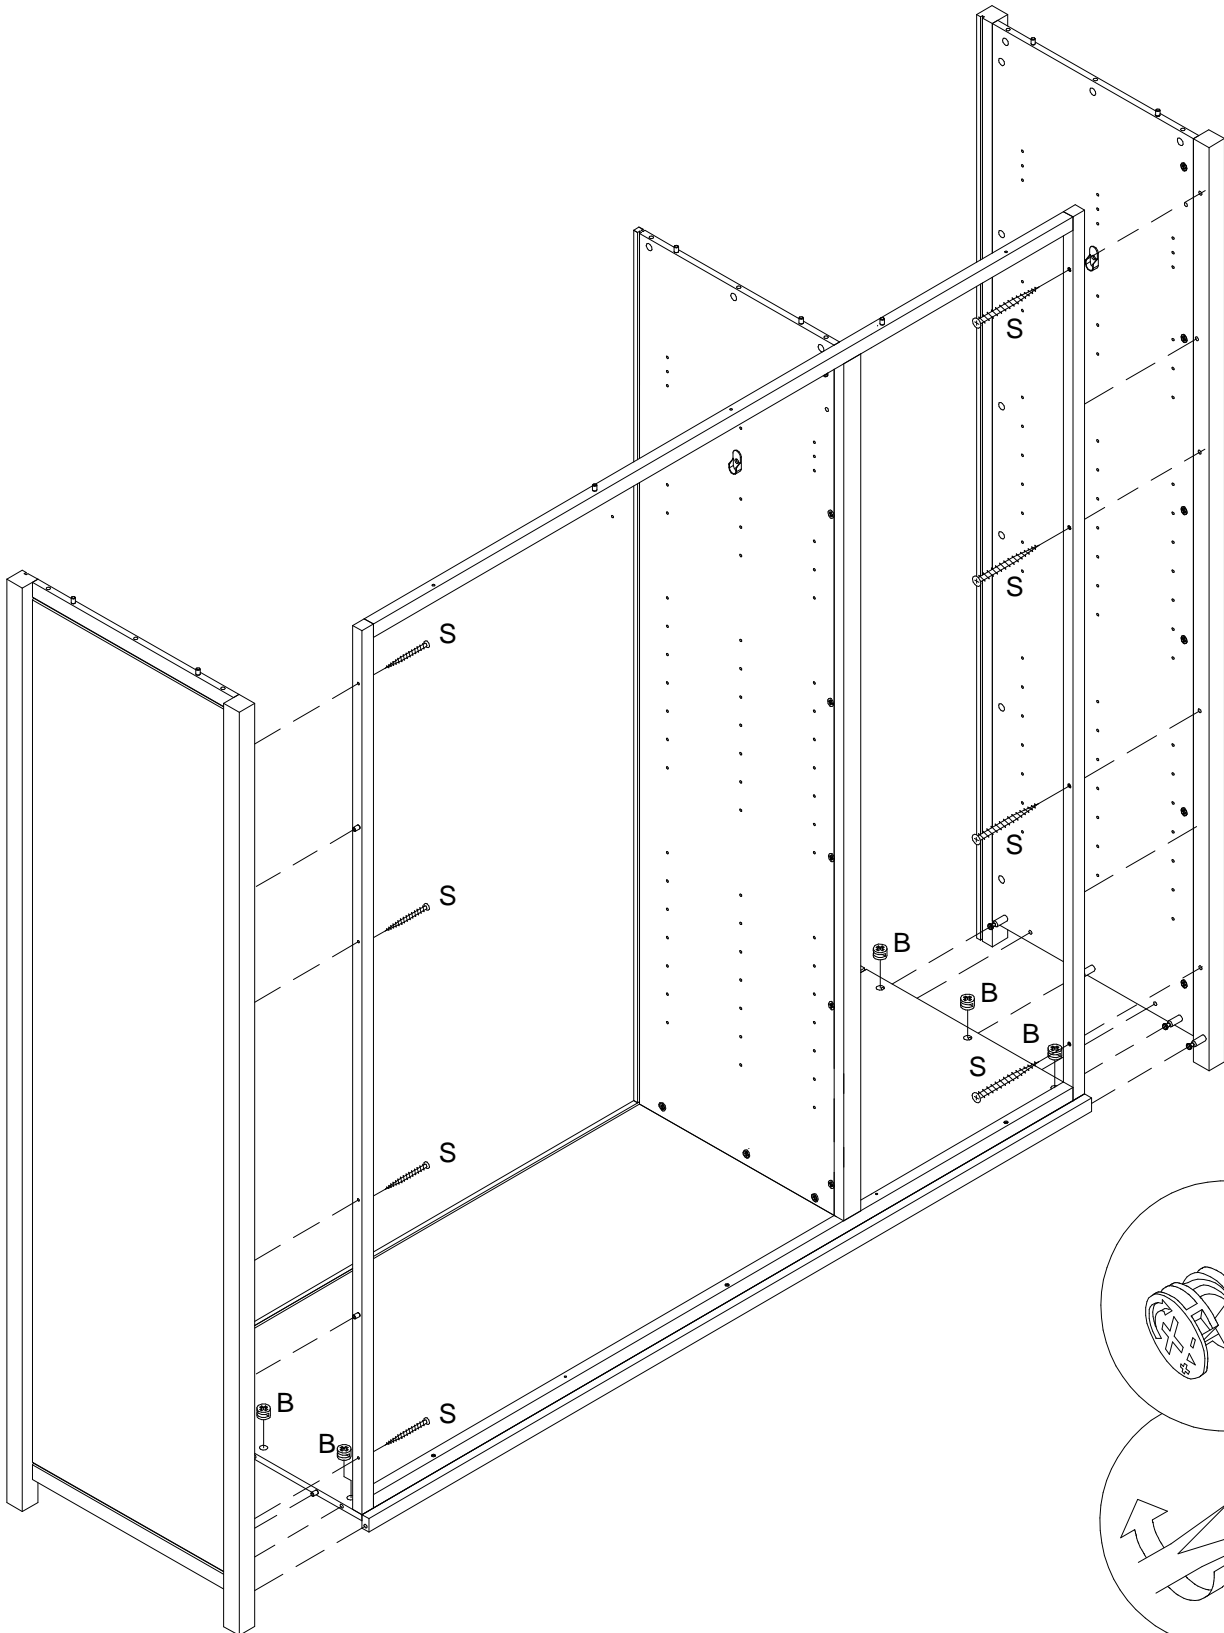






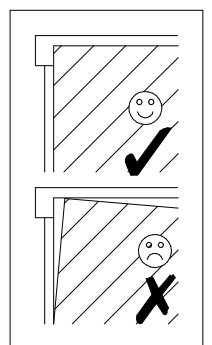
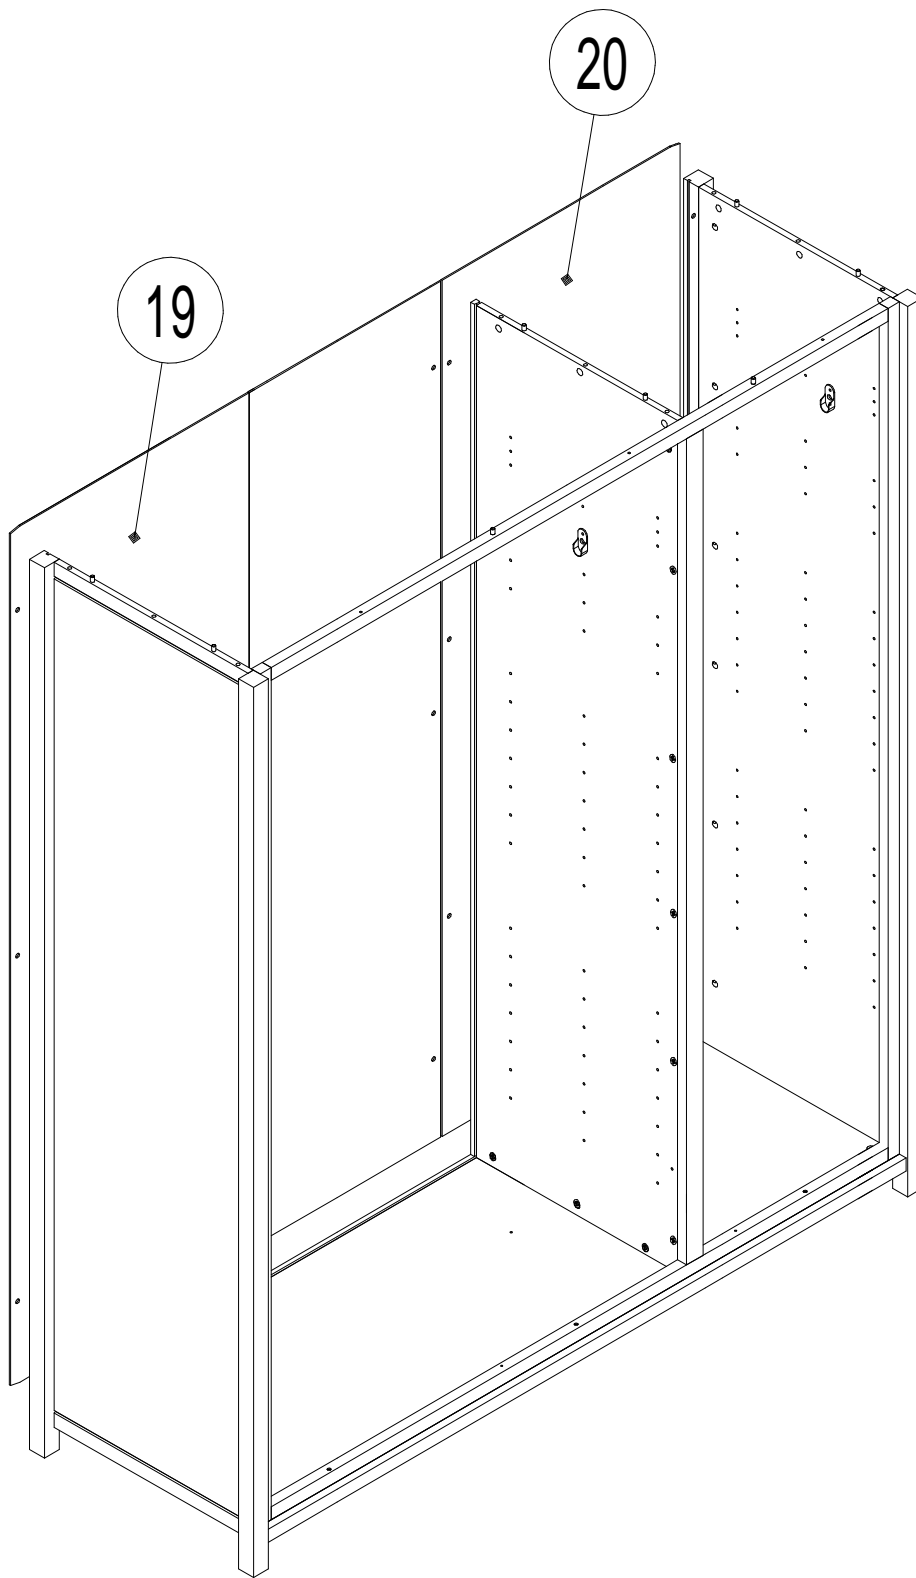





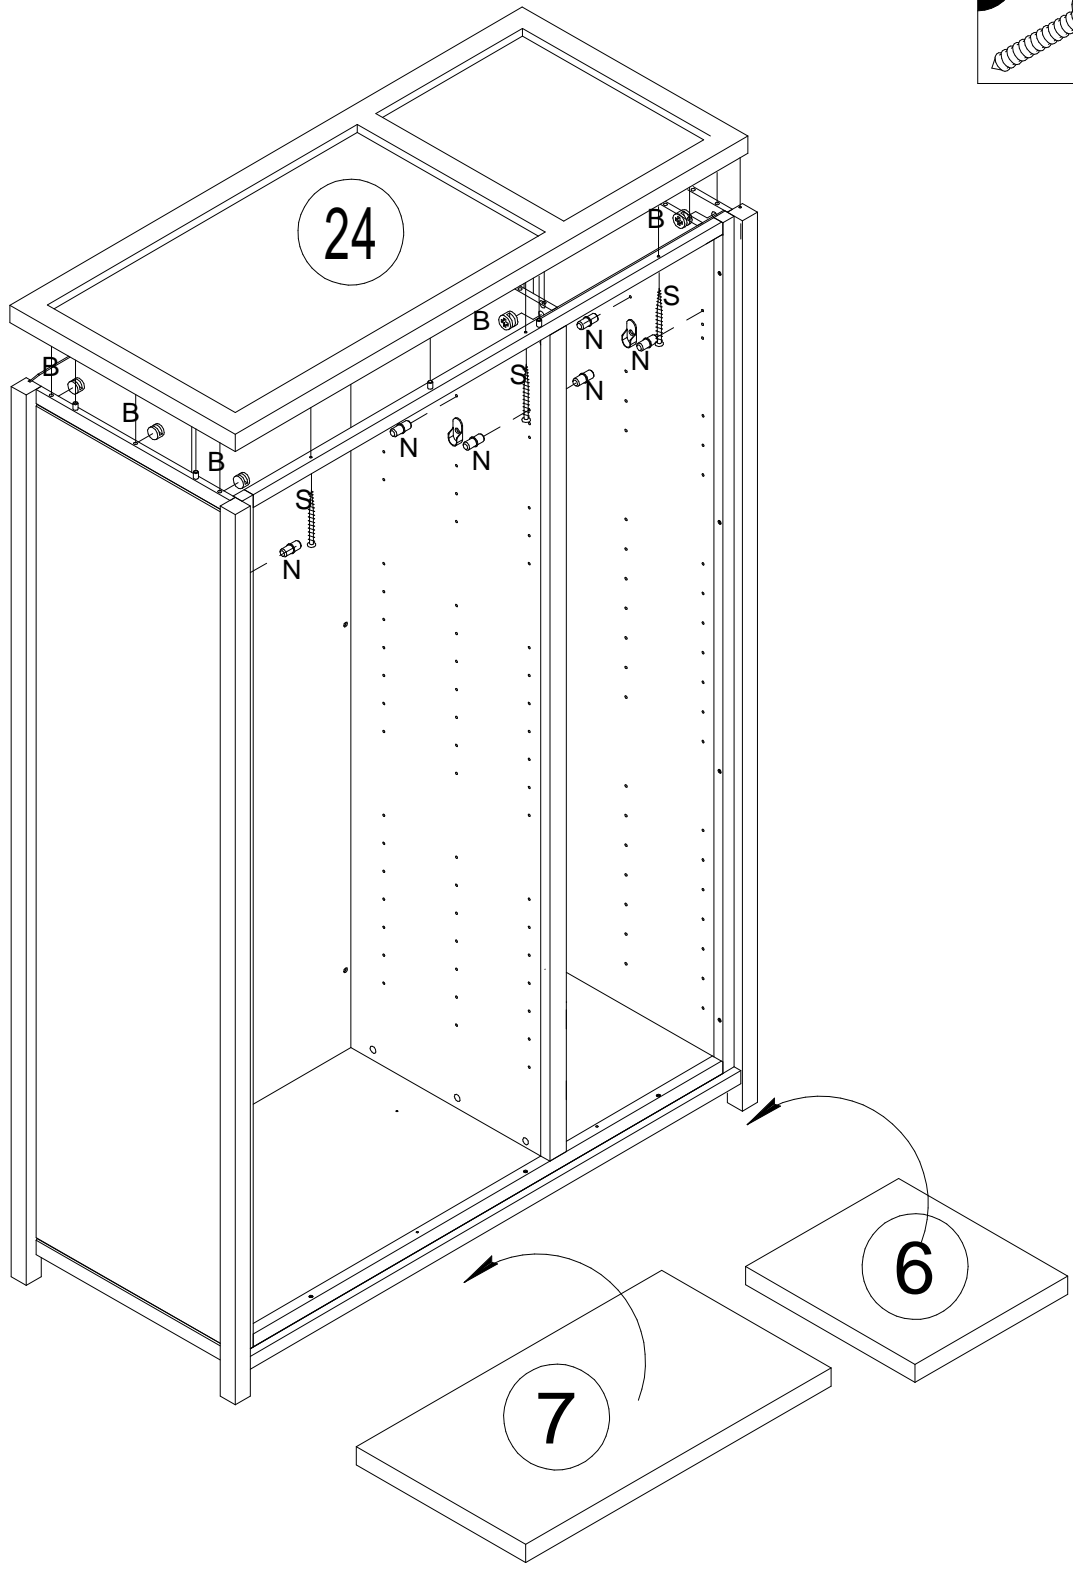









- B** 15x9.5  
x9
- N**  
x12
- S** 4.0x40  
x3

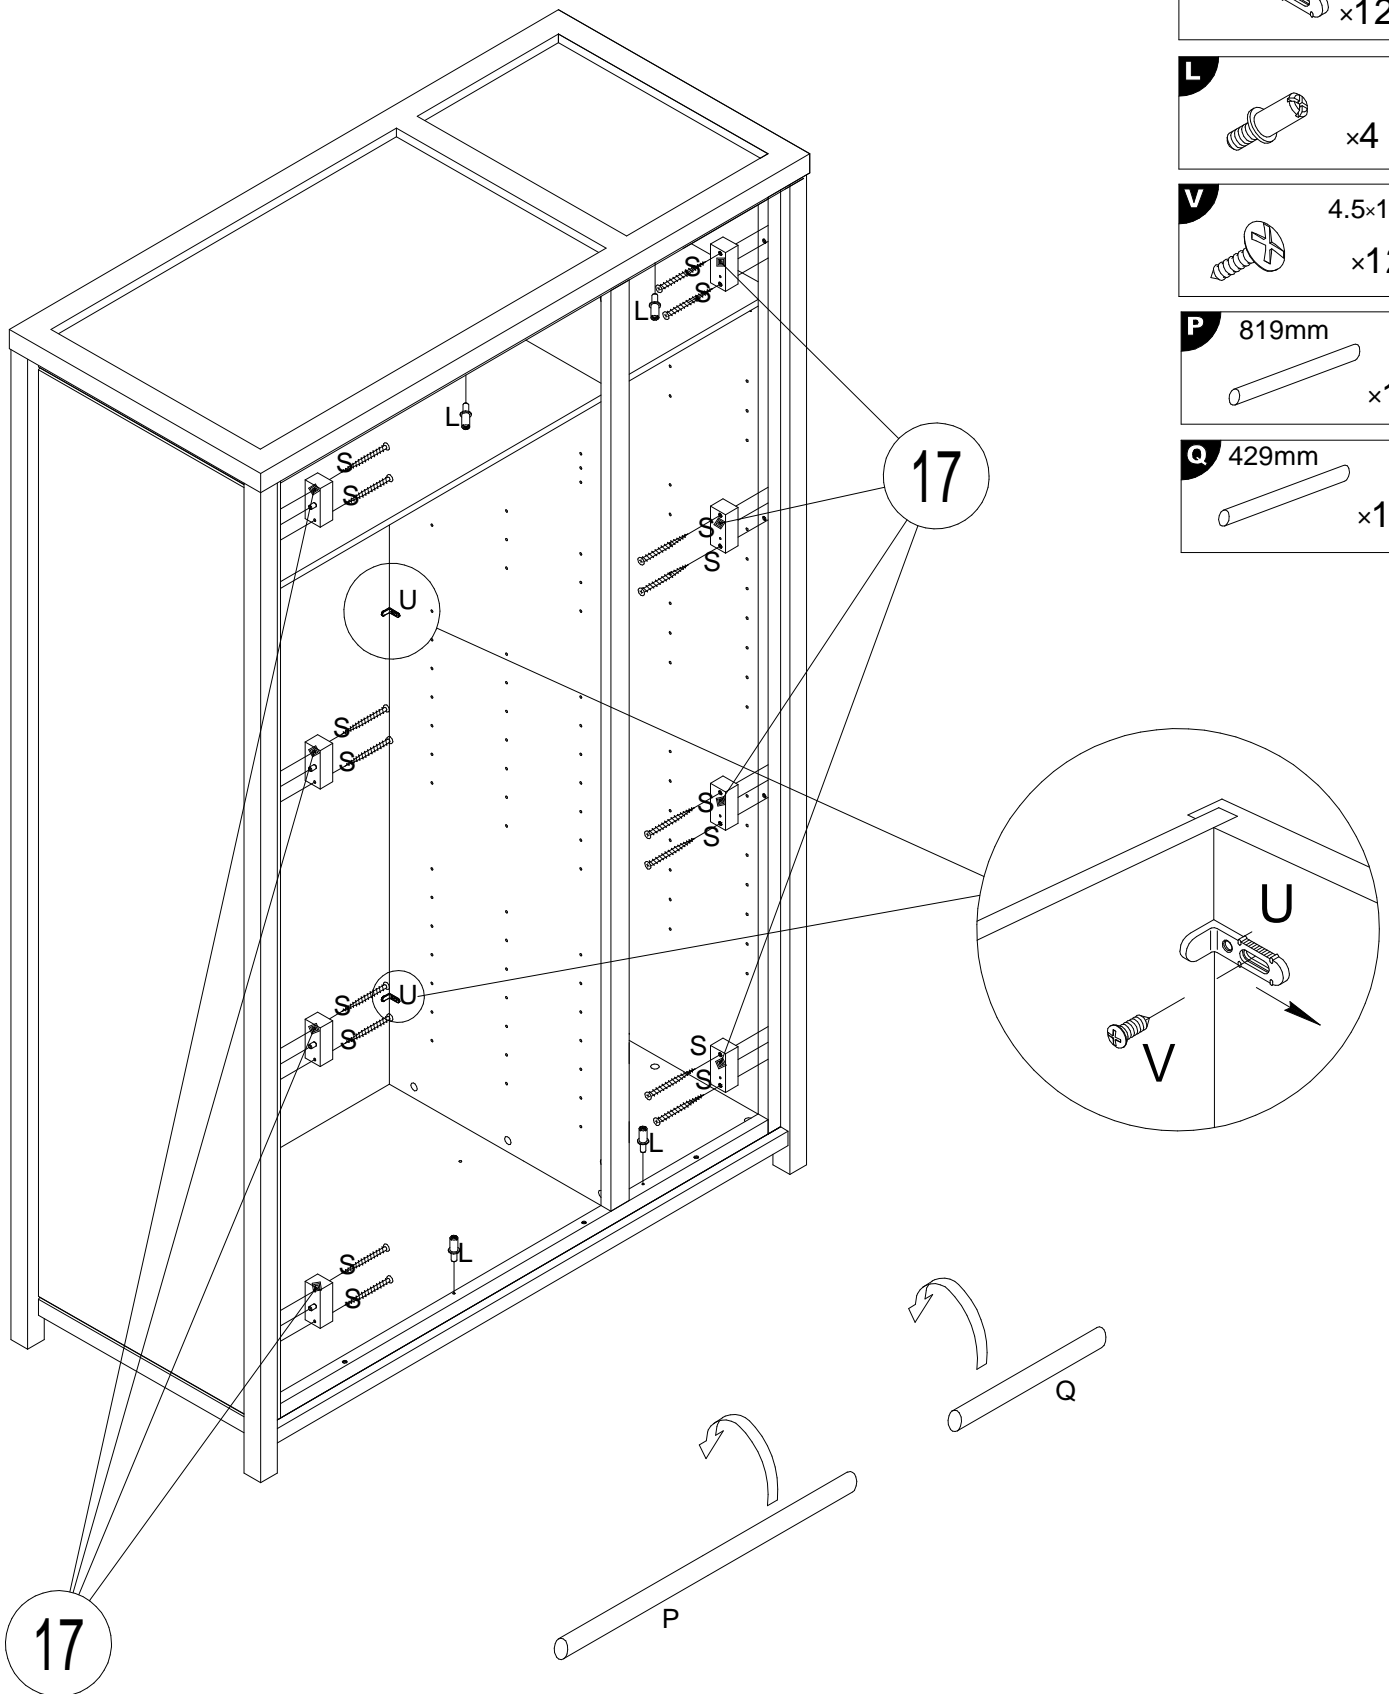

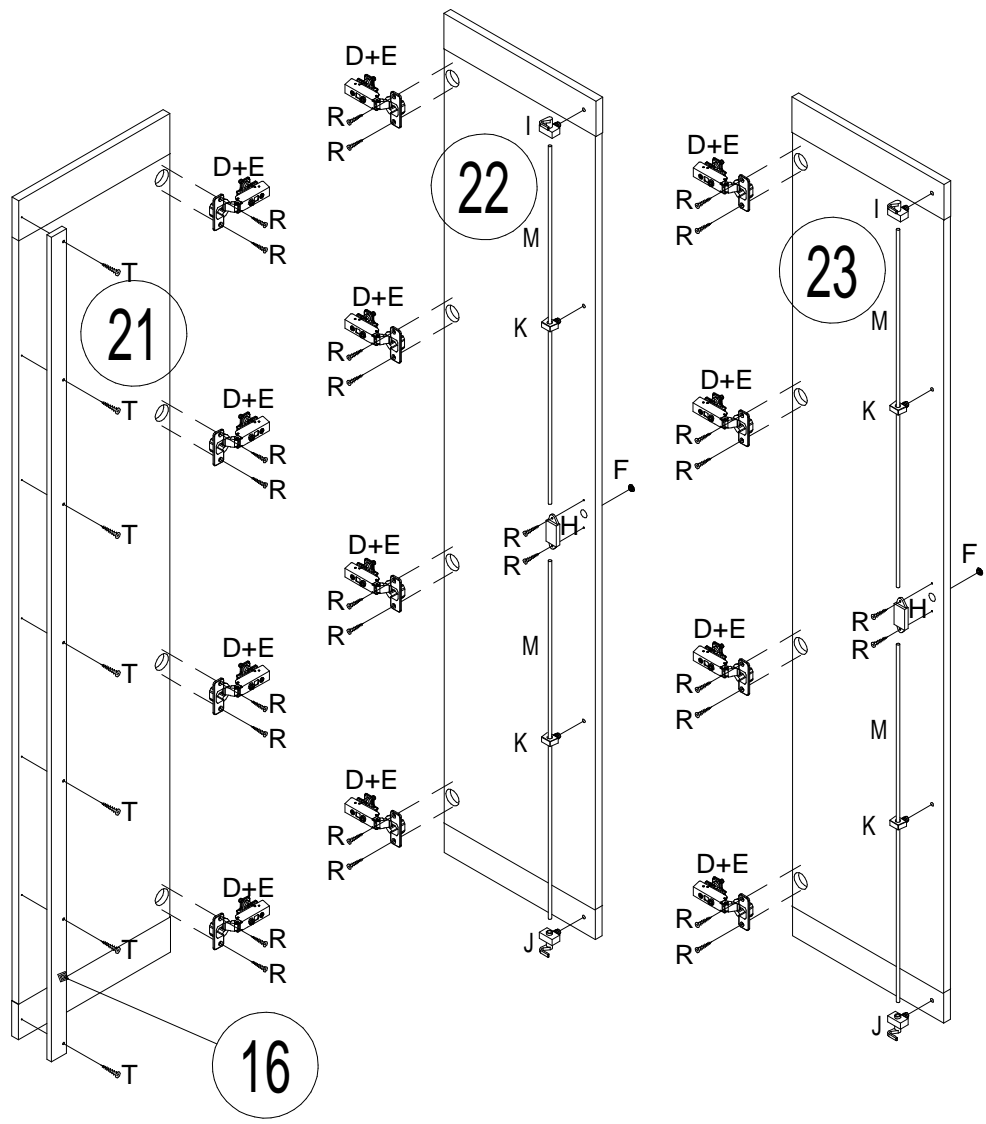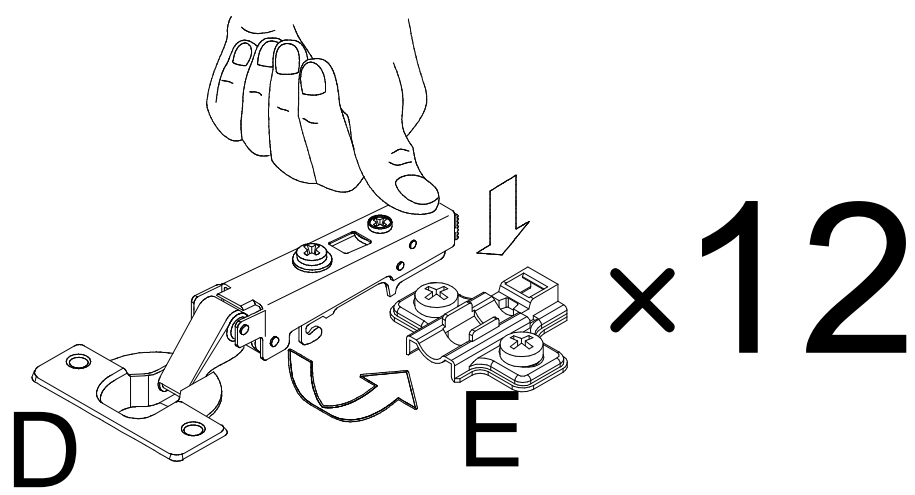



- D**  x12
- E**  x12
- F**  x2
- H**  R x2
- I**  L x2
- J**  R x2
- K**  x4
- M** 926mm  x4
- R**  3.5x15  
28
- T**  3.5x25  
x7

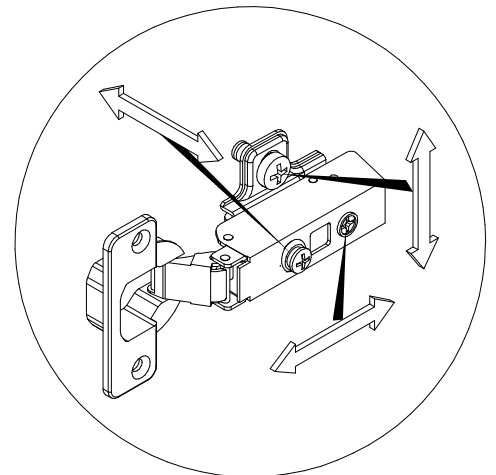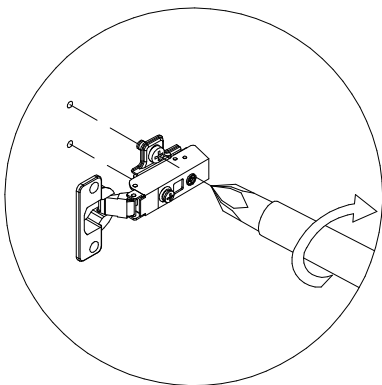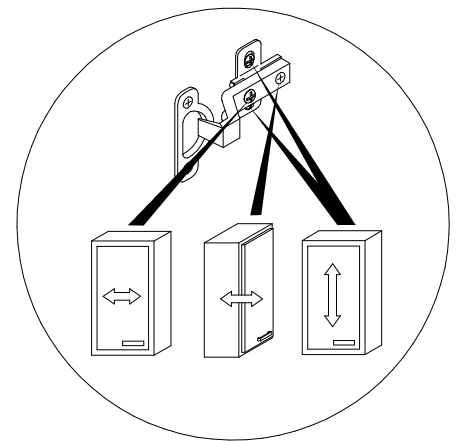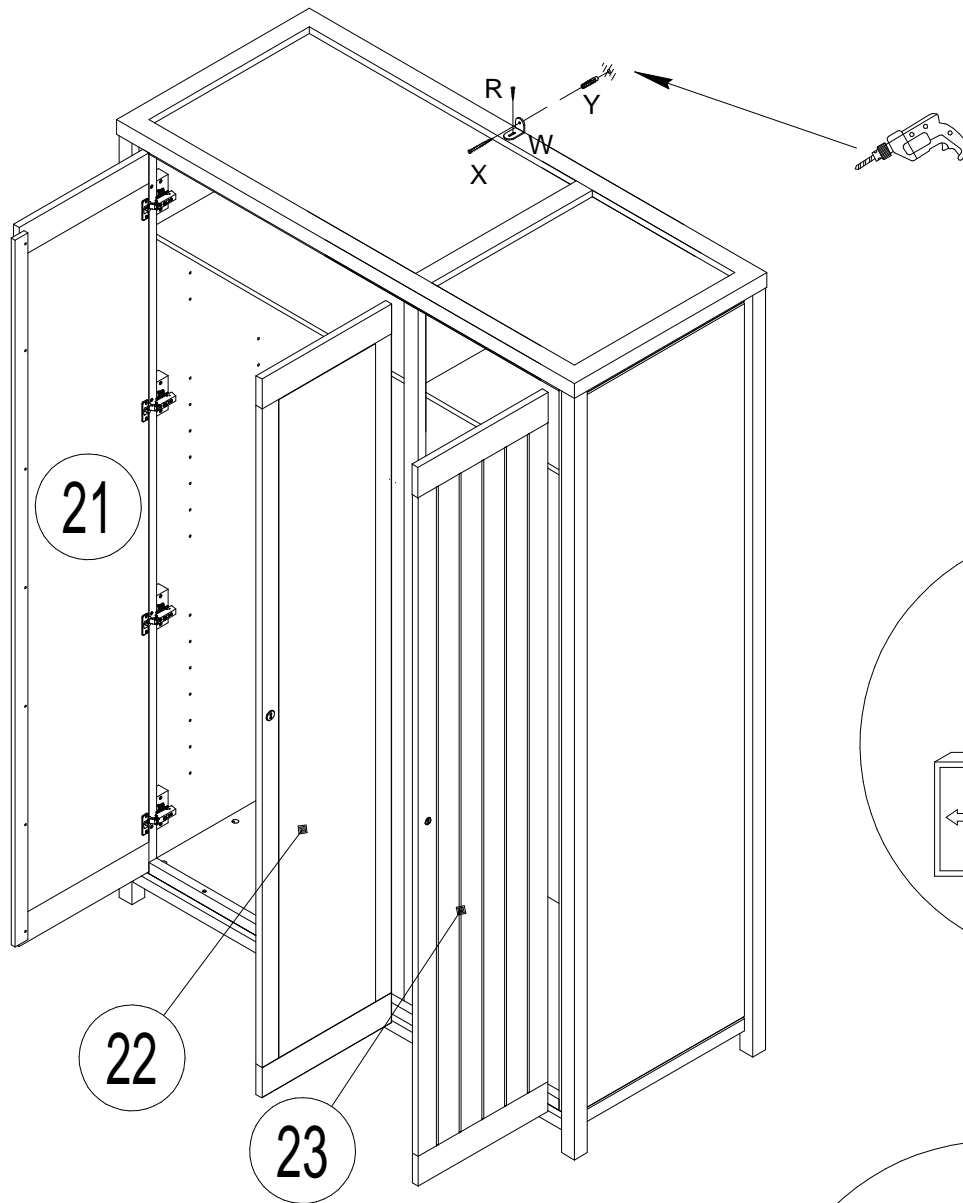

Обязательно установите крепление к стене во избежание опрокидывания !  
Для некоторых типов стен может потребоваться специальный дюбель !