


# КЛАССИК

Кровать верхнеярусная №3

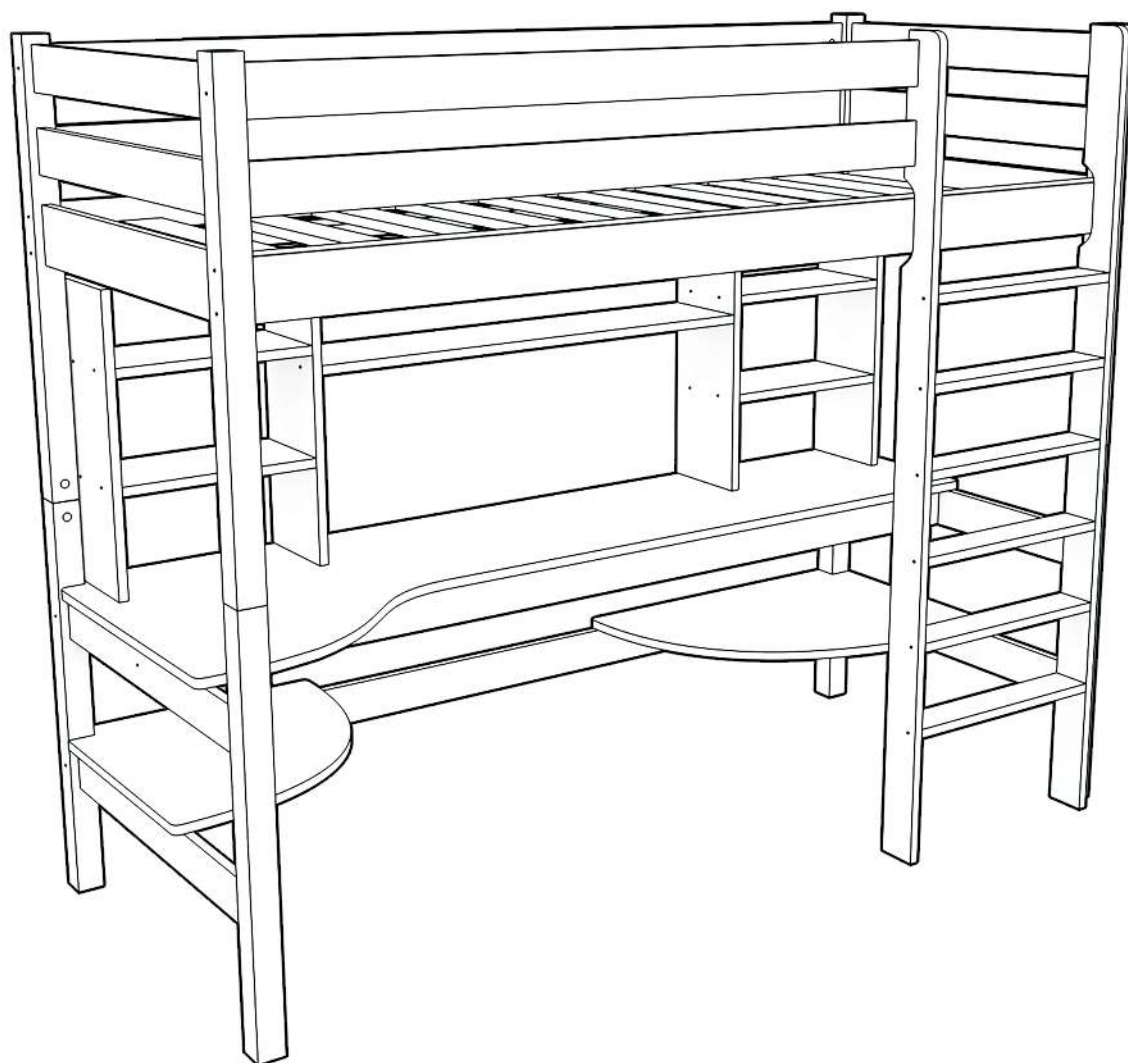


 **TIMBERICA**


**RU** Инструкция по сборке

**EN** Assembly instruction


**FI** Koontaohje




1005  
**42**



1011  
**42**



1002  
**17**



1004  
**14**



1008  
**10**




1003  
**18**




1007  
**22**



1014  
**4**

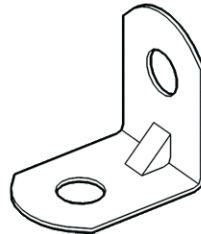


1036  
**12**



1001  
**1**




1006  
**24**

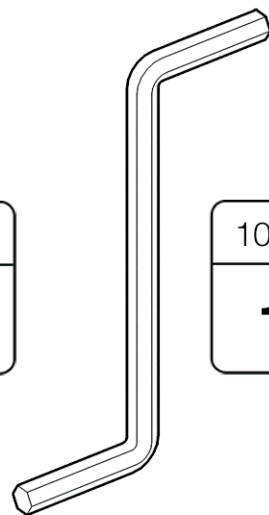


1034  
**1**




1015  
**8**










1015  
**8**




1017  
**8**

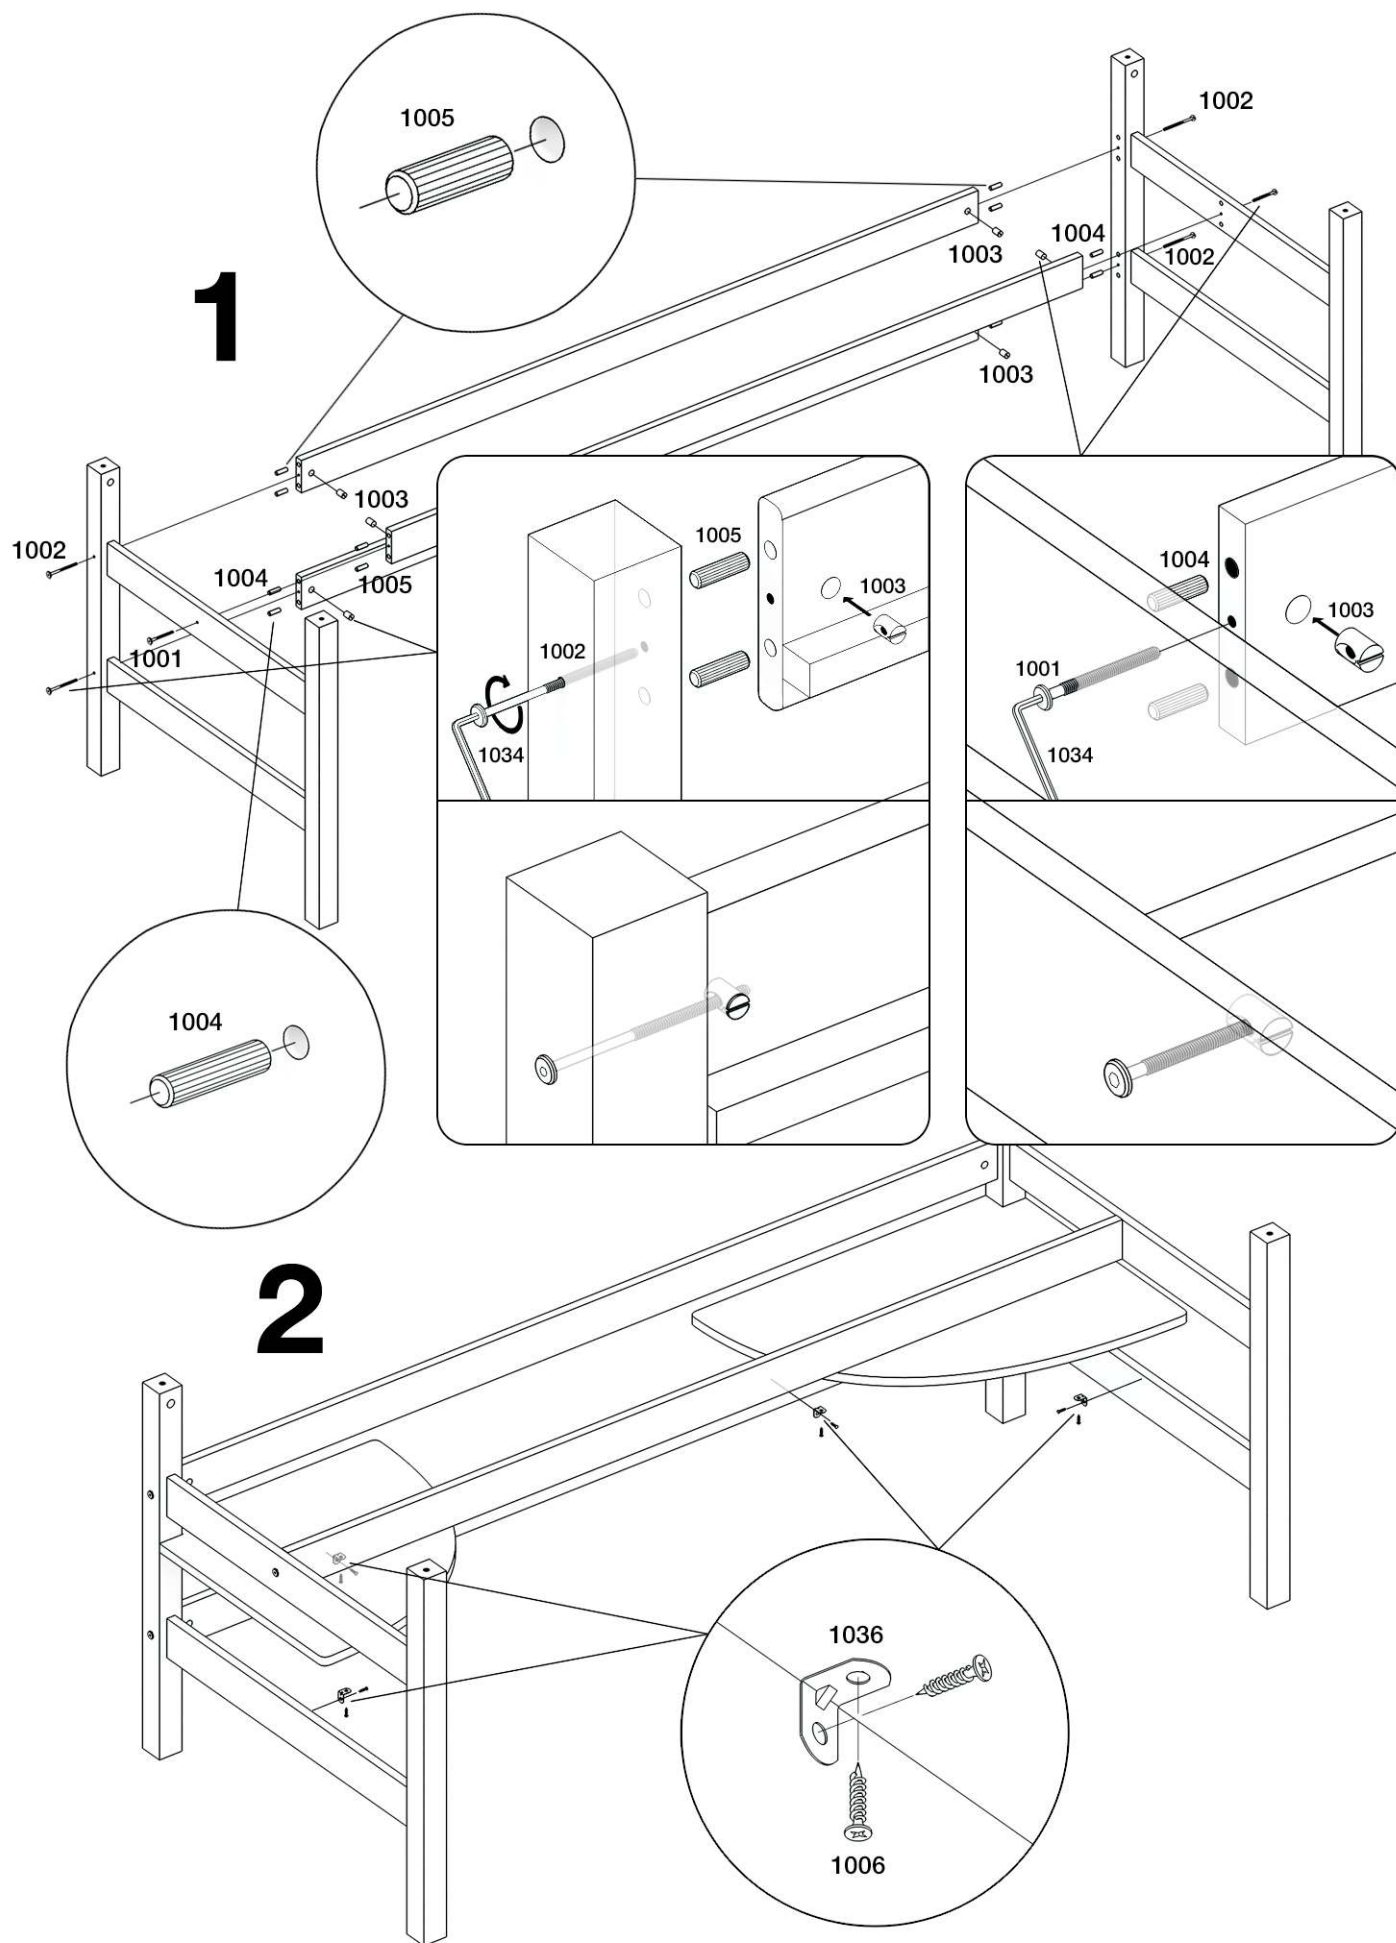


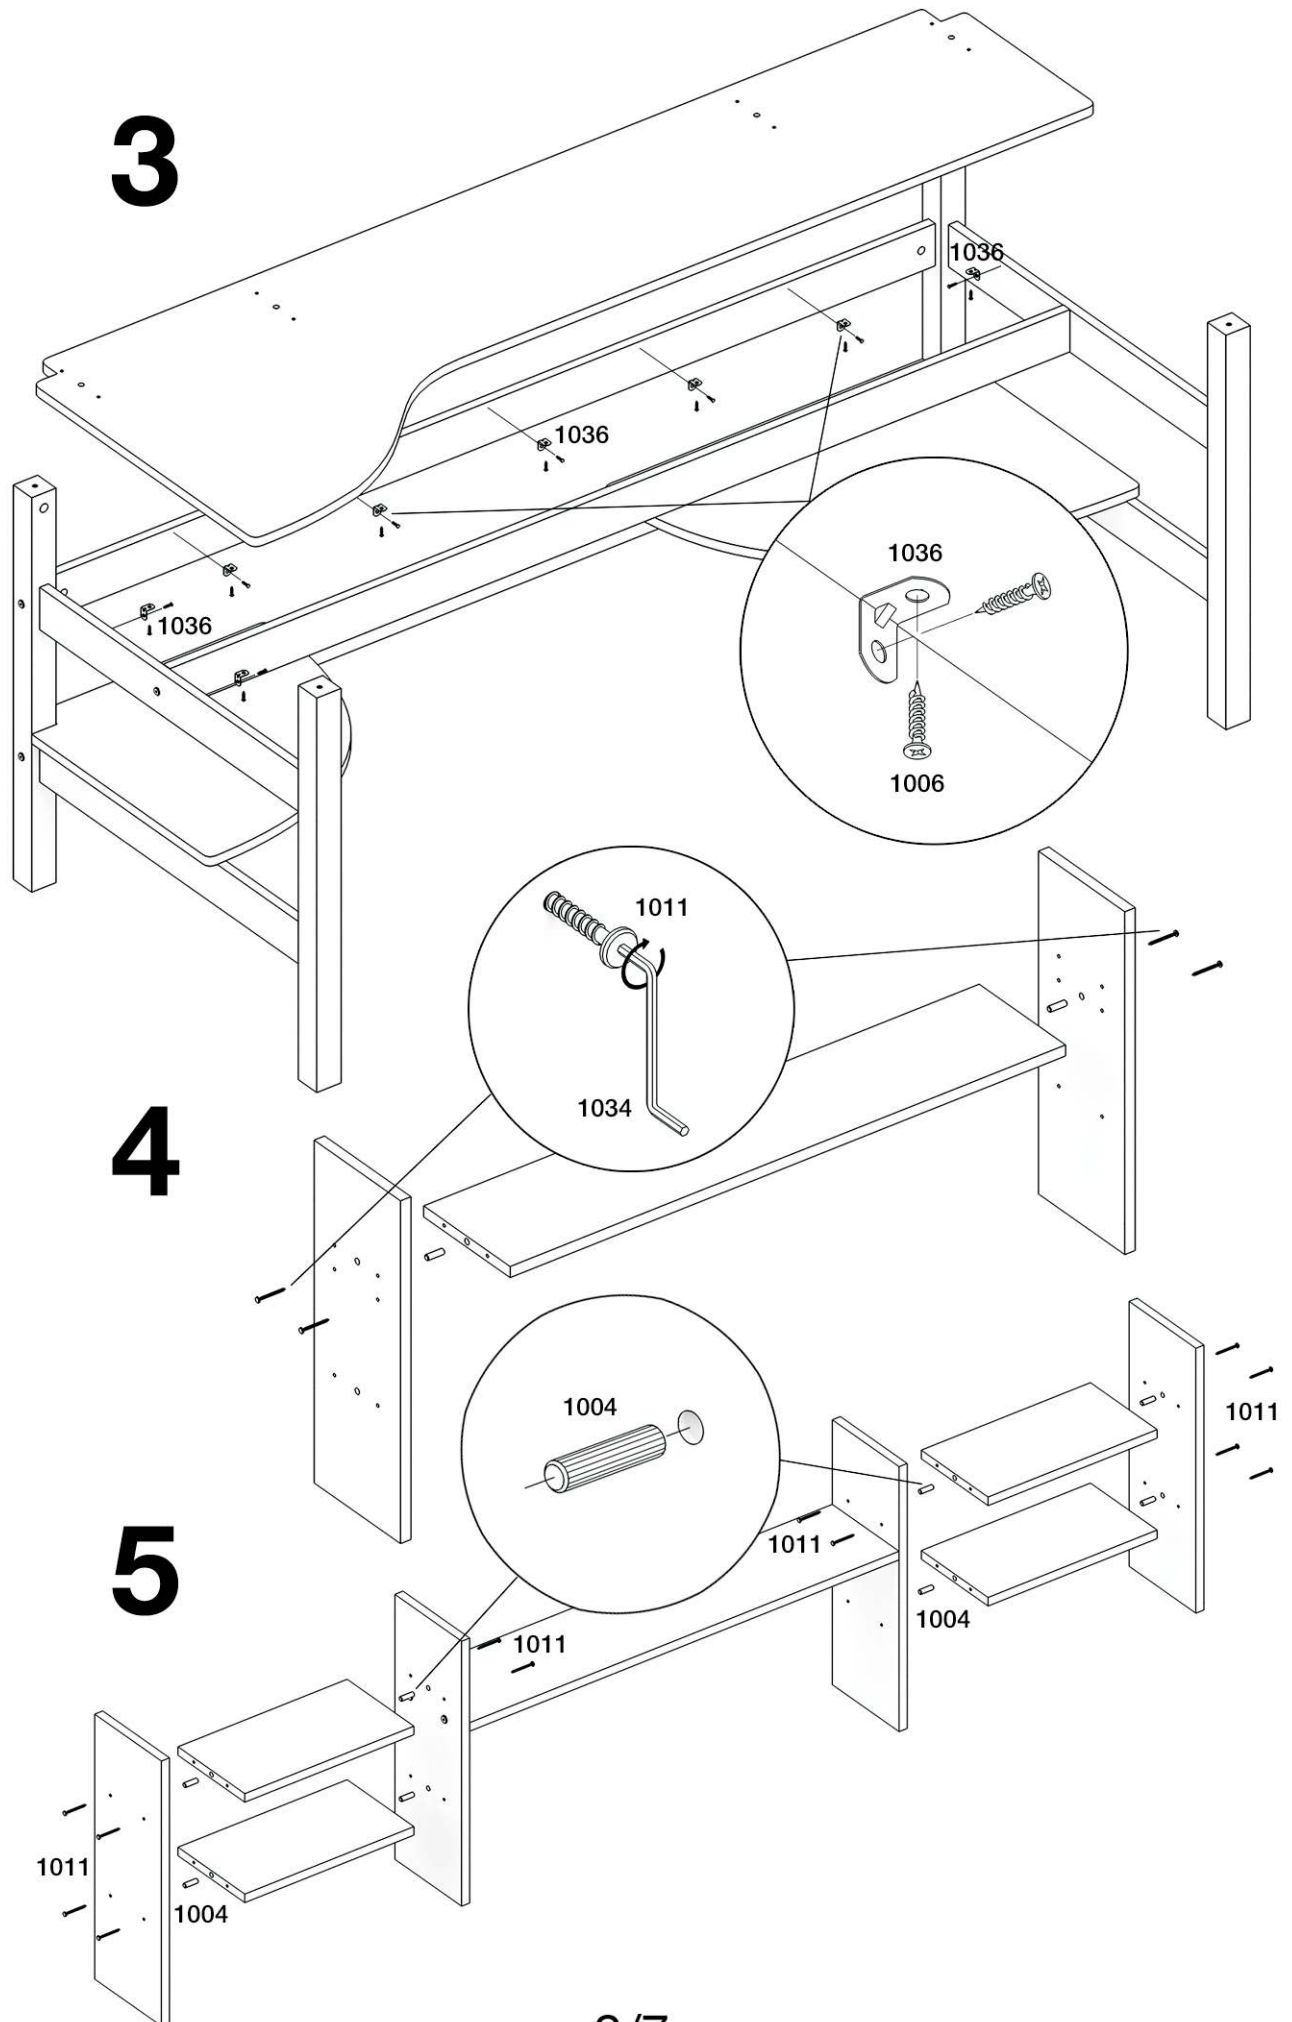


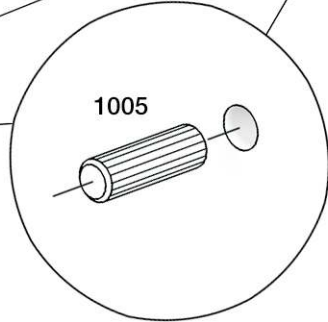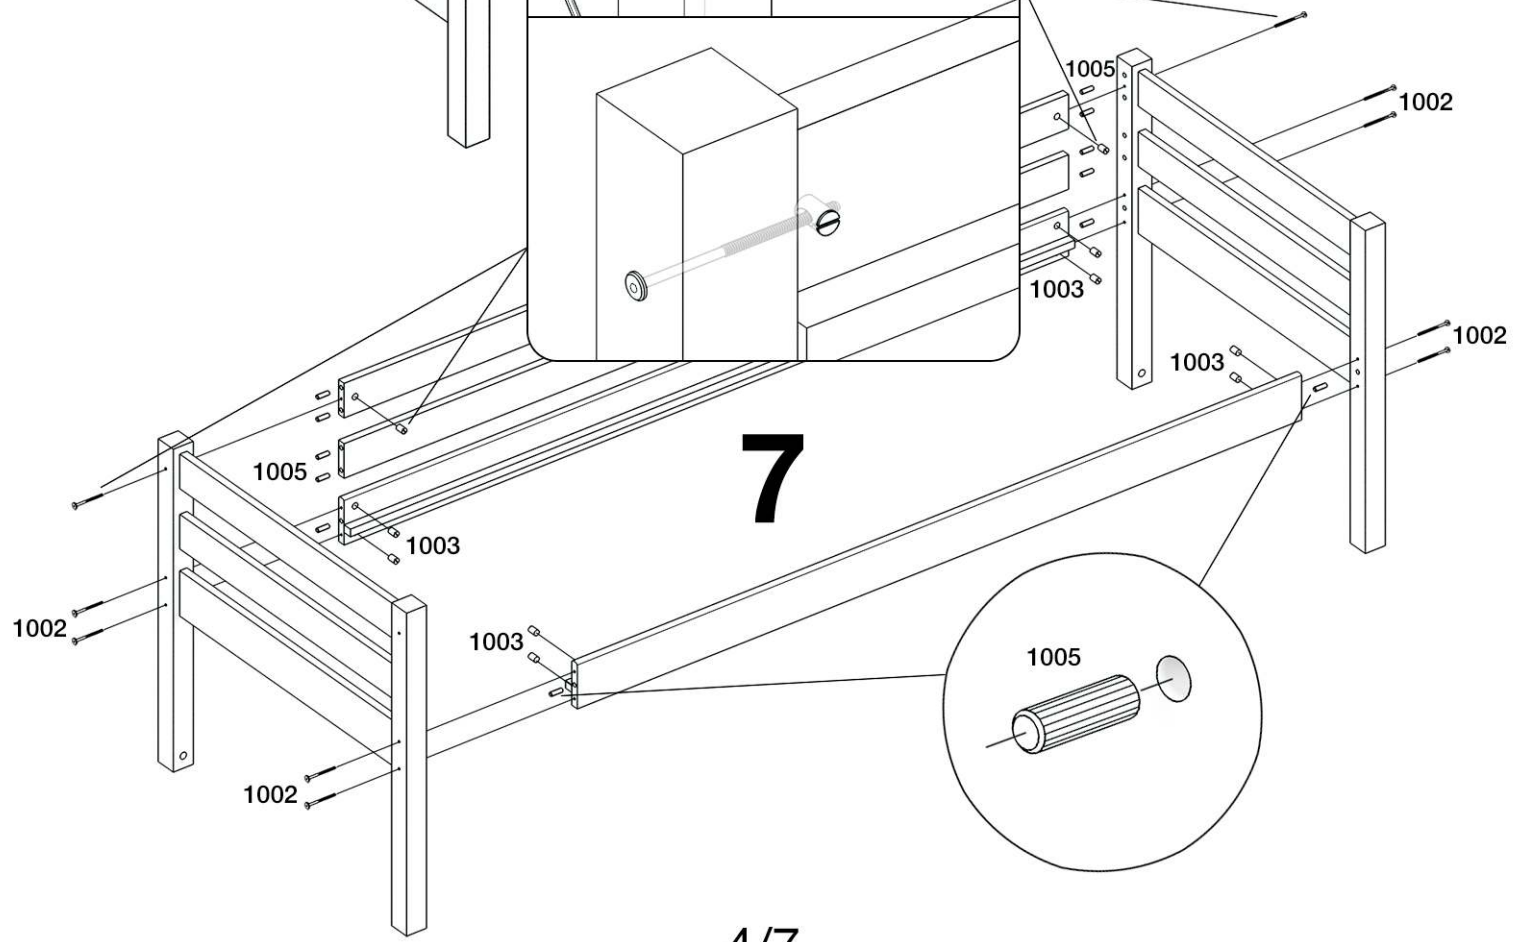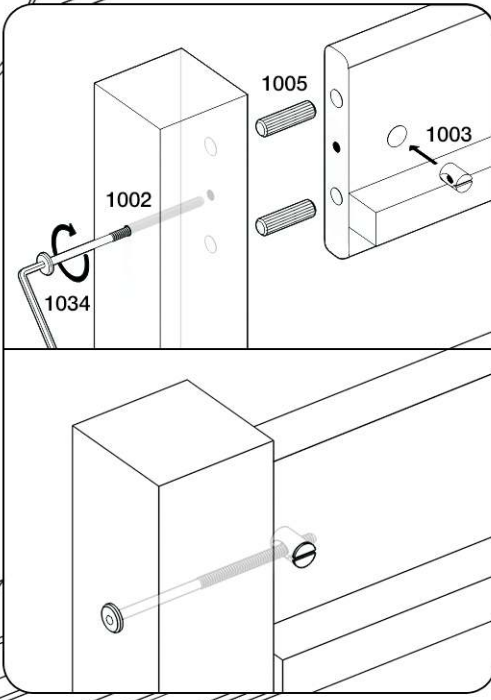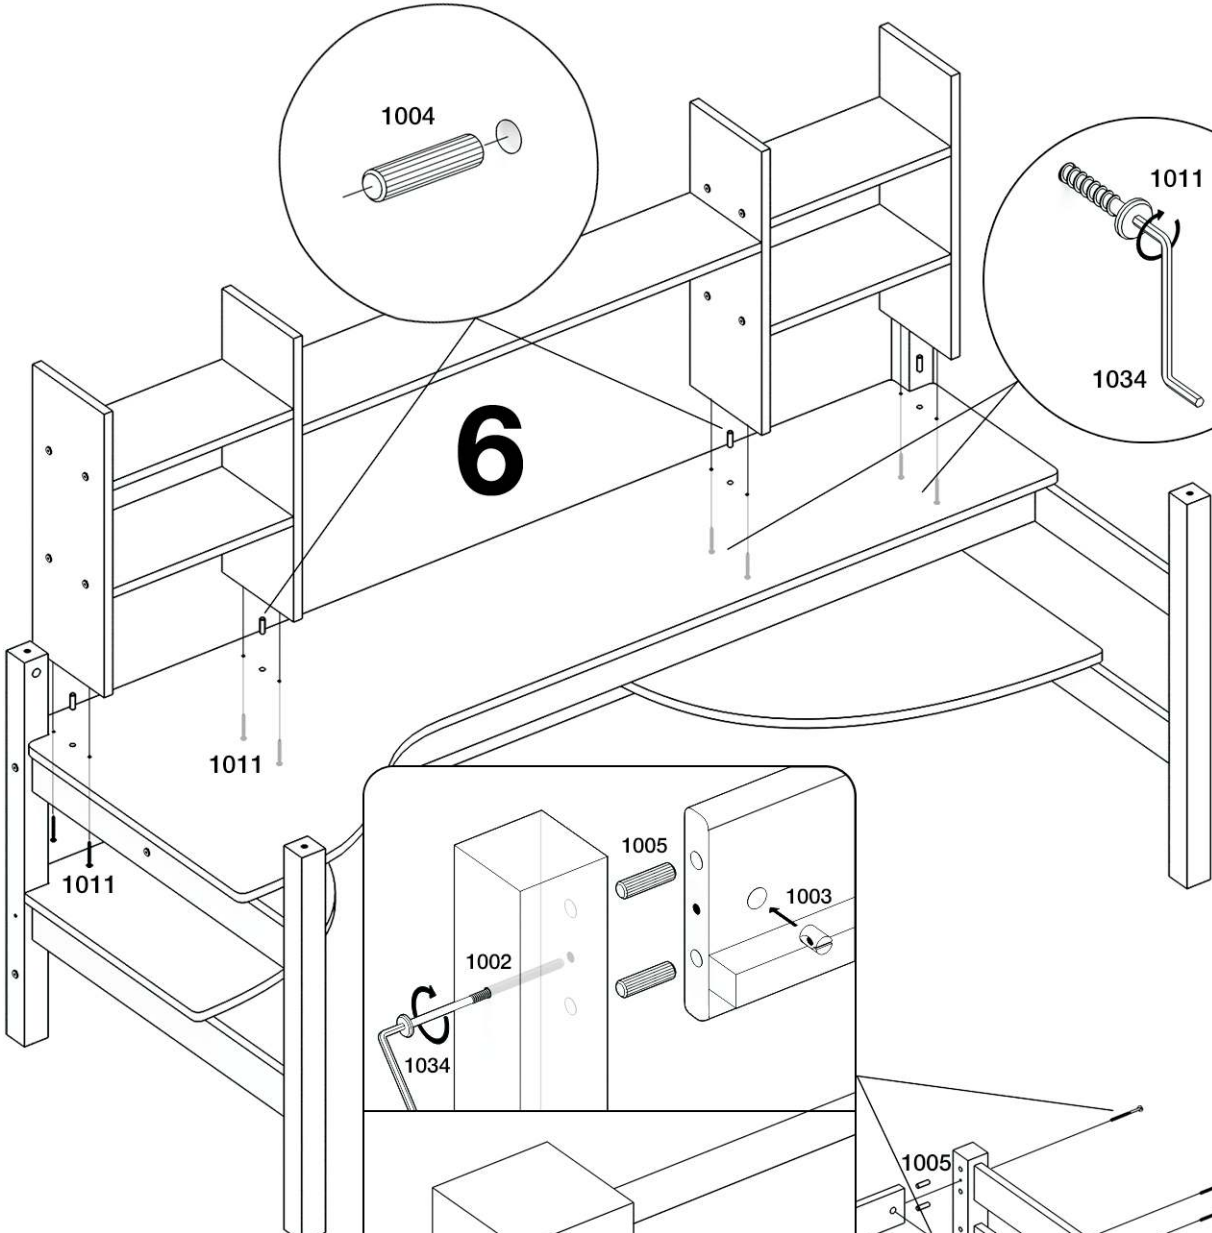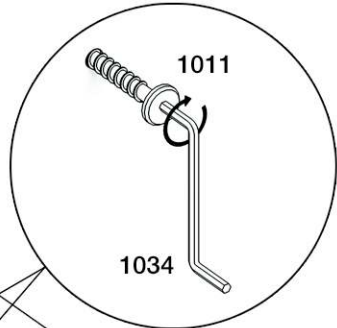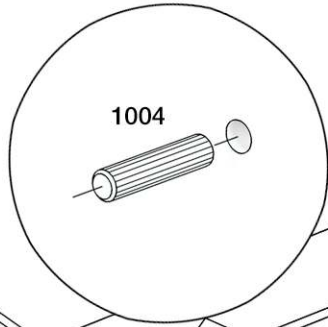


8

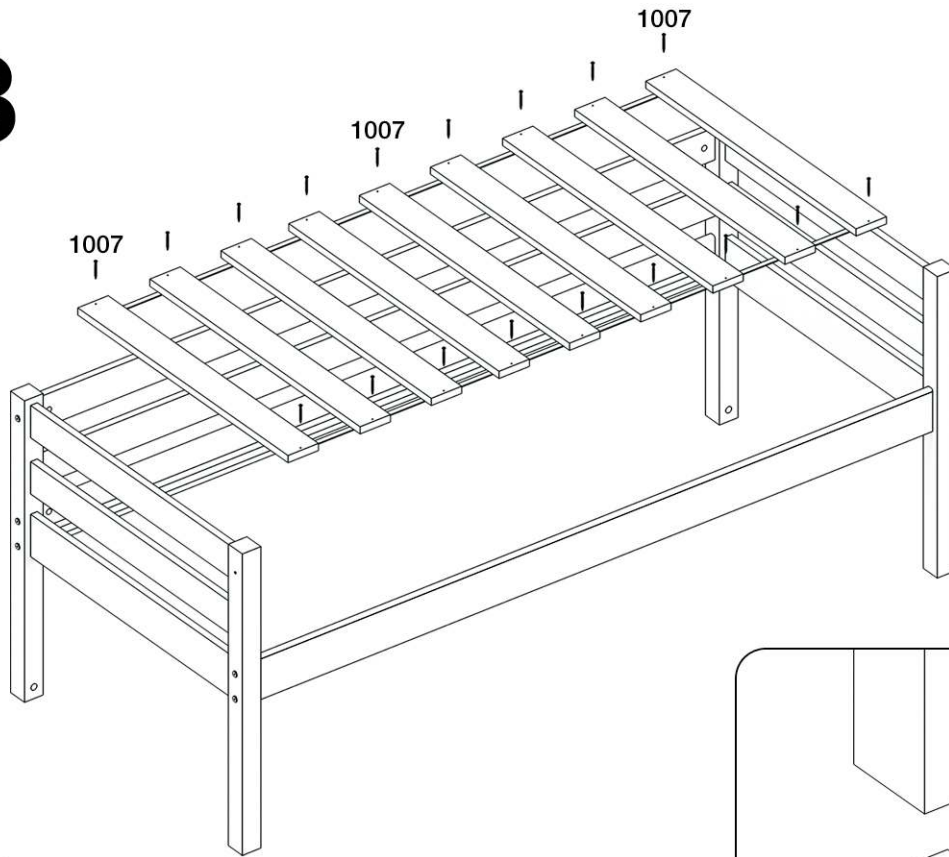


9

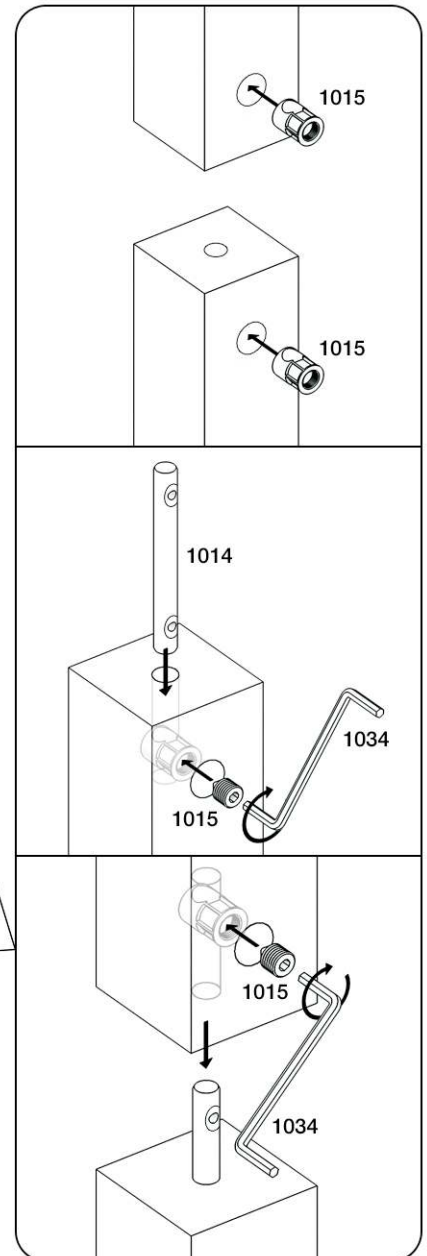
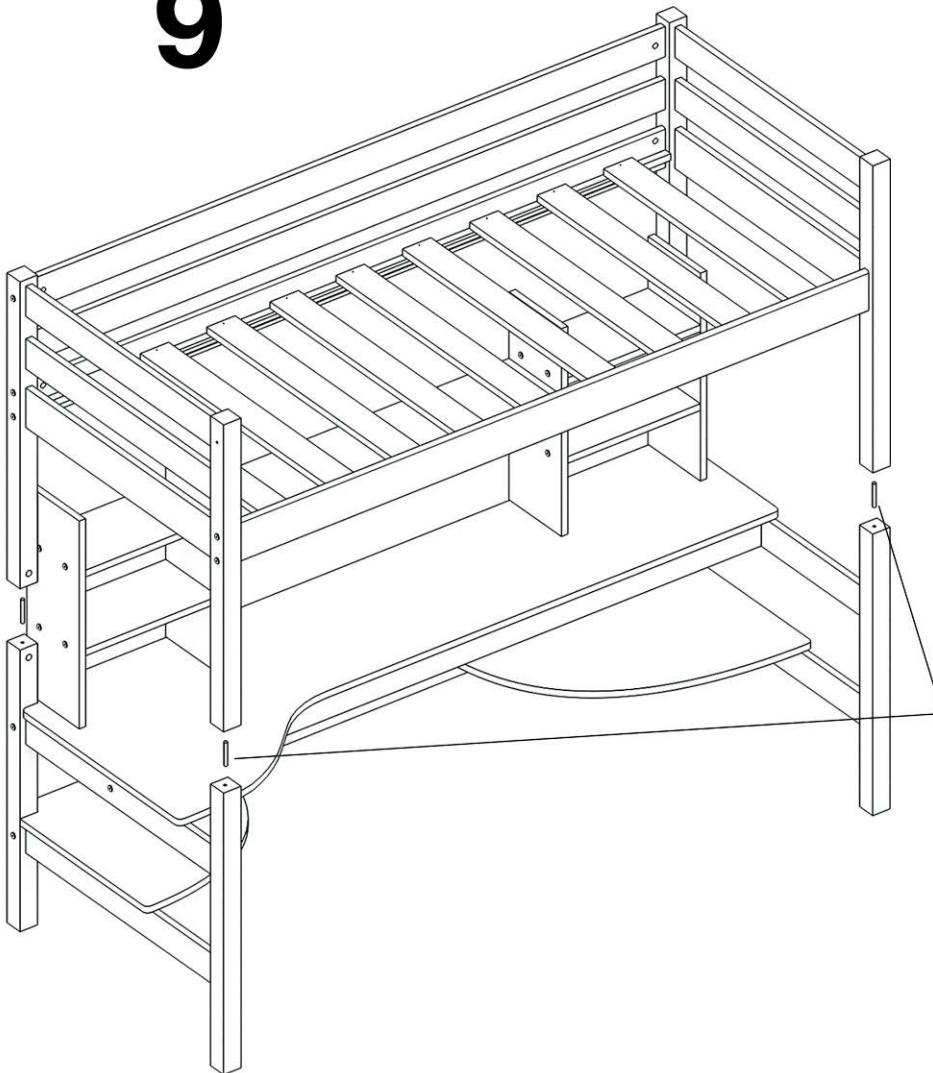


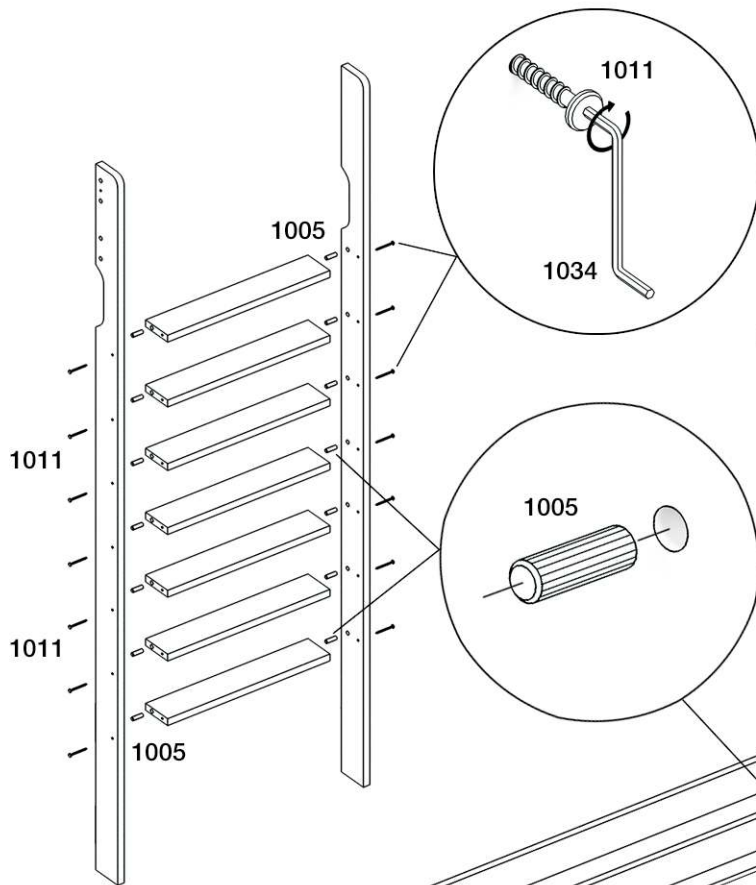

**10**

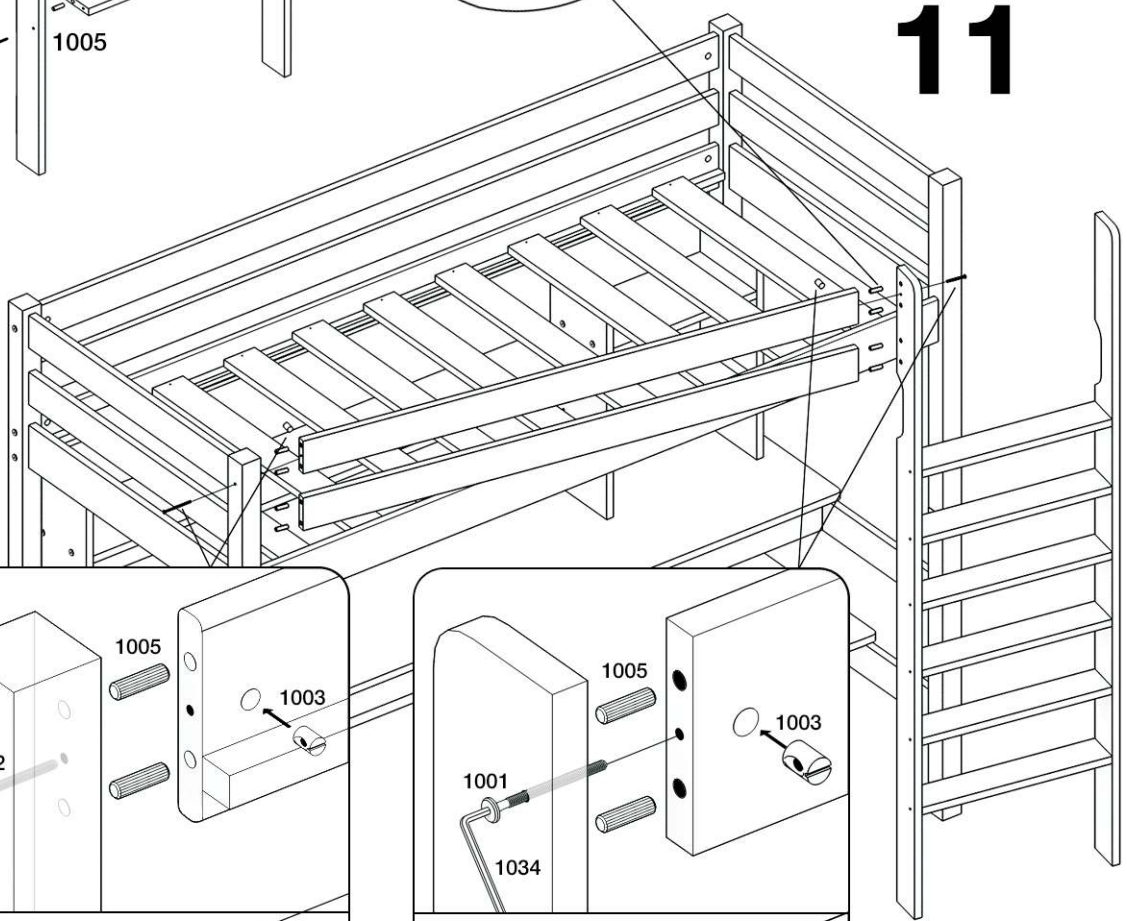

**11**

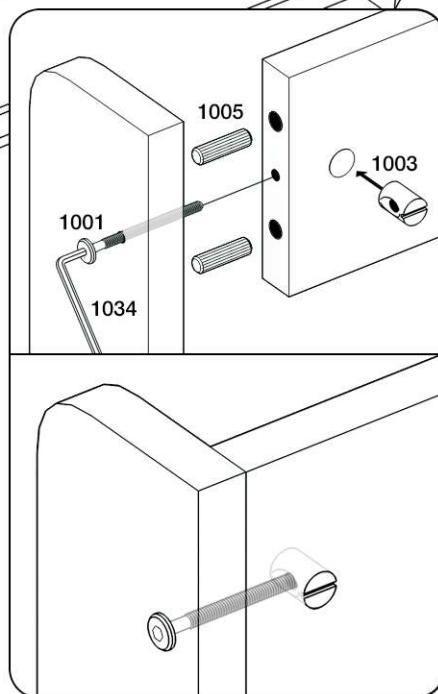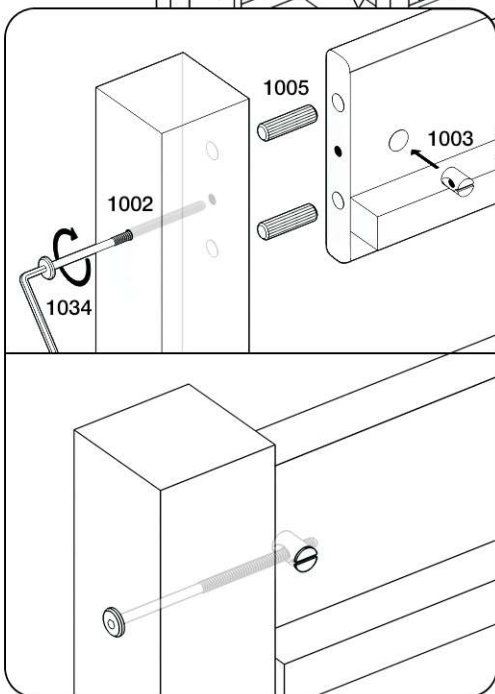

# 12

