


Надстройка буфета 20 Пенни

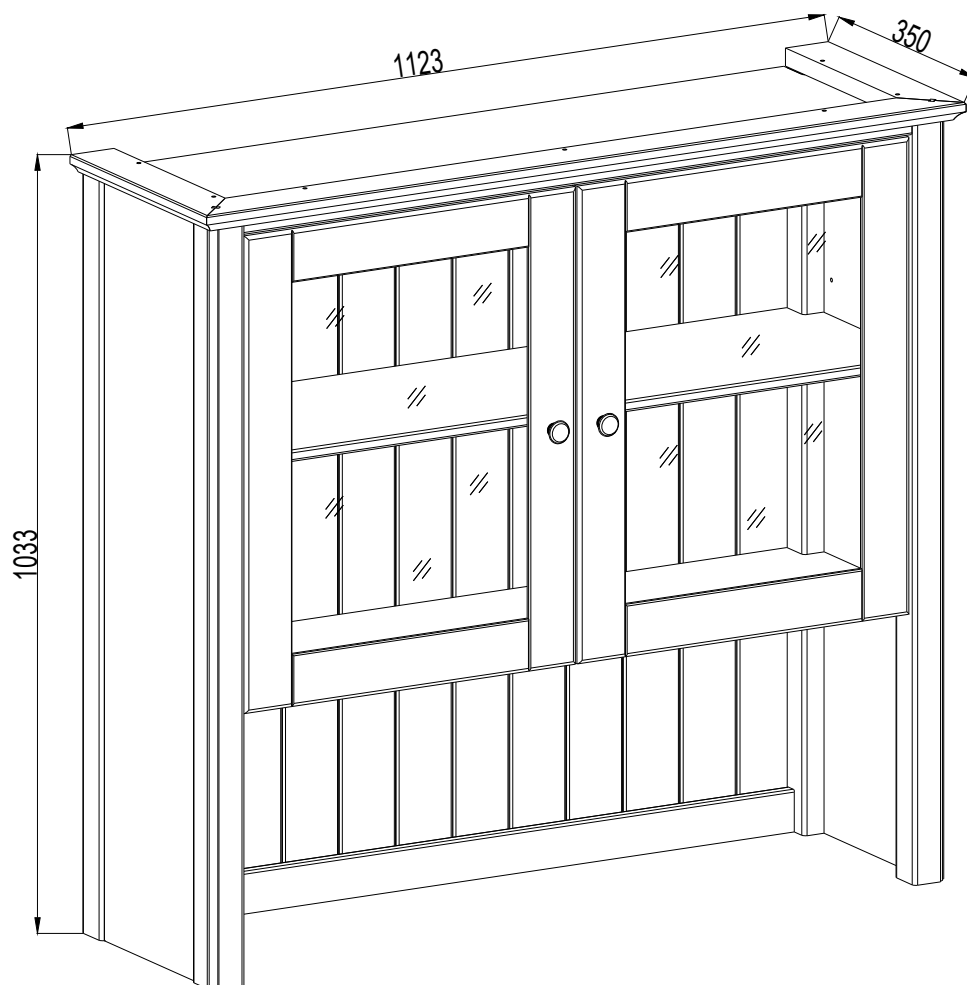

Прежде чем приступить к сборке, ознакомьтесь с памяткой на обороте



D Montageanleitung

FR Notice de montage

NL Handleiding voor de montage

CZ Montážní návod

HU Szerelési útmutató

TR Montaj talimatı

GB Assembly instructions


IT Istruzioni di montaggio

PL Instrukcja montażu



SK Návod na montáž

RO Instrucțiuni de montaj

RU Инструкция по монтажу

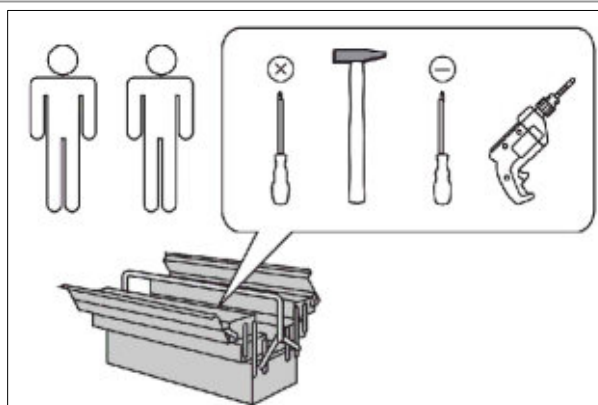


ERC

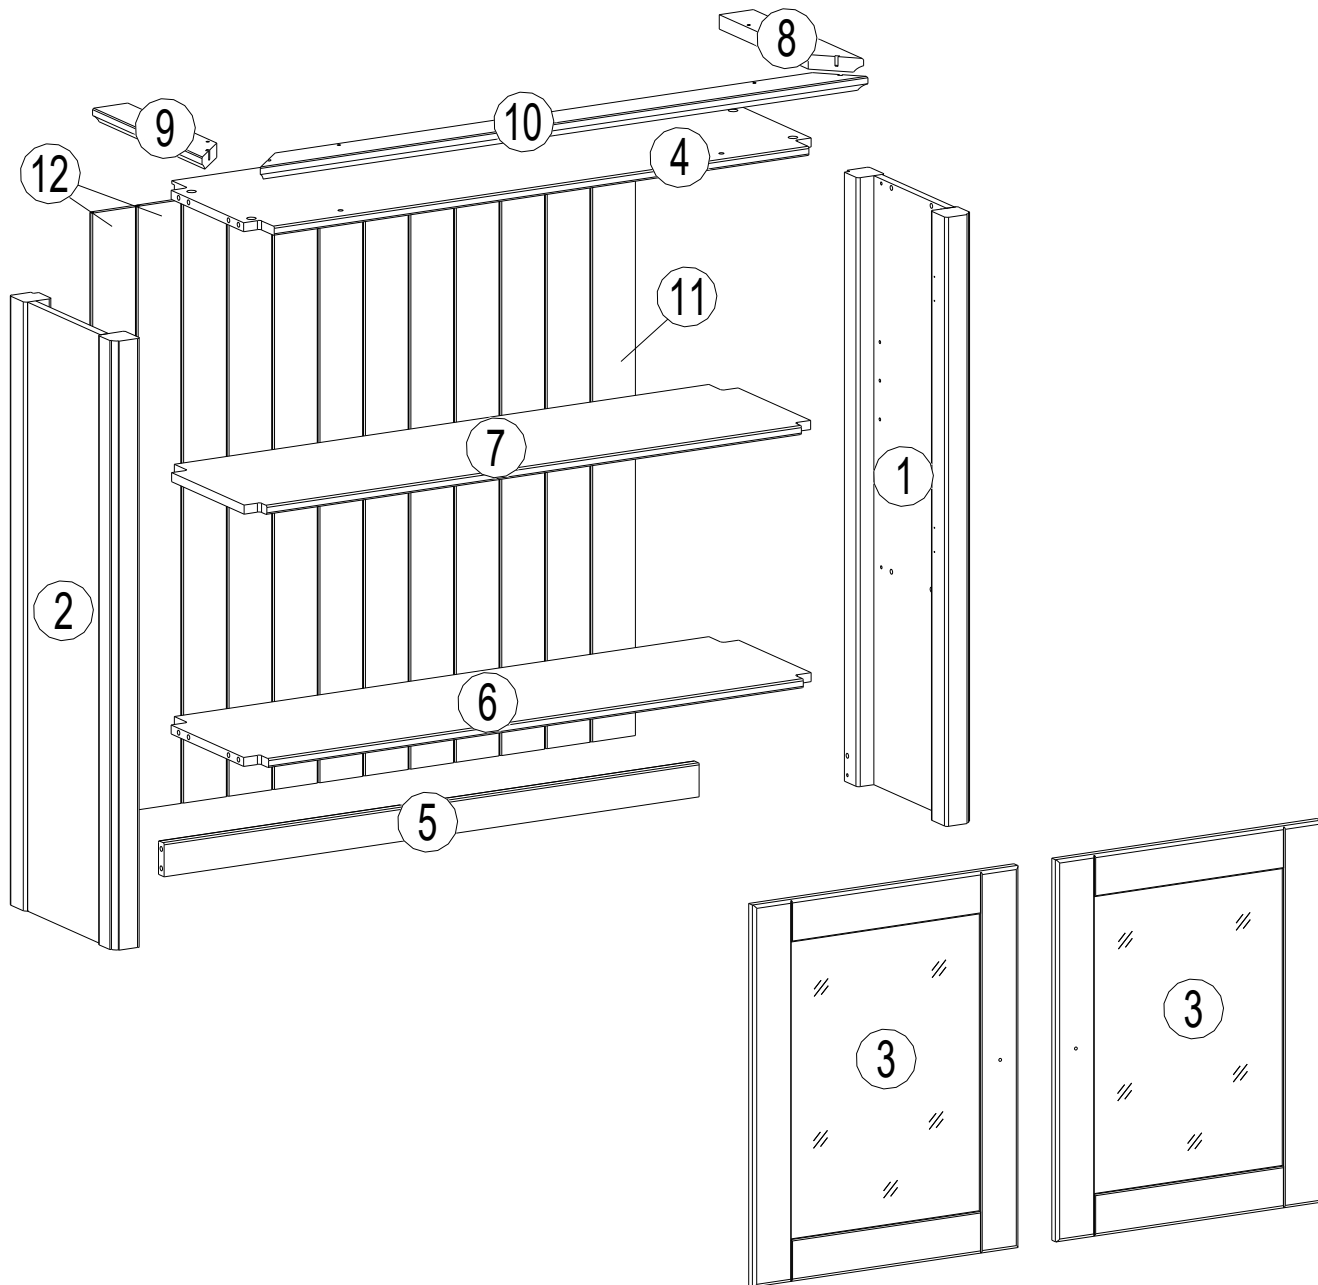




№	Size/MaB (mm)	Qty	✓	№	Size/MaB (mm)	Qty	✓
1	1009x333x50	1		7	1047x296x15	1	
2	1009x333x50	1		8	350x65x24	1	
3	633x490x18	2		9	350x65x24	1	
4	1049x328x15	1		10	1123x65x24	1	
5	989x56x18	1		11	1000x81x8	1	
6	1049x302x15	1		12	1000x89x8	11	

A 030093 x10	B 030110 Ø15x11 x10	C 030052 M4x22 x2	D 190002 x4	E 220018 x2	F 220043 x1
G 230010 Ø8x32 x10	H 180017 x2	I 250012 3,5x15 x24	J 250024 3,5x35 x7	K 210040 / 210020 x2	L 180098 x4
M 180096 x4	N1 090004 Ø8x40 x1	N2 180080 x1	N3 250012 3,5x15 x1	N4 250044 4x40 x1	



1 G 230010
Ø8x32
x10

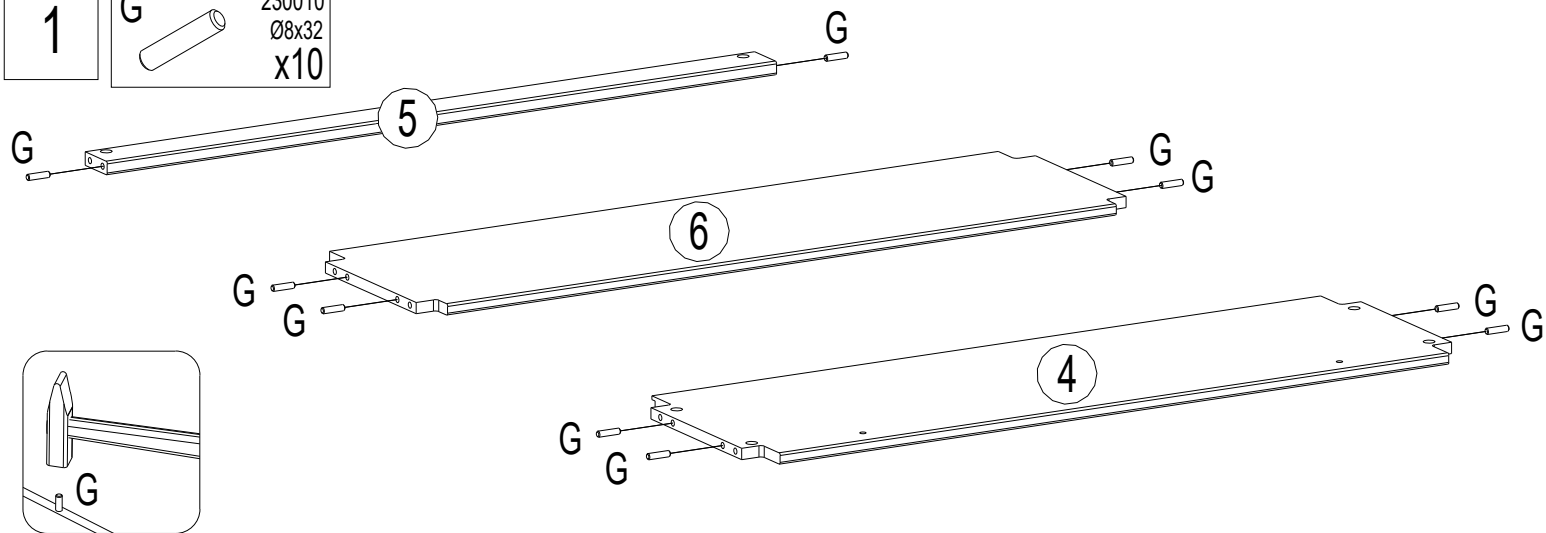


2 A 030093 x10 I 250012 3,5x15 x8 L 180098 x4

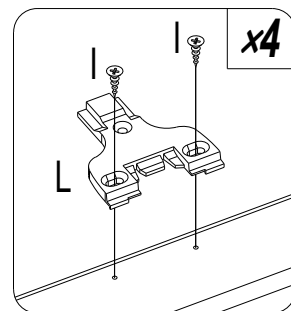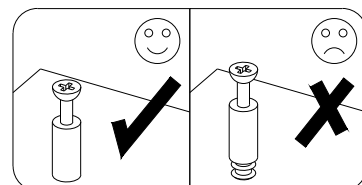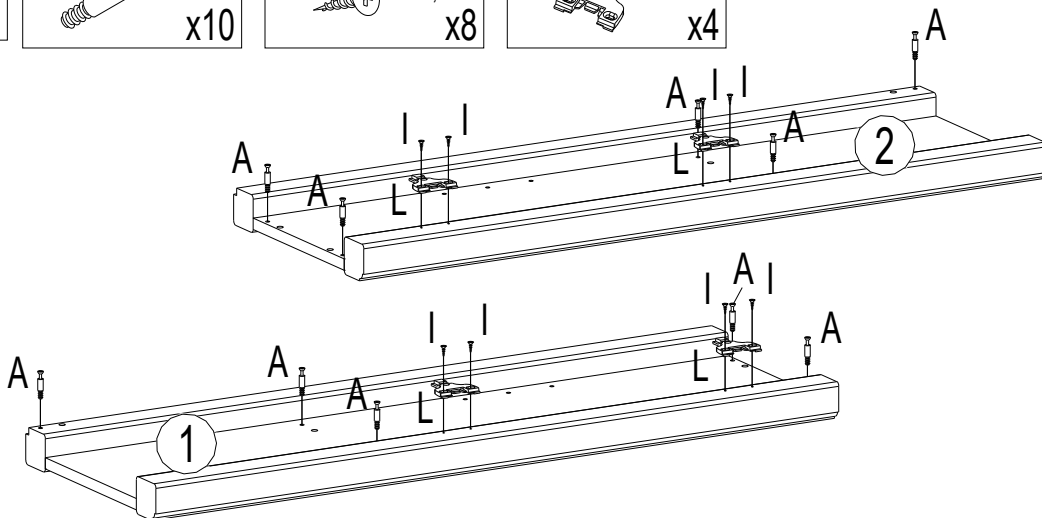








3 B 030110 Ø15x11 x10

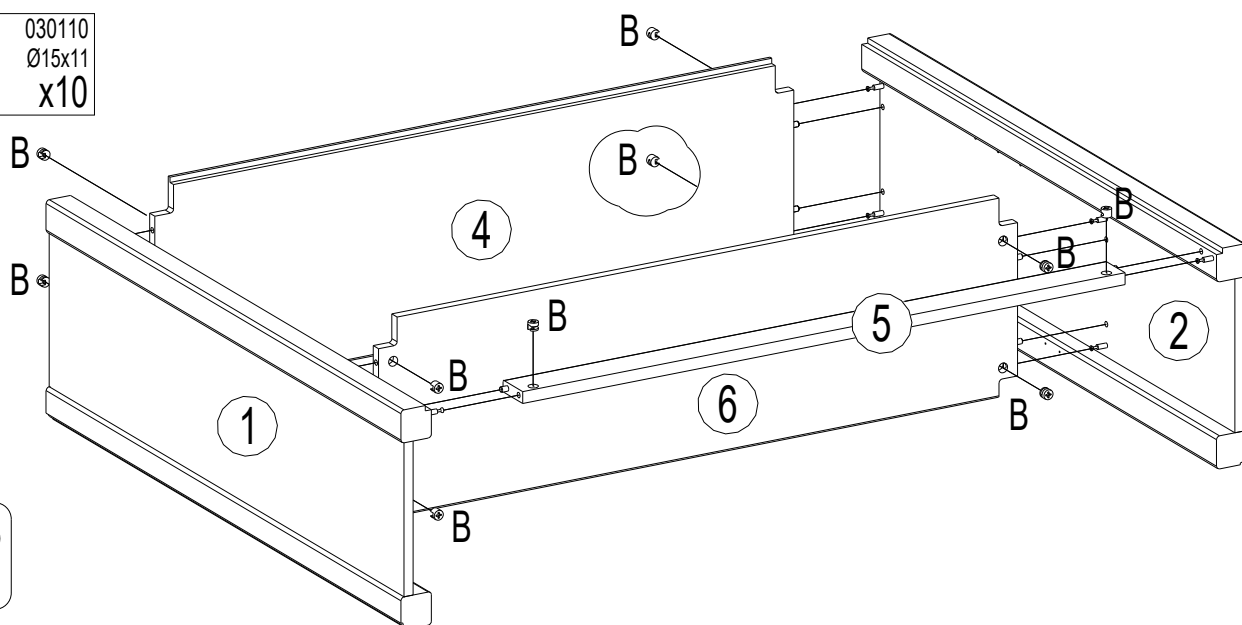





4 E 220018 x2

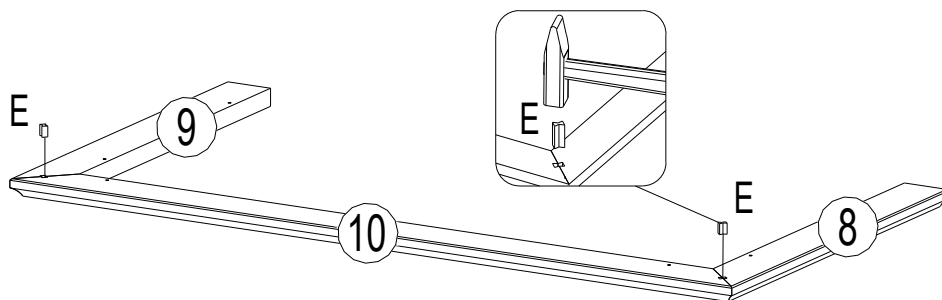

5

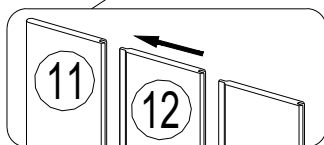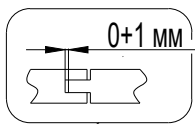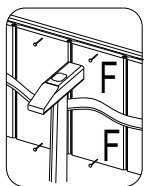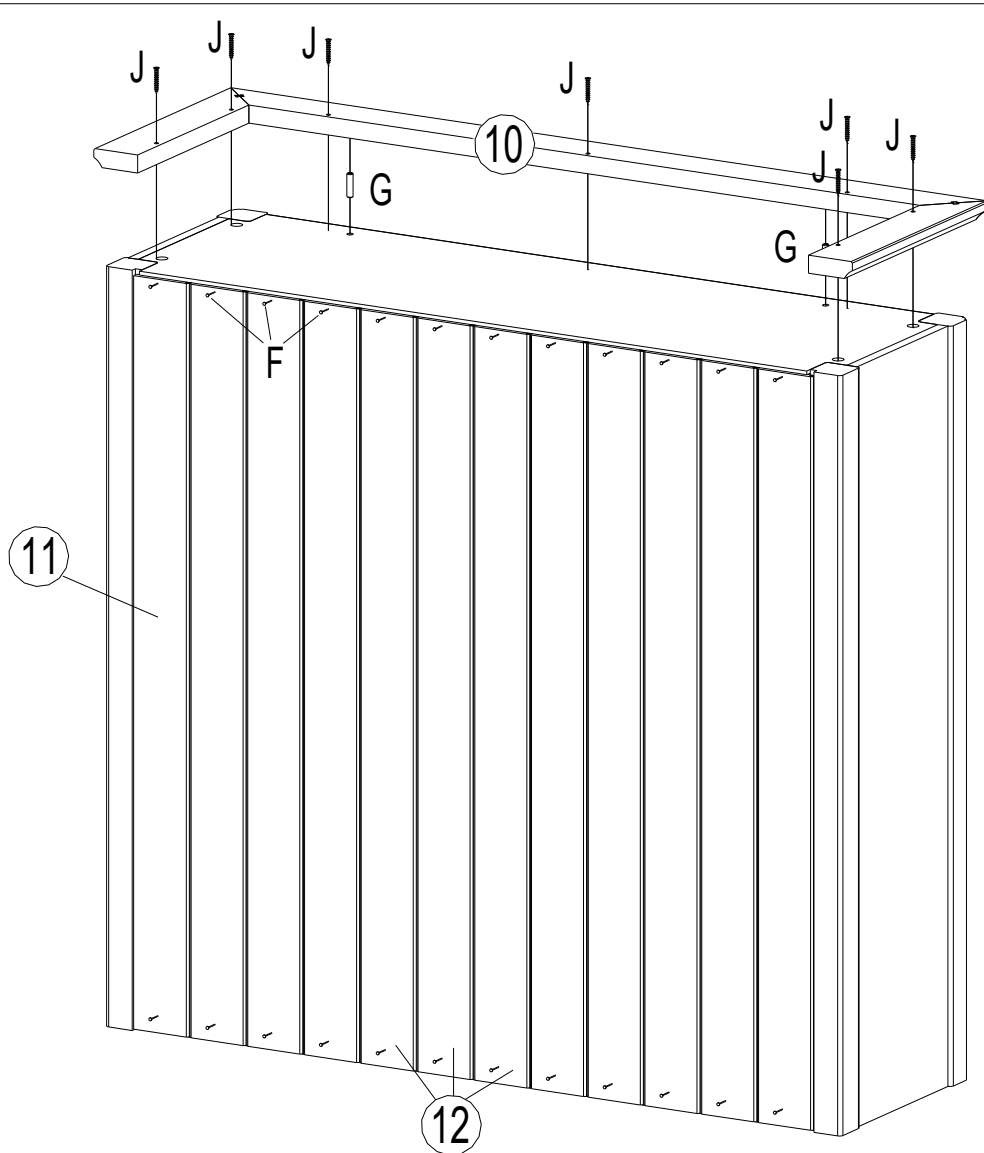

6

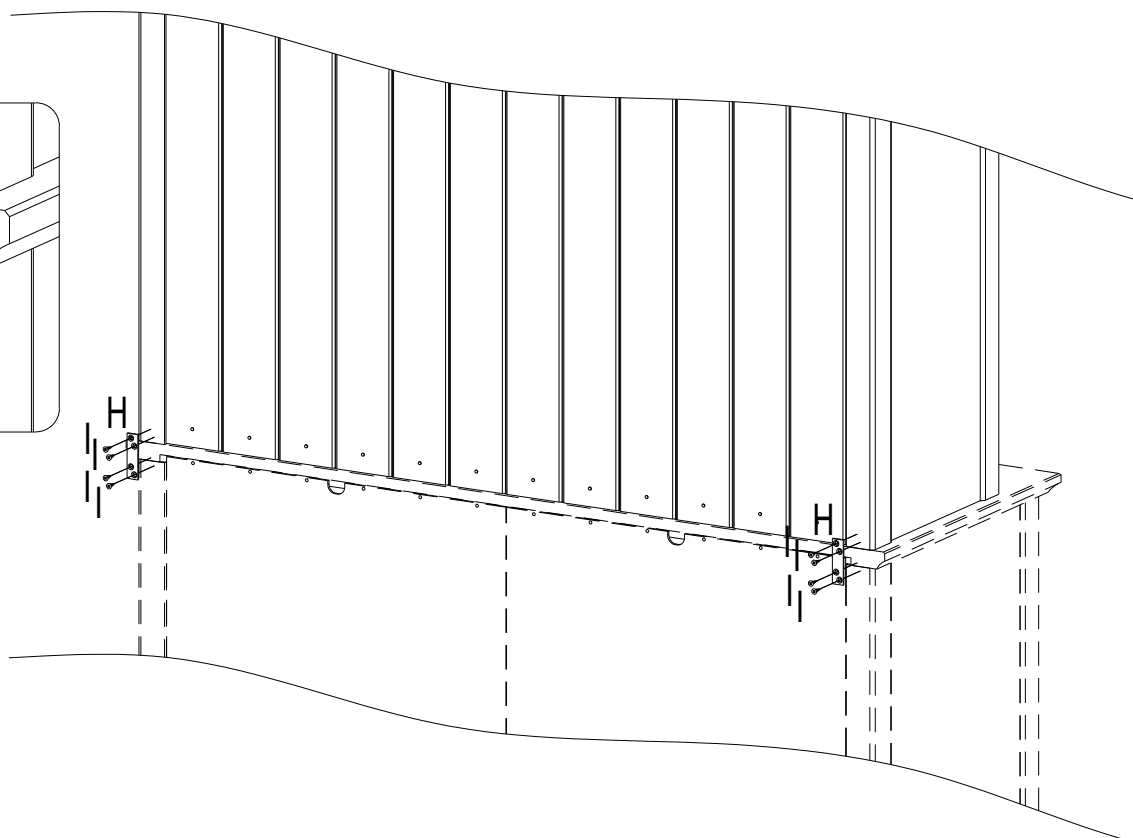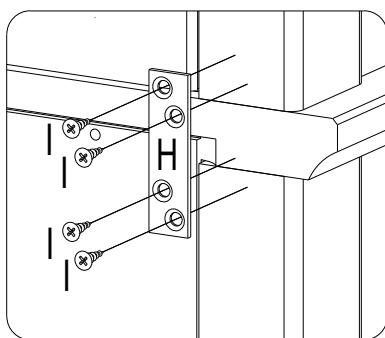

7

C

030052
M4x22
x2



I

250012
3,5x15
x8

K

210040 / 210020
x2

M

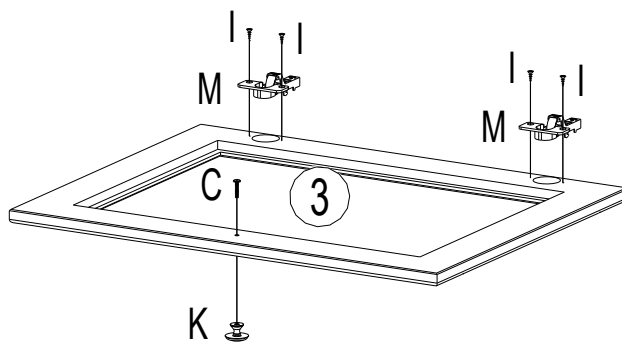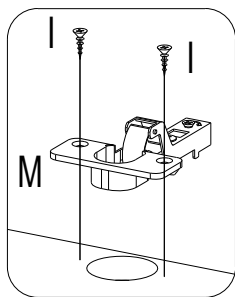180096
x4

x2

8

D

190002
x4

N1

090004
Ø8x40
x1

N2

180080
x1

N3

250012
3,5x15
x1

N4

250044
4x40
x1