

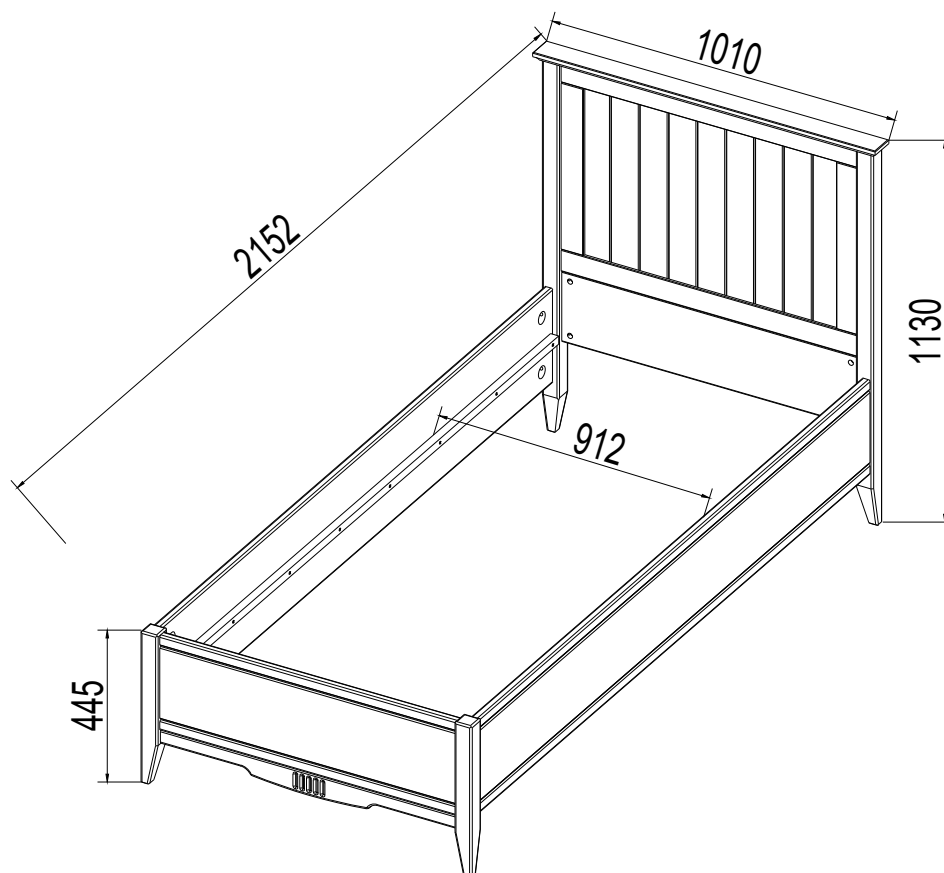
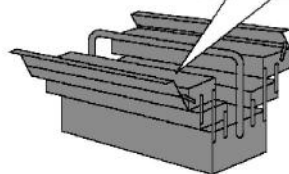













Кровать 90x200 Пенни

Прежде чем приступить к сборке, ознакомьтесь с памяткой на обороте

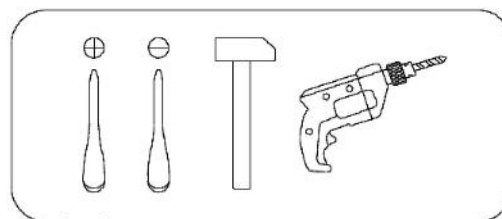


- | | | | |
|-----------|------------------------------------|-----------|--------------------------------|
| D | Montageanleitung | GB | Assembly instructions |
| FR | Notice de montage | IT | Istruzioni di montaggio |
| NL | Handlieding voor de montage | PL | Instrukcja montażu |
| CZ | Montážní návod | SK | Návod na montáž |
| HU | Szerelési útmutató | RO | Instrukțiuni de montaj |
| TR | Montaj talimatı | RU | Инструкция по монтажу |

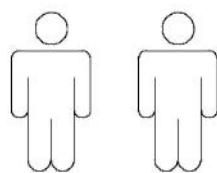


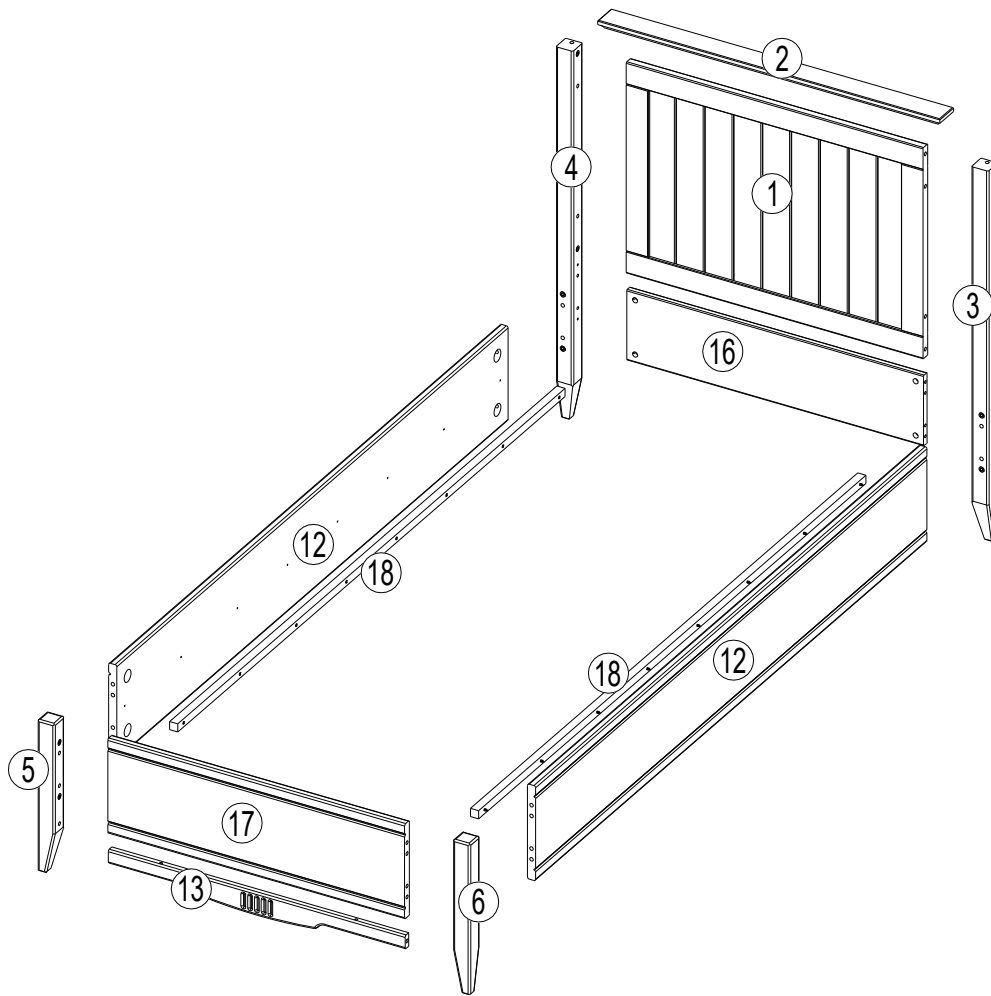


No	Size/MaB (mm)	Qty	✓	No	Size/MaB (mm)	Qty	✓
1	876x623x24	1		12	2000x280x24	2	
2	1010x70x24	1		13	876x68x18	1	
3	1106x50x50	1		16	876x208x18	1	
4	1106x50x50	1		17	876x280x24	1	
5	445x50x50	1		18	1980x35x24	2	
6	445x50x50	1					


- 1**
- H** 250048 4x55 x16
- I** 030105 Ø35x15 x8
- F** 230021 10x50 x8

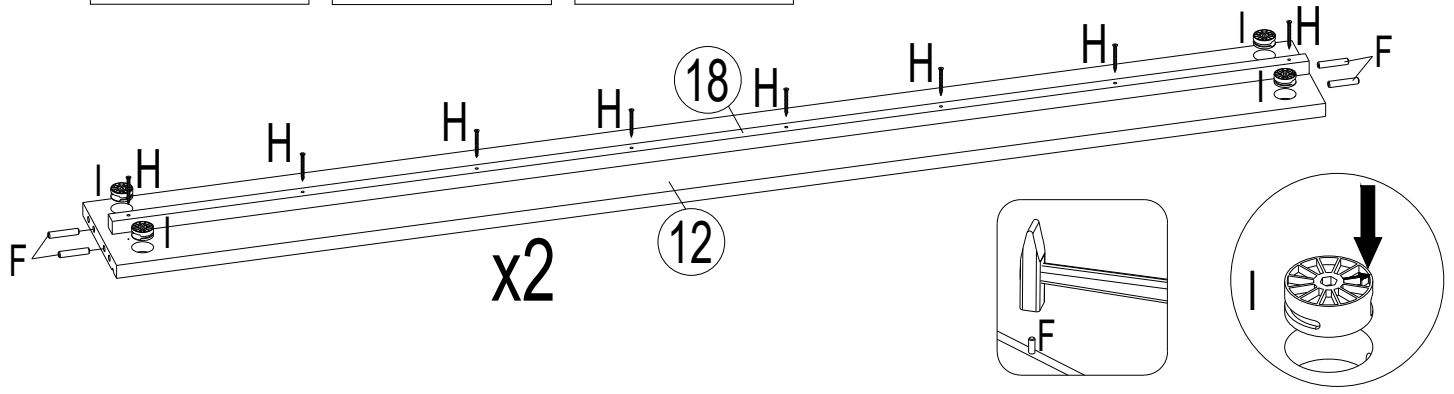


- 2**
- A** 030002 Ø8x48 x16
- B** 030093 x4
- E** 070017 30x30 x4

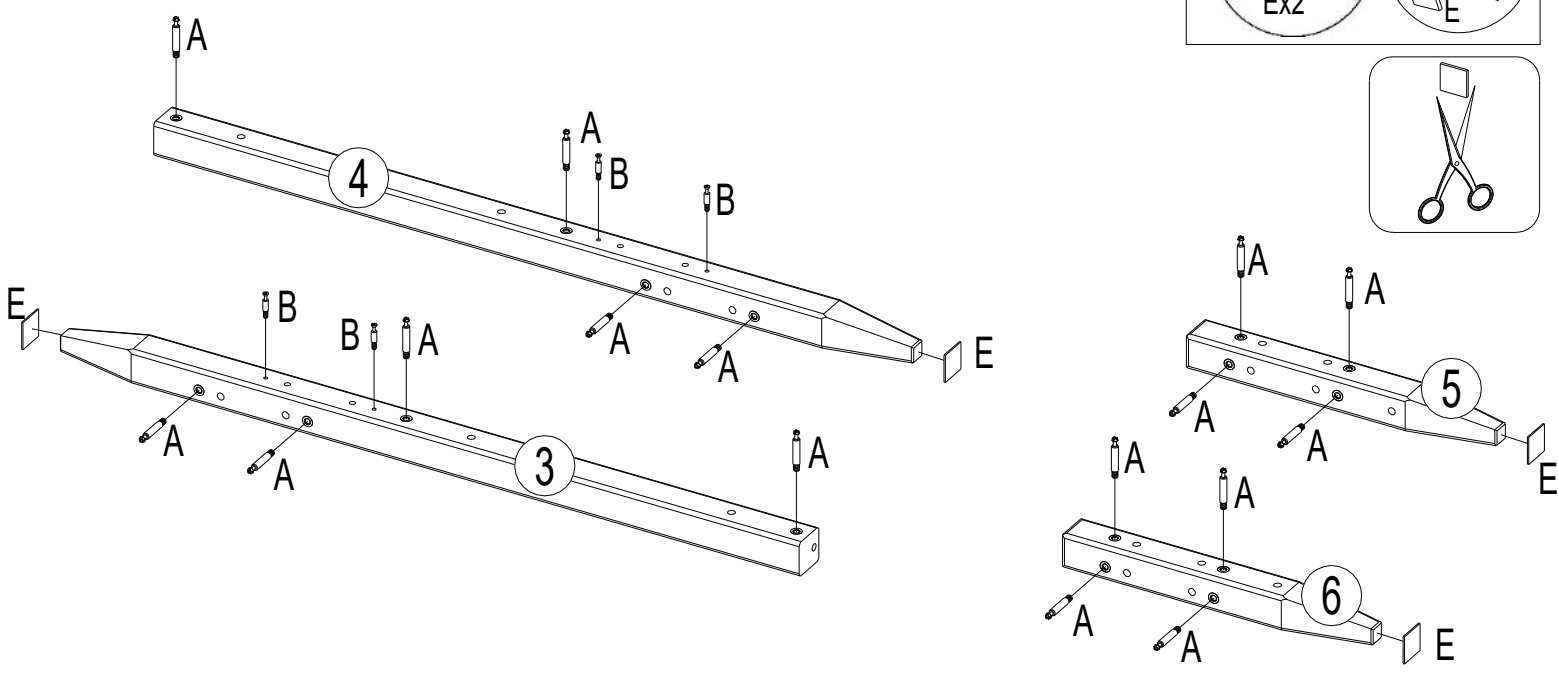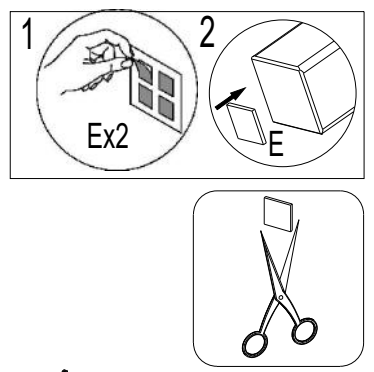


- 3**
- A** 030002 Ø8x48 x2
- B** 030093 x2
- F** 230021 10x50 x6
- G** 230010 8x32 x4
- I** 030105 Ø35x15 x4

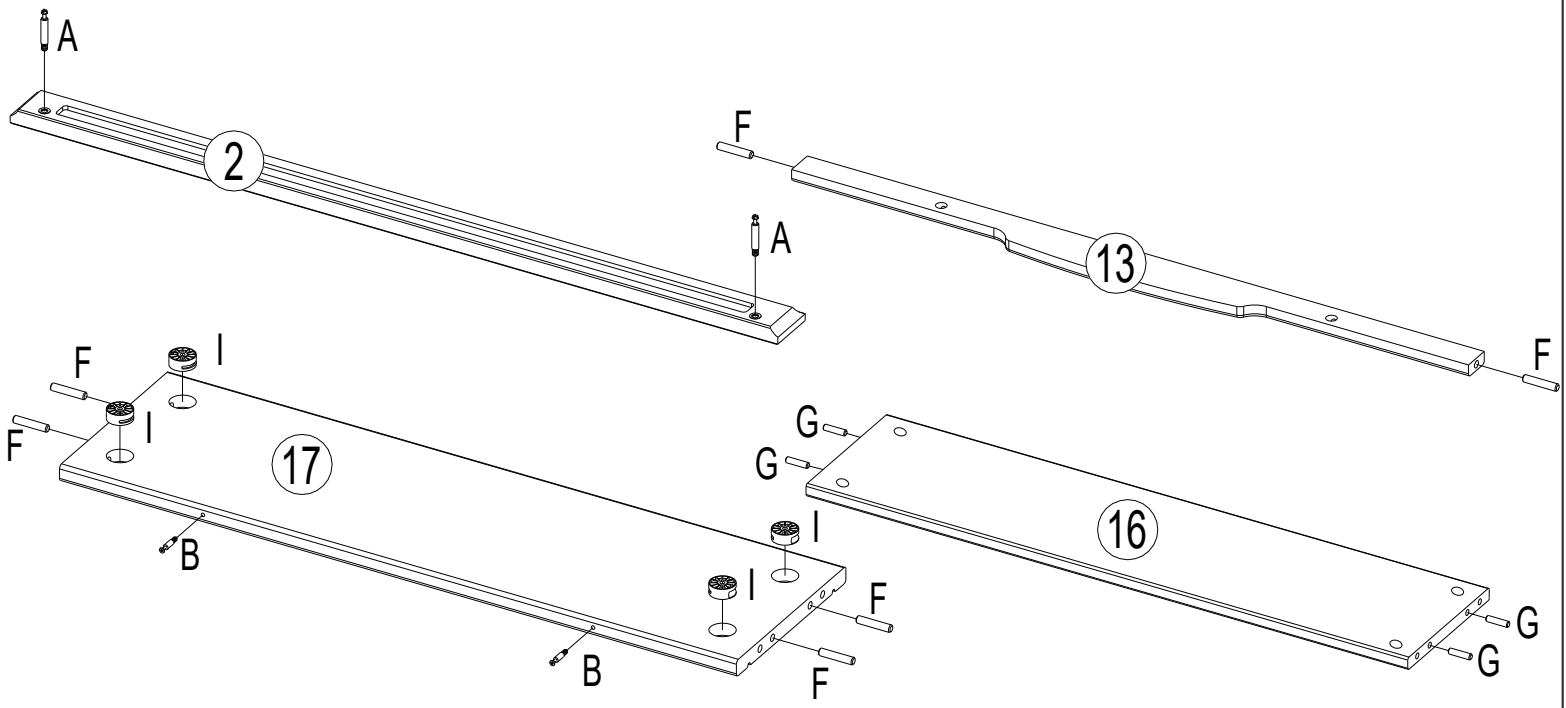


- 4** **F** 230021 10x50 x4
- I** 030105 Ø35x15 x4

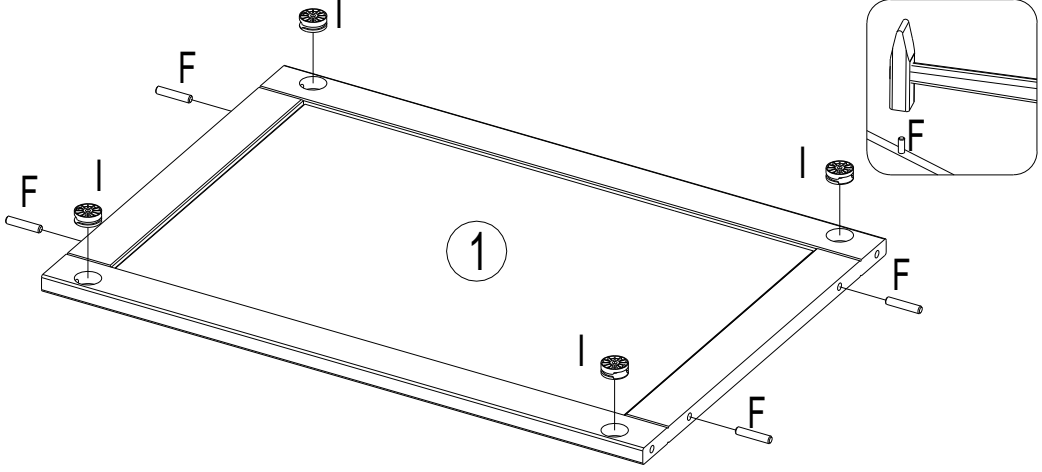

- 5** **J** 030110 x6


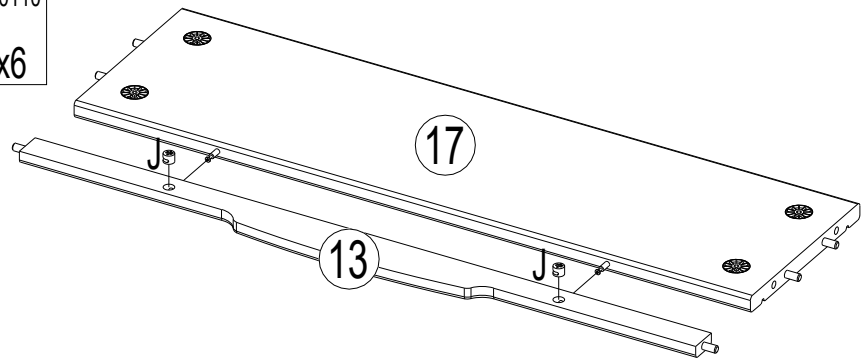


- 6** **J** 030110 x4
- C** 100004 x4
- D** 110025 SW 6


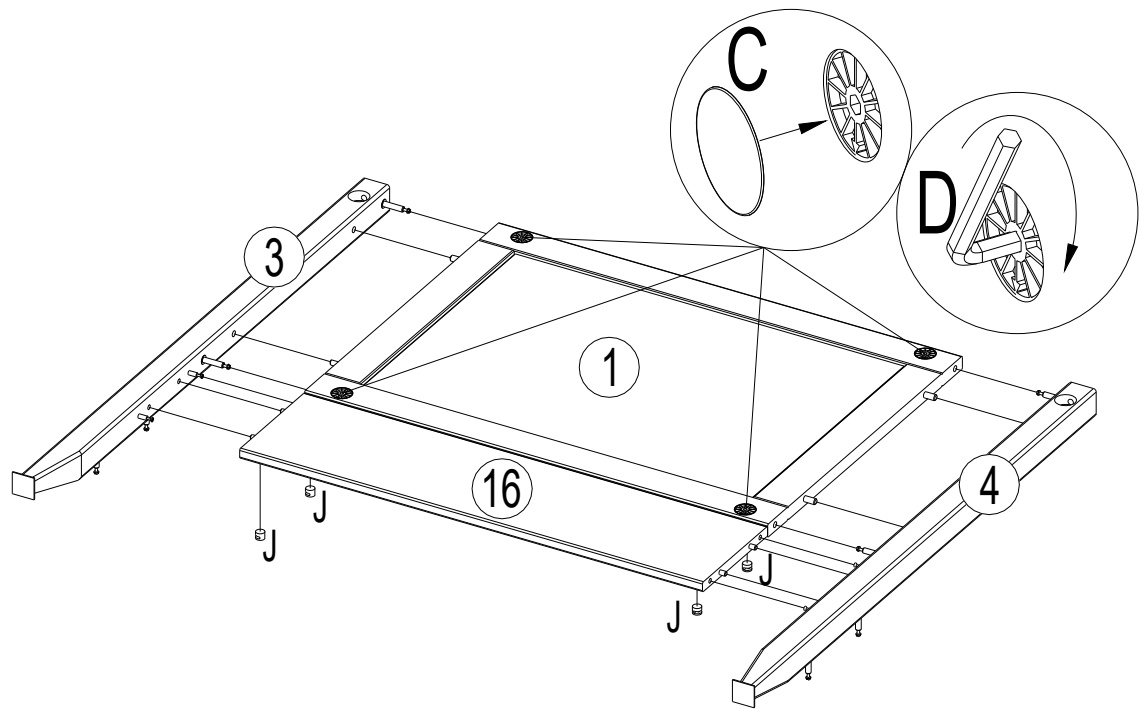


- 7 I 030105 Ø35x15 x2
- D 110025 SW 6 x1

- C 100004 x2

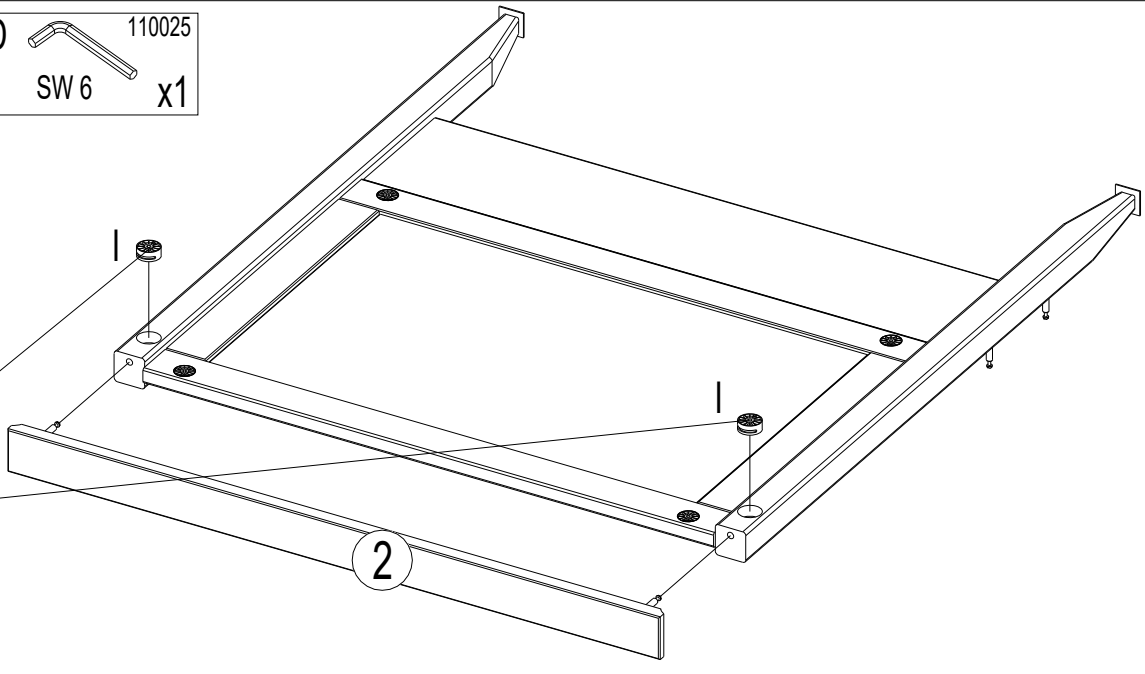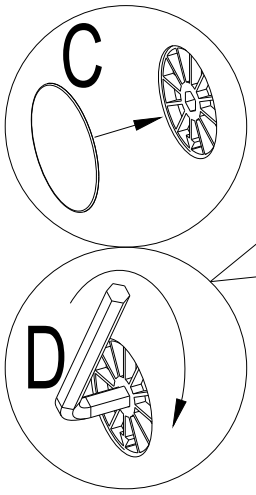

- 8 C 100004 x4
- D 110025 SW 6 x1

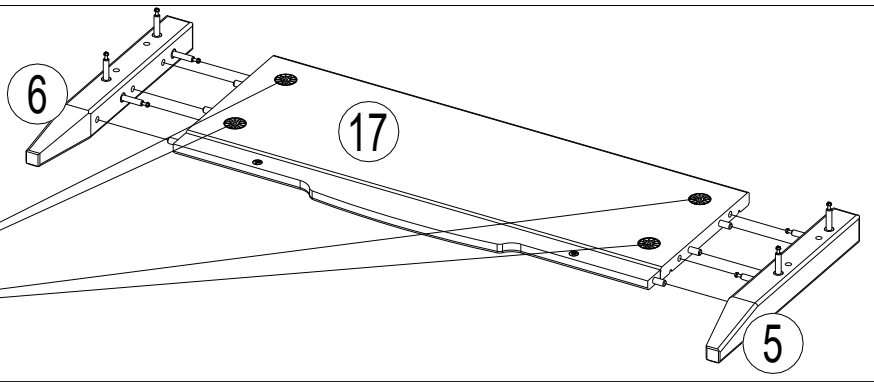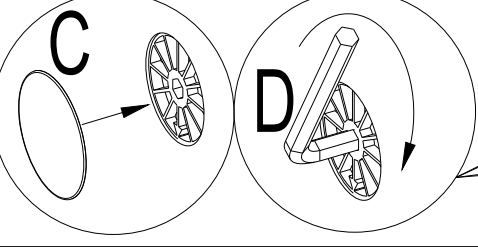

- 9 C 100004 x8
- D 110025 SW 6 x1

